

# Using the Configuration Menu (continued)

This page displays the current information for the DWL-700AP. It will display the **Ethernet** and **Wireless** information.

## Ethernet:

- MAC Address
- IP Address
- Subnet Mask
- Gateway
- DHCP Server

## Wireless:

- MAC Address
- SSID
- Encryption
- Channel
- AP mode

## Status > Device Info



Fig. 5.12

The DWL-700AP keeps a running log of events and activities occurring on the Access Point. If the device is rebooted, the logs are automatically cleared. You may save the log files under **Log Settings**.

To enable or disable logging for the Access Point, click on **Log Settings**. To monitor the wireless stations, select **Enable** and the log file will be sent to the associated computer.

## Status > Log

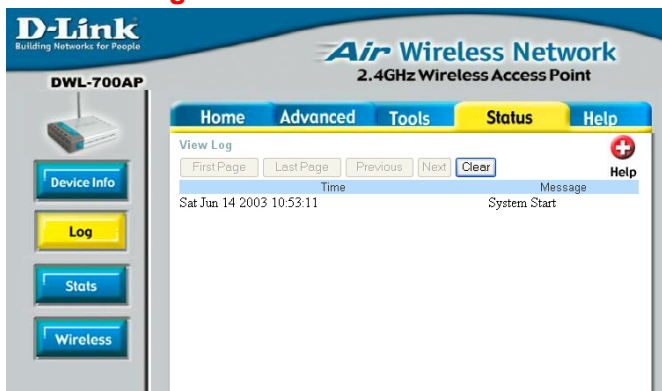


Fig. 5.13

- First Page** - displays the first page of the Log
- Last Page** - displays the last page of the Log
- Previous** - moves back one log page
- Next** - moves forward one log page
- Clear** - clears the log completely
- Log Settings** – Brings up the page to configure the logs

# Using the Configuration Menu (continued)



**Syslog Server:** Using third party syslog software, the Syslog Server function will download the DWL-700AP's log automatically to an IP address specified sever.

## Status > Stats

Displays the network traffic statistics for both received and transmitted communications through the Ethernet port and wireless connections associated with the Access Point.

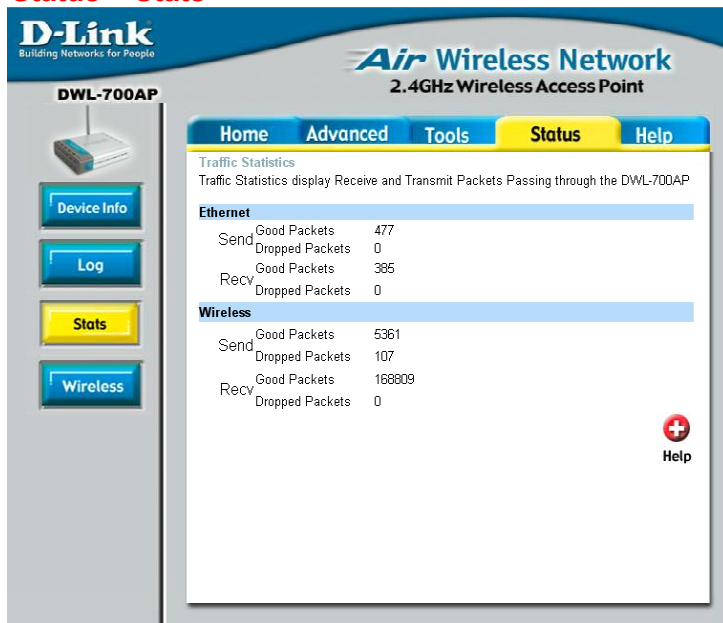


Fig. 5.14

# Using the Configuration Menu (continued)

## Status > Wireless

Displays the list of computers that are connected to the DWL-700AP wirelessly.



Fig. 5.15