

9.user operation instruction (Draft)

operation instructions for this system are contained in the motor cycle's user manual,from which the portions related to the system are transcribed below:

keyless entry system

By use of the remote transmitter, you can lock or unlock all doors or unlock only from a distance within about 1.0m(3.2ft) of the vehicle. The operable distance varies depending on the environmental conditions.

It may be shorter if there is a power plant, a broadcasting station or a television tower in the neighborhood.

-Locking the doors

Press the "Lock" button to lock all doors .The turn signal light will flash once.

When leaving the vehicle, pull the door handle to make sure that the doors have been locked.

-Unlocking the doors

Press the "Unlock" button to unlock all doors. The turn signal lights will flash twice.

NOTE

-If neither of the doors and the rear gate is opened within 30 seconds after pressing the "Unlock" button of the transmitter, all the doors and the rear gate will be automatically locked again.

-The keyless entry system does not operate when the ignition key is inserted in the ignition switch.

When any of the doors or the rear gate is not fully closed, the lock function does not operate.

FCC Notice:

Changes or modifications not expressly approved by the manufacturer for compliance could void the User's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules and Regulation and the Standard RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.