

 
# Deluxe Remote Trainer

*Owners Manual*



Radio Systems Corporation  
10427 Electric Ave  
Knoxville, TN 37932


For questions or comments contact Petsafe at  
1-800-732-2677 or [www.petsafe.net](http://www.petsafe.net)

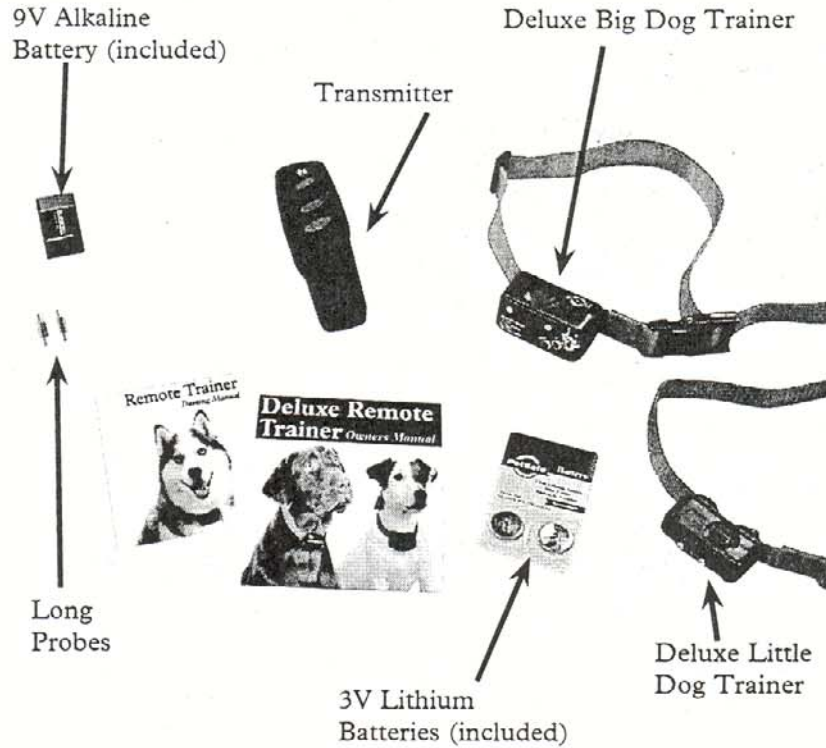


### Assemble Collar

To assemble the collar, first measure your pet's neck, mark the appropriate length, and cut off any excess material. Seal the edge of the cut by taking a match or lighter and melt the frayed edge.

 
**Note:** When cutting off the excess collar, be sure to leave enough slack for your dog's growth.

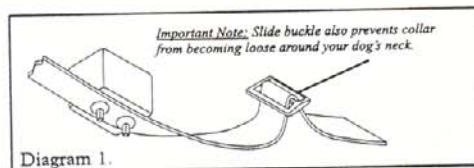

 **Step 1:** Thread slide buckle onto the collar first. See Diagram 1.

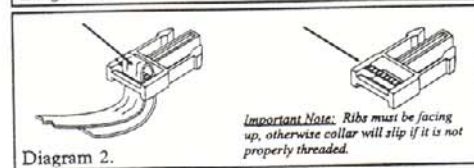

**Step 2:** Thread end of the collar up through the buckle. See Diagram 2.

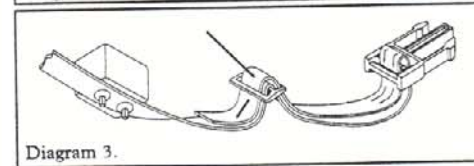

**Step 3:** Thread excess collar through the slide buckle to hold it in place. This will allow you to adjust your pet's collar as he grows. See Diagram 3.

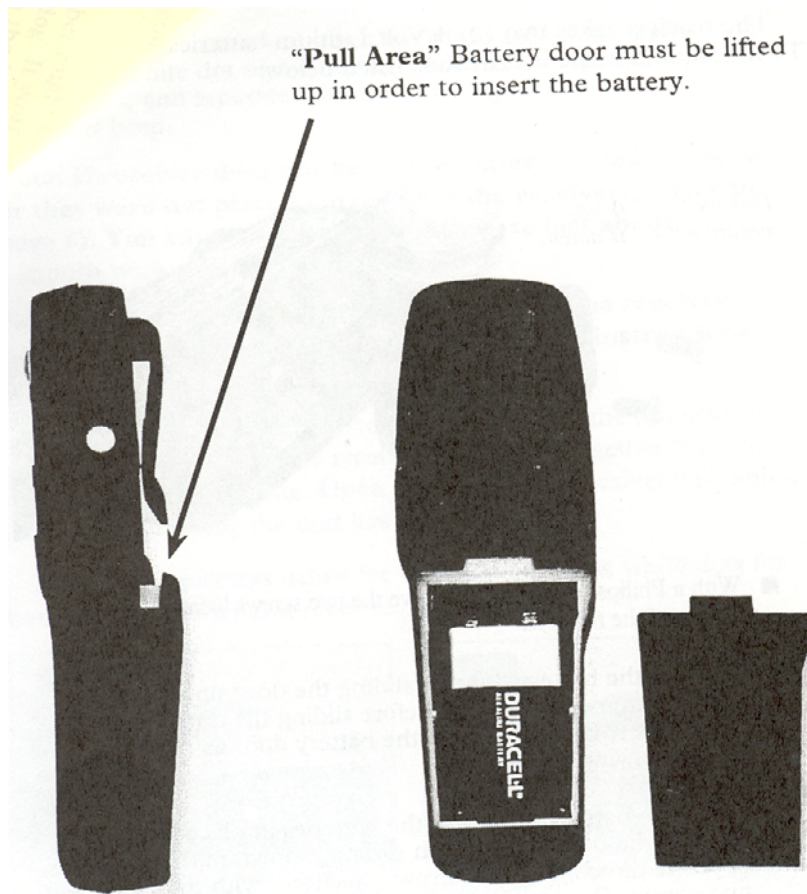


figure 1

When threading your collar through the clasp, loop it through the clasp exactly as illustrated. Pull on the excess collar. If it slides at all, it was not threaded correctly.

If your dog has long or thick hair, the longer probes might be more effective in delivering the stimulation to your dog. If your dog still has trouble feeling the stimulation even with the longer probes, the dog's hair, in the neck area, will need to be trimmed.


### Installing The Batteries in the Transmitter

The transmitter takes one (1) 9-Volt Alkaline battery. To install the battery, follow the instructions listed below: (refer to figure 1)

- Place your finger on top of the "Pull" area of the battery door, located on the backside of the transmitter.
- Remove the battery door by lifting up.
- Connect the battery and replace the battery door by placing the bottom side of the battery door in first.
- To test the battery, press any transmitter button. The light will glow red. If the light does not glow or glows dimly, replace the battery.
- You can expect a fresh battery to last about 2 months with average use.

### Installing The Batteries in the Receiver

The receiver takes two (2) 3-Volt Lithium batteries (Model 2032). To install, follow the instructions listed below:

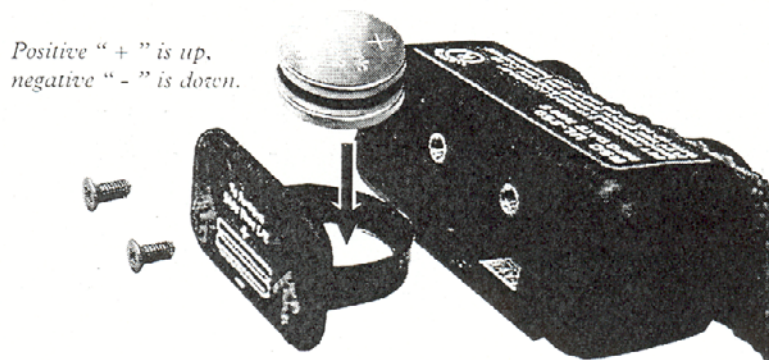

- With a Philips screwdriver, remove the two screws located on top of the receiver.
- Remove the battery door by sliding the door up in the direction of the arrows before sliding the door out. Insert the two batteries into the battery door as shown in the drawing above.
- Insert the battery door with the batteries in place by pushing the door in and then sliding it down in the opposite direction of the arrows. Secure it with the two screws. Be sure to tighten the screws without over tightening.

### Turning the Deluxe Remote Trainer On/Off


To turn the receiver on, place the white dot on the transmitter against the white dot of the receiver, hold them together for three (3) seconds, and separate. Upon separating, the receiver will emit one short beep.

**Note: If receiver does not beep, the batteries need replaced or they were not placed correctly in the receiver. (Refer to page 6). You can expect a fresh battery to last about 1 month with average use.**

**Note: Once the receiver has been activated, the receiver must be manually turned off by following the instructions shown below.**

To turn the receiver off, place the white dot on the transmitter against the white dot of the receiver, hold them together for three (3) seconds, and separate. Upon separating, the receiver will emit a long beep indicating the unit has been turned off.

Refer to the pictures below for the location of the white dots for both the transmitter and receiver.

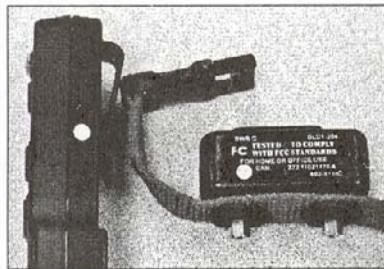

**Deluxe Little Dog Trainer**



**Deluxe Big Dog Trainer**


## Turning the Deluxe Remote Trainer On/Off Using the Magnetic Keychain

To turn the receiver on, place the magnetic keychain next to the white dot of the receiver unit, hold them together for three (3) seconds, and separate. Upon separating, the receiver will emit one short beep.

**Note: Once the receiver has been activated, the receiver must be manually turned off by following the instructions shown below.**

To turn the receiver off, place the magnetic keychain next to the white dot of the receiver unit, hold them together for three (3) seconds, and separate. Upon separating, the receiver will emit a long beep indicating the unit has been turned off.

Please refer to the pictures below for the proper connection of the magnetic keychain to the receiver.

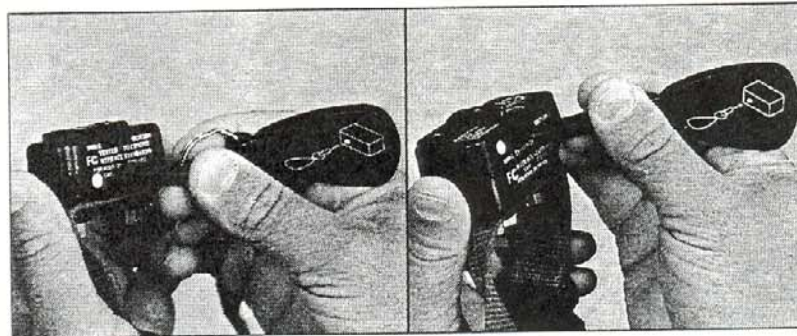

Deluxe Little Dog Trainer

Deluxe Big Dog Trainer


## Setting the Stimulation Level and Using Your Trainer



 To set the stimulation level, first turn on the receiver. (Refer to page 7 or 8.) Next, hold down the "Program" button. After a few seconds, the receiver will indicate the present stimulation level by beeping one-to-eight times (the receiver is preset at level 1). For instance, for level 1 (the lowest stimulation level) the receiver will beep once. For level 8 (the highest stimulation level) the receiver will beep eight times.


Continue to hold the "Program" button down until the number of beeps equals the level of stimulation you want. After level 8, the receiver will go back to level 1.

The receiver memory will hold the set level whether the unit has been turned off or when the batteries are being replaced.

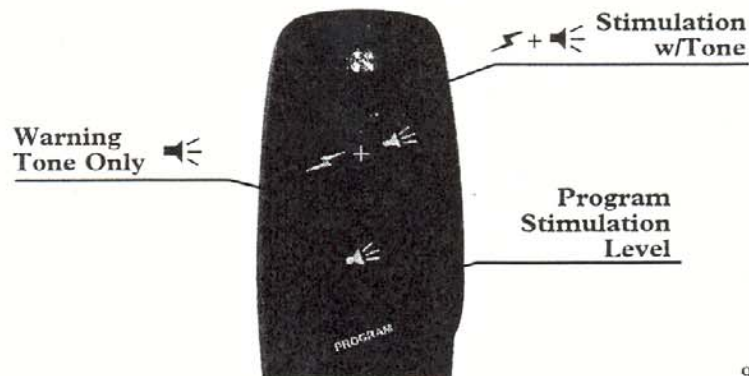Once you have set the receiver to the desired stimulation level, you are ready to begin training.



Press the "  +  " button to give your dog a stimulation along with a warning tone.

Once your dog starts to associate the warning tone with the stimulation, you can press the "  " button to warn your dog that if the behavior does not change, he will receive a stimulation. The tone, from pressing this button, is exactly the same tone as pressing the "Stimulation w/Tone" button.

**Note:** Before you begin training with your new remote trainer, watch the training video, and read the training manual in its entirety.

**Note:** You can expect your deluxe trainer to operate within a range of approximately 300 ft. Actual range may vary due to obstacles, terrain, weather, etc. For best results your pet should be within voice range to associate your commands with praise or stimulation.

## Placing the Collar on Your Pet

Place receiver collar on your dog with the receiver hanging directly beneath your dog's neck. Adjust the collar securely so that the probes touch the skin of your dog's neck. Make sure the collar is not so tight as to cause discomfort. When the collar is properly adjusted, you should be able to place one finger between the probes and the dog's skin.

**Caution:** Do not leave collar on too tight. Doing so can cause Pressure Necrosis, a condition that results in skin deterioration.

Check your pet's collar regularly. Remove the collar weekly and wash your dog's neck and probes with mild soap (approved by a veterinarian). If a rash or sores form, take the collar off for a few days. When replacing it, make sure that it is not too tight.

## Maintenance

- Check batteries (weekly)
- Clean probes and dog's neck with veterinarian approved soap and warm water (weekly).
- The batteries will last up to 30 days depending on the frequency of use.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a practical installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Unauthorized changes or modifications to the equipment, not approved by PetSafe, could result in not meeting compliance with FCC regulations and could void the user's authority to operate the equipment