


# **A.M.A.C. TRANSMITTER**

## **WATER-PROOF TRANSMITTER**

**Operating the transmitter is a fixed code designed transmitter, each time is pressed, it will randomly transmit a different code, this prevent disarming the alarm system by coping the code and retransmitting the same code.**

**Noticeable features.**

- 1. Press channel button of transmitter-- Panic**
- 2. L.E.D. -- Indicates that the button is being depressed. (Refer fig 1)**
- 3. Receiver board received the panic signal , system will alarm, alarm LED will turn ON.**

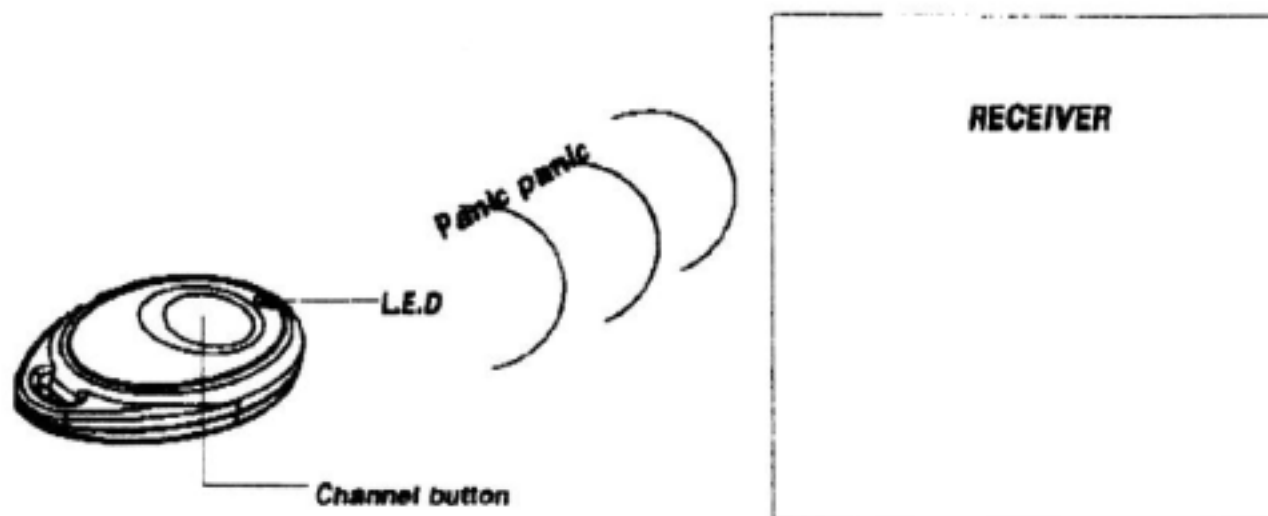

**Fig. 1**

**NOTE:** To replace batteries in the transmitter, use a small flat blade screwdriver remove the back cover in an upward movement take out old batteries and replace with new one ensuring correct polarity.

**SPEC.:**

**Working voltage : 6 Volt**

**Working temperature : -20 ~ +60**

**Frequency : 303.875mhz**

**Remote range : 50 meter**

**ASK transmittion**

## **Federal Communications Commission (FCC) Statement**

**The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**