
EXHIBIT C

User Manual

CODE HOPPING DUAL CHANNEL WATERPROOF TRANSMITTER

Operating the transmitter is a hopping code designed transmitter, each time is pressed, it will randomly transmit a different code, this prevent disarming the alarm system by coping the code and retransmitting the same code.

Three noticeable features.

- Channel 1 – arming/disarming function
- Channel 2 – panic
- L.E.D. -- indicates that the button is being depressed (refer fig1)

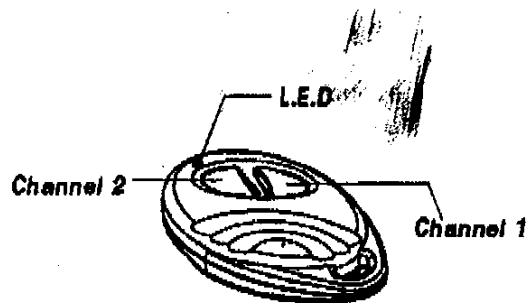


Fig. 1

NOTE: To replace batteries in the transmitter, use a small flat blade screwdriver remove the back cover in an upward movement take out old batteries and replace with new one ensuring correct polarity.