

Locks & alarm

Unlocking with the handset

Within range of the vehicle, briefly press the PLAIN button on the handset; the hazard warning lights flash once, the alarm is disarmed immediately and the doors unlock.

NOTE: The interior lights illuminate when the alarm system is disarmed.

If the handset fails to unlock the vehicle, use the key and re-synchronise the handset (see Item 6 under 'Handset battery').

If the alarm sounds


To silence the alarm, press either handset button, or operate the door locks using the key. If the alarm is not silenced, it will sound for approximately 30 seconds before switching itself off and can be triggered up to three times in total before needing to be reset.

To reset the alarm system, unlock the vehicle using the PLAIN button on the handset. Then press the lock button (PADLOCK SYMBOL) to lock the vehicle and rest the alarm system.

Anti-theft alarm indicator light

After locking, the RED indicator light on the instrument panel will flash rapidly while the alarm system is arming itself.

After 10 seconds, the indicator light adjusts to a slower frequency and continues flashing as an anti-theft deterrent, until the alarm is disarmed.

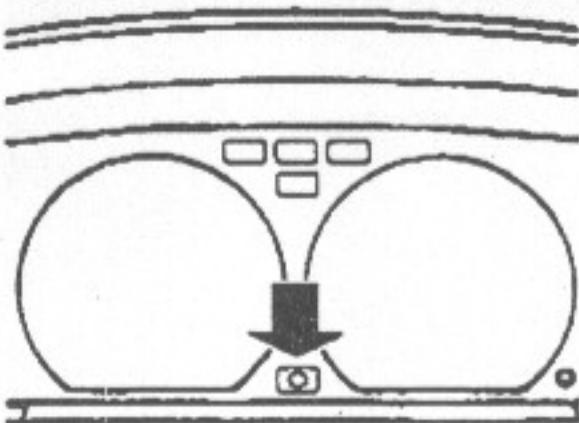

J647

INDICATOR LIGHT LOCATION

NOTE: The handset complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation. This applies to both alarm receivers and handset transmitter.

CAUTION: Any changes or modifications to the transmitter not expressly approved by the manufacturer could void the user's authority to operate the equipment.