

Programming the Z-Wave Light Kit

Programming the Z-Wave Light Kit to the i-Drive TorqueMaster

If your Z-Wave Light Kit is included with the opener, it should already be programmed to the opener. Otherwise, follow the instructions below.

IMPORTANT: ERASE ANY EXISTING PROGRAMMING ON Z-WAVE LIGHT KIT

- 1. Press and hold the DELETE button on the unplugged Wireless Gateway until the 3 LEDs turn on, then let go of the button.
- 2. Press the red button on the Z-Wave Light Kit and observe the LEDs on the Wireless Gateway flash. All network programming, if any, has now been deleted from the Z-Wave Light Kit. Press the red button again to turn off the light. If the button is held in, the Z-Wave Light Kit may flash its light on and off repeatedly. This is okay.

PROGRAM Z-WAVE LIGHT KIT TO PRIMARY CONTROLLER

- 1. Insure the Z-Wave Light Kit light is off.
- 2. Press the Scene 1 button on the Wireless Gateway and observe that the LED lights up. Continue holding the button down until the LED turns off and the turns back on again.
- 3. While the Scene 1 button is still being pressed, press the red button on the Z-Wave Light Kit, while observing the LED for Scene 1. If the LED flashes, the Z-Wave Light Kit has been successfully programmed to Scene 1 of the Wireless Gateway.
- 4. Release the button on the Wireless Gateway.
- 5. Note: If the programming was unsuccessful, try moving the Wireless Gateway closer to the Z-Wave Light Kit or change orientation.

COPY PRIMARY CONTROLLER PROGRAM TO THE Z-WAVE OPERATOR

- 1. Press and hold the Learn button on the I-Drive TorqueMaster® Pro until all 4 LEDs are blinking. Release the button.
- 2. With the Wireless Gateway in close proximity to the I-Drive TorqueMaster® Pro, press and hold the copy button on the Wireless Gateway until all 3 LEDs are flashing.
- 3. Observe the 4 LEDs on the I-Drive TorqueMaster® Pro. If programming is successful, the LEDs will begin blinking at a different rate, and then turn off. If not, then you may have to move the Wireless Gateway closer or change the orientation.
- 4. The Z-Wave Light Kit will now come on when the operator is engaged. The light will automatically shut off after approximately 5 minutes. Additionally, by default, Scene 3 will turn off Scene 1. Therefore, the light can be turned off by pressing Scene 3 on the Wireless Gateway.



