

UAIS Operation Menu Hierarchy

No link with main unit					
Check ROM, RAM, FLASH, Starting....					
AIS Transponder					
Manufacturers Brand(s)					
Show Sensors	Date/UTC				
	Lat				
	Lon				
	Pos				
	SOG				
	COG				
	HDG				
	ROT				
RAIM					
Static & Voyage Data	Call Sign	Enter Data			
	Name	Enter Data	Enter Password		
	Dist. GNSS-Bow	Enter Data (0)			
	Dist. GNSS-Stern	Enter Data (0)			
	Dist. GNSS-Port-side	Enter Data (0)			
	Dist. GNSS-Starboard	Enter Data (0)			
	Type of Cargo	Enter Data (0)			
	Max Static Draught	Enter Data (0.0)			
	Persons on Board	Enter Data (0)			
	Destination	Enter Data			
	ETA (time)	Enter Data (24:60)			
	ETA (date)	Enter Data (00-00)			
	Status	Undefined			
		Under Way (Engine)			
		At Anchor			
		Not Under Command			
		Restr. Manoeuvrability			
		Contr. By Draught			
		Moored			
		Aground			
Engaged in Fishing					
Under Way (Sailing)					
Display Present	Yes / No				
VHF Regions	Band	Mode of tuning	This Area	Mode of tuning	In Area
		Channel A	Enter Data	Channel A	Enter Data
		Bandwidth A	25 / 12.5	Bandwidth A	25 / 12.5
		Channel B	Enter Data	Channel B	Enter Data
		Bandwidth B	25 / 12.5	Bandwidth B	25 / 12.5
		Mode	TxAB / RxAB	Mode	TxAB / RxAB
			TxA / RxAB		TxA / RxAB
			TxB / RxAB		TxB / RxAB
			RxAB		RxAB
			RxA		RxA
			RxB		RxB
		Transmitter Power	High / Low	Transmitter Power	High / Low
DSC Tuning	DSC	Enable / Disable		Transitional (nm)	Enter Data
	DSC Tr. Channel	Enter Data (70)		North Border	Enter Data
	Bandwidth	25kHz / 12.5kHz		South Border	Enter Data
	Power	High / Low		East Border	Enter Data
Long Range Requests				West Border	Enter Data
Other Stations	Target List	General View	Text On / Off		
		Send Message	Station ID	Enter Data	
		Target Details	More Target Details		
Radio Exchange	Yes / No	Reply	Enter Data		
Alarms & Faults	Alarm Status	List of Alarms			
	Fallback Status	List of Fallbacks			
	Non-Alarm Status	List of Notifications			
Show Status	Int. GNSS/Synchronisation	Int. GNSS/Synchronisation	NMEA Sentence		
	Diff. Data Monitor	RTCM Statistics			
	Processor / Memory	Memory			
	Report Rate	Report Rate			
	Receiver / Transmitter	Receiver / Transmitter			
	Test Radio-Link	Radio-Link Test	Enter Data		
	Log File (Unfiltered)	Event Log			
	Log File (Alarms)	Event Log			
Log File (Security)	Event Log				
Enter Set-up	See UAIS Commissioning Menu Hierarchy				
Display Brightness	Brightness	Up / Down			
	Contrast	Up / Down			

Default settings in bold

UAIS Commissioning Menu Hierarchy

Enter Set-up	Stop Working	Enter Password	Main Set-up	General Set-up	MMSI	Enter Data			
						Purpose		Ship Class A	
								Base Station	
								Airborne	
								Ship Class B	
								AtoN	
								No own reports	
						IMO Number		Enter Data	
						RAIM Present		Automatically Selected	
						Set-up Password		Enter Data	
						Addressed Message Filter		Automatically Selected	
						Media Analyser Mode		Automatically Selected	
						Max. Repeating Mess. 6, 12		Enter Data (4)	
						Transmission w/o Sync		Yes / No	
						Enable Deleting Regions		Yes / No	
				Extra Set-up		Intern. GNSS Position		Enable / Disable	
					Dist. Int. GNSS-Bow	Enter Data			
					Dist. Int. GNSS-Stern	Enter Data			
					Dist. Int. GNSS-Port-Side	Enter Data			
					Dist. Int. GNSS-Starboard	Enter Data			
					Out Position to MAIN & AUX	Yes / No			
				Alarm Signals	Tx Malfunction	On / Off			
					Antenna VSWR Exceeds Limits	On / Off			
					Rx Channel A Malfunction	On / Off			
					Rx Channel B Malfunction	On / Off			
					Rx Channel DSC Malfunction	On / Off			
					General Failure	On / Off			
					MKD Connection Lost	On / Off			
					External EPFS Lost	On / Off			
					No Sensor Position In Use	On / Off			
					No Valid SOG Information	On / Off			
					No Valid COG Information	On / Off			
					Heading Lost / Invalid	On / Off			
					No Valid ROT Information	On / Off			
					No TDMA Synchronisation	On / Off			
					Tx Amplifier Malfunction	On / Off			
				No Own Reports Mode	On / Off				
				RS-422 Set-up	MAIN (38400N1)	General		On / Off	
					AUX (38400N1)				
					LR (38400N1)				Baud Rate
					Sen1 (4800N1)	Parity		None	
					Sen2 (4800N1)				
					Sen3 (38400N1)				Even
						Stop Bits		1 Stop Bit	
								2 Stop Bits	
						Test Interfaces		Yes / No	
				DGNSS Set-up		Ref. Station 0 ID		Enter Data	
					Lat	Enter Data			
					Lon	Enter Data			
Ref. Station 1 ID	Enter Data								
Lat	Enter Data								
Lon	Enter Data								
Transmission	Disable								
	On Channel 1								
	On Channel 2								
	Alternate Channels								
Test Mode	SERVICE PERSONNEL ONLY								
Other Options	Label								
	Logo								
	SW Info								
Log File	Event Log								

Default settings in bold