

3-5. Parts List

| Item                  | Part Name    | Quantity | Part No. |
|-----------------------|--------------|----------|----------|
| Micro-computer        | · PD754144GS | 1        | IC1      |
| NPN-Transistor        | 2SC4083P     | 1        | Q1       |
| Capacitor(Ceramic)    | 22pF         | 1        | C1,      |
|                       | 0.1· F       | 1        | C2       |
|                       | 0.01· F      | 2        | C3,C8    |
|                       | 10pF         | 1        | C4       |
|                       | 16pF         | 1        | C5       |
|                       | 56pF         | 1        | C6       |
|                       | 5pF          | 1        | C7       |
|                       | 1000pF       | 2        | C12,C13  |
| Resister              | 22k· 1/16W   | 1        | R1       |
|                       | 4.7 k· 1/16W | 2        | R2,R3    |
|                       | 100· 1/16W   | 1        | R4       |
| Tactile Switch        | EVQQW301W    | 3        | SW1· SW3 |
| SAW-Resonator         | 315.0MHz     | 1        | X1       |
| Battery               | CR2025       | 1        | BATT     |
| Batter-Holder         | Plus & Minus | 1        | B+, B-   |
| Printed Writing Board |              | 1        |          |
| Upper – Case          |              | 1        |          |
| Lower – Case          |              | 1        |          |
| Switch-Rubber         |              | 1        |          |

Note) Same parts are used for all models.

The following components are not mounted on the PWB.

C9,C10 and C11