 
 


BASE STATION

WITH 2 HAND-HELD WALKIE-TALKIES

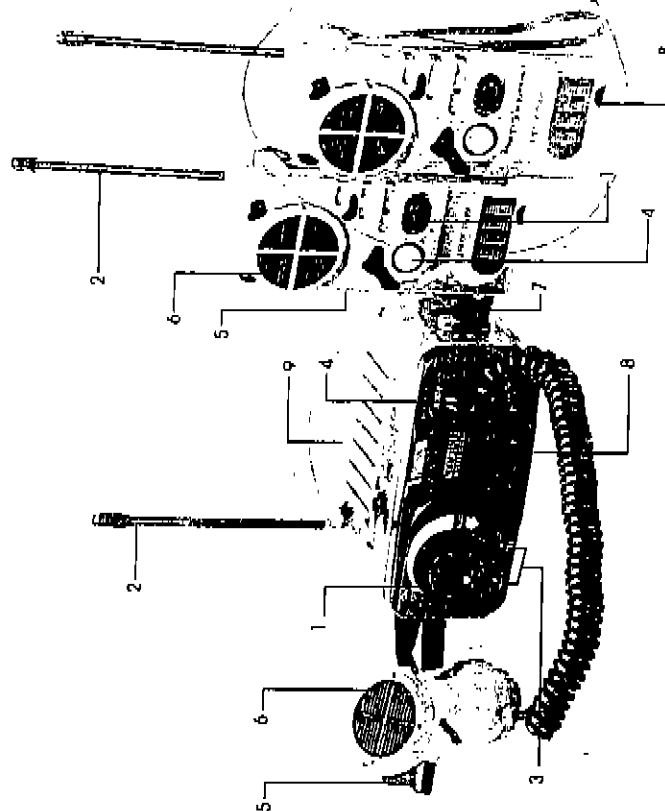 


- ① - ON/OFF
② - FLEXIBLE ANTENNA
③ - LED SEND/RECEIVE LIGHTS
④ - MORSE CODE KEY
⑤ - PUSH TO TALK SWITCH
⑥ - SPEAKER/MICROPHONE
⑦ - CARRYING STRAP WITH SAFETY BUCKLE
⑧ - BATTERY DOOR
⑨ - DC JACK 4.5V

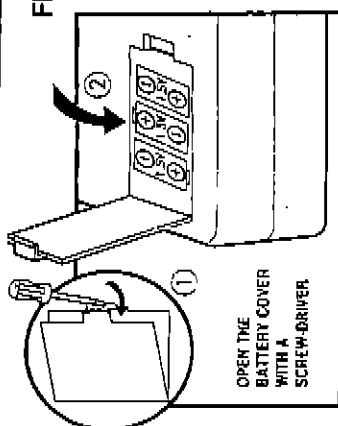

OPEN THE
BATTERY COVER
WITH A
SCREW-DRIVER

FIG. 2

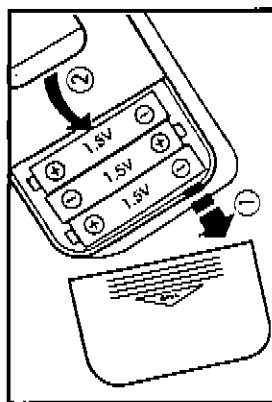

BASE STATION

YOU CAN USE PHONETIC ALPHABET

Phonetic Alphabet

A special alphabet is used by radio operators, police pilots, etc. called the phonetic alphabet. It is used for identification and to spell out words to prevent misunderstanding.

A = Alfa B = Bravo C = Charlie D = Delta
E = Echo F = Foxtrot G = Golf H = Hotel
I = India J = Juliett K = Kilo L = Lima
M = Mike N = November O = Oscar P = Papa
Q = Quebec R = Romeo S = Sierra T = Tango
U = Uniform V = Victor W = Whiskey X = X-Ray
Y = Yankee Z = Zulu

- Always speak slowly and clearly into the mouth-piece holding it 8-10 cms from your mouth.
- For best results use your Base Station outdoors.
- Always remove worn out batteries.
- Remove batteries during long periods of non-use.
- Do not put anything metallic across the terminals of the battery.
- Always switch off all 3 units when not in use to preserve the life of your batteries.
- Do not let dirt or water get into the handsets.
- Damage caused in this way nullifies the guarantee.

"MORSE" CODE ALPHABET

LETTER	SIGNAL	LEFT	SIGNAL	RIGHT	SIGNAL
A	• • • • •	a	• • • • •	1	• • • • •
B	• • • • •	b	• • • • •	2	• • • • •
C	• • • • •	c	• • • • •	3	• • • • •
D	• • • • •	d	• • • • •	4	• • • • •
E	• • • • •	e	• • • • •	5	• • • • •

NUMBER	SIGNAL	NUMBER	SIGNAL
1	• • • • •	6	• • • • •
2	• • • • •	7	• • • • •
3	• • • • •	8	• • • • •
4	• • • • •	9	• • • • •
5	• • • • •	0	• • • • •

TROUBLE SHOOTING GUIDE

PROBLEM	SOLUTION
Fading Message/interference	• Move away from buildings. • Move closer together. • Keep as far apart as possible as near vertical as possible
No Message	• Check batteries aren't dead. Replace if necessary. • Make sure handsets are switched on. • Make sure volume is turned up enough. • Make sure the person receiving isn't pressing the transmit button. • Make sure the person transmitting is pressing the transmit button.

1. BASE STATION AND THE TWO WALKIE TALKIES ARE ON THE SAME FREQUENCY WHEN ALL UNITS ARE ON IT IS POSSIBLE FOR THREE PEOPLE TO COMMUNICATE WITH EACH OTHER AT THE SAME TIME
2. OPEN BATTERY COMPARTMENTS AND SWAP IN 3X1.5 VOLT BATTERY CLOSE BATTERY COMPARTMENT (FIG. 2)
3. TURN THE ON/OFF VOLUME CONTROL TO DESIRED SOUND LEVEL (BASE STATION)
4. FOR BASE STATION USE, PRESS THE PUSH TO TALK BUTTON ON HAND-HELD MICROPHONE FOR TRANSMITTING WHILE SPEAKING IN A NORMAL VOICE LEVEL INTO THE MICROPHONE GRILLE.
5. FOR HAND-HELD WALKIE TALKIE USE, PRESS THE PUSH TO TALK BUTTON FOR TRANSMITTING WHILE SPEAKING IN A NORMAL VOICE LEVEL INTO THE SPEAKER/MICROPHONE GRILLE.
6. RELEASE THE PUSH TO TALK BUTTON FOR RECEIVING.
7. TO SEND MORSE CODE SIGNALS, WHILE PUSHING THE PUSH TO TALK BUTTON, PRESS THE MORSE CODE BUTTON MOMENTARILY AND RELEASE FOR DESIRED SIGNALS
8. YOU CAN PRACTICE MORSE CODE WITHOUT TRANSMITTING TO OTHER BY PRESSING THE MORSE CODE BUTTON AND NOT PRESSING THE PUSH TO TALK BUTTON
9. REPLACE 3X1.5-VOLT BATTERIES (NOT INCLUDED)
10. THE UNITS MAY HAVE FEEDBACK (SQUEALING NOISE) WHEN PLAYED TOO CLOSE TOGETHER. MOVE FARTHER APART WHEN IT HAPPENS

WARNING:

Isolated batteries to be removed from the unit.
The supply terminals are not to be short-circuited.
Take out batteries if it will not use for long time.
Turn power off when not play.
Non-rechargeable batteries are not to be changed.
Batteries are to be treated with the correct polarity.
Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
Packaging and manual to be kept since they contain important information.

No 2 1 2 5 3
0 6 DEC 1999