

FCC ID: KT6B-7007



WARNING:
NOT SUITABLE FOR CHILDREN
UNDER 36 MONTHS DUE TO
SMALL PARTS



WARNING:

CHOKING HAZARD-Small parts.
Not for Children under 3 years.

B-7007 FM SING-A-LONG WIRELESS MICROPHONE OPERATING INSTRUCTIONS

BATTERY INSTALLATION

1. Remove the battery cover, slide the cover downward from the back of the microphone handle and lift it off.
2. Install two new AA size battery in accordance with the instructions located in the battery compartment. Replace the battery cover.

NOTE:

When using the FM microphone, hold the microphone 2 inches from your mouth and speak in a normal voice into the head of the microphone.

The users manual or instruction manual for an international or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING

Exhausted batteries to be removed from the unit.
The supply terminals are not to be short-circuited.
Take out batteries if it will not use for long time.
Turn power off when not to play.
Non-rechargeable batteries are not to be charged.
Batteries are to be inserted with the correct polarity.
Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc) or
Rechargeable (nickel-cadmium) batteries.
Packing and manual to be kept since they contain
Important information.

TO OPERATE

1. Slide the function switch to PLAY position. You can select your favorite background-music when you sing by pressing the "SELECT" & "MUSIC" button one by one, the background-music will come out and mixed with your sound from the built in speaker. (the background-music will change for each time you press the keys)
2. You may use this unit as a wireless microphone by sliding the function switch to "TX" position and follow the instruction underneath.
3. Use any good FM radio. Turn the radio On and face the radio towards you. Adjust the volume to a normal level.
4. Place the microphone near to the radio and turn it on. Hold the microphone 2 inches away from your mouth and speak in a normal voice while tuning your FM radio back and forth across the 89 mark on the tuning dial. If the reception of the microphone is good when your radio is tuned between local broadcast stations then no adjustment of the microphone is necessary. Do this slowly to get the best reception.
If a local broadcast station in your area falls on or near your frequency and interfere with FM microphone reception. It will be necessary to tune the radio dial slightly one way or the other until the broadcast station can not be heard.

IMPORTANTS:

1. Always be sure that fresh battery is installed before making this adjustment.
After the FM radio is tuned to the microphone, move 5 feet away from the radio. Face towards the radio and speak into the microphone while someone carefully tunes the radio to the best reception when using the microphone at a distance of 10 feet or more from the radio. It may be necessary to increase the volume of the radio and carefully tune the radio again for best reception.
2. For best results, Stand 10 to 15 feet away from the radio.
 - a) If the microphone is not to be used for an extended period, remove the batteries from the set.
 - b) For best results, the manufacturer recommends the use of alkaline battery.
 - c) To prevent damage, do not expose the set to rain or moisture.