

# CEILING FAN REMOTE CONTROLLER OPERATION AND INSTALLATION INSTRUCTIONS

(Please keep this instruction pamphlet.)

## IMPORTANT

YOU MUST SET CEILING FAN MANUAL SWITCH TO HIGH SPEED AND LIGHT KIT (IF ANY) TO ON POSITION BEFORE OPERATING REMOTE CONTROL.

 
## IMPORTANT POINTS TO REMEMBER:

1. Read and save these instructions.
2. Please note that all fixed wiring appliances should be installed by a qualified electrician.
3. The supply to the remote control receiver should be connected through a mains switch, i.e. existing wall switch.
4. Disconnect from power supply at wall switch before working on remote control receiver or ceiling fan.
5. Install receiver into the ceiling fan canopy of the fan to ensure proper protection.
6. This unit is to be used for the control of ceiling fan and in an AC110/120V 60Hz power supply only.
7. Do not install in damp locations or immerse in water. (For indoor use only.)
8. Do not pull on or cut leads shorter.
9. Do not drop or bump the unit.
10. PLEASE NOTE: The battery will weaken with age and should be replaced before leaking takes place as this will damage the transmitter. Dispose of used battery properly, keep the battery out of reach of children.
11. CAUTION: To reduce the risk of fire or injury, do not use this product in conjunction with any variable (rheostat) wall control.

## INSTALLATION INSTRUCTIONS


CAUTION: INCORRECT WIRE CONNECTION WOULD DAMAGE THIS RECEIVER.

1. Ceiling fan must be set at HIGH speed and light kit (If any) at ON position by pressing the "Light Switch" after installation.
2. Once the connection has been made, the receiver inserts into the drop rod hanging bracket. The canopy comes up to cover the receiver and bracket.

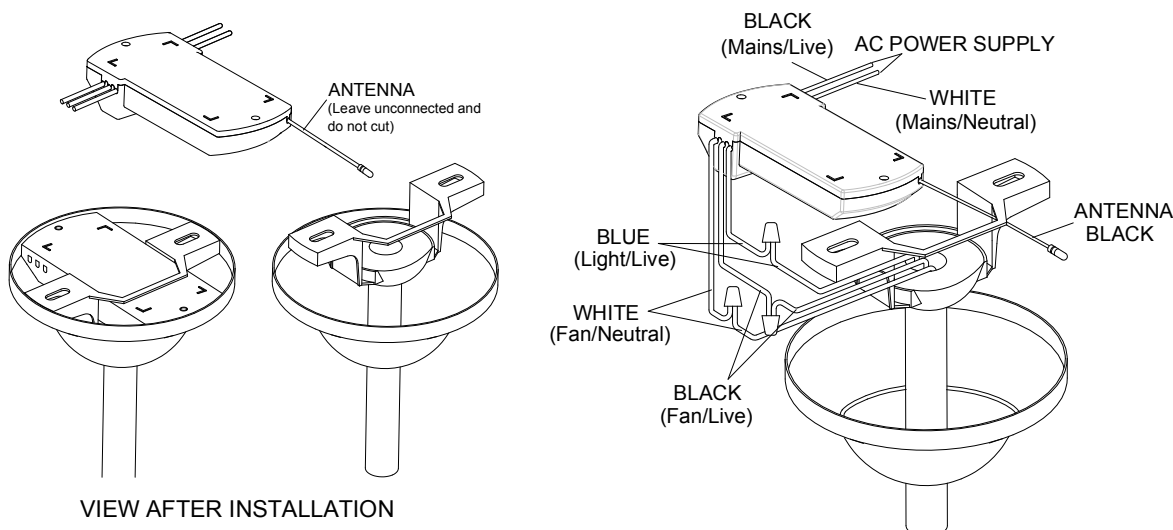


## CODE SWITCH

 
1. CODE SWITCH: Codes are set by pushing dip switches up or down. It is imperative that the code used for both transmitter and receiver is exactly the same, otherwise remote controller will not work. Please note the code switch will enable you to operate a second remote controller independently. For example, if you have two ceiling fans with 2 remote control units, set 2 different codes for each set of transmitter/receivers. This means you can operate each ceiling fan independently.
2. Your remote control is ready for use after 4pcs DC1.5V,AAA, batteries installation.
3. Installation of Transmitter Wall Mount Holder with two screws.

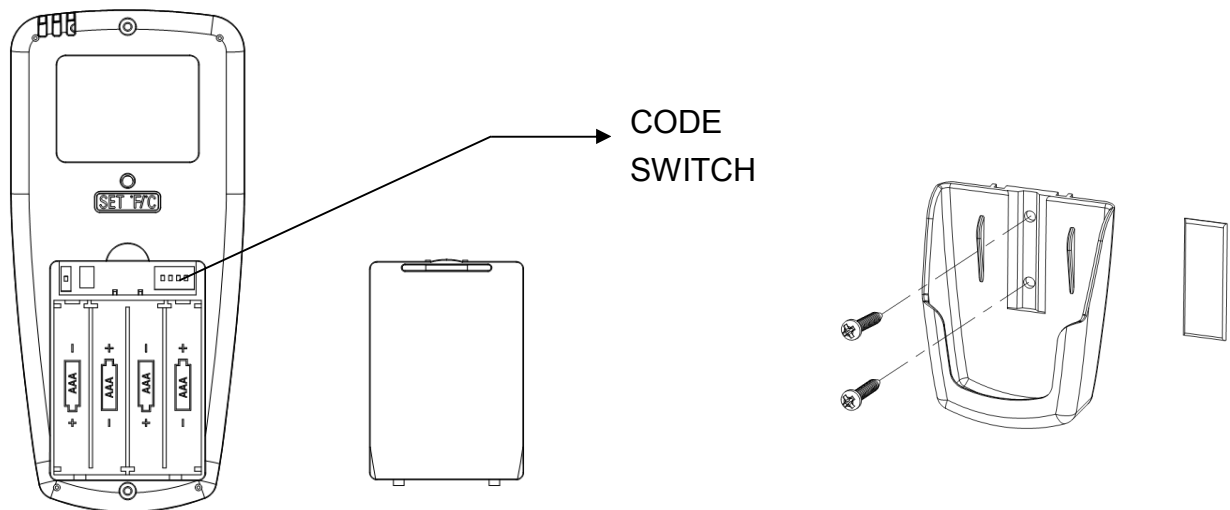

## FUNCTIONS OF TRANSMITTER

**LIGHT**  : ON/OFF- Press and release immediately to turn on or off the light.

**DIMMER**-Press and hold to dim or brighten lights to the desired level and release. (Only for the tungsten bulb.)

**FAN**  :Press immediately, turn on the fan at high, medium or low speed, or turn off the fan.

**LIGHT DELAY**: Press immediately, then light will automatically turn off after 3 minutes when the light is on. But when light is off, press the “delay”, the light will turn on and then turn off after 3 minutes.

**LIGHT TIMER**: Press this key, then use  $\triangle$  or  $\nabla$  key to select the desired time from 0.5 ~ 24 hours, then light will turn off automatically after that time.

**FAN TIMER** : Press this key, then use  $\triangle$  or  $\nabla$  key to select the desired time from 0.5 ~ 24 hours, then fan will turn off automatically after that time.

**FAN AUTO** : Setting the fan control at manual or automatic mode. The initial setting is manual mode.


**TEMP.** : When FAN AUTO is auto mode, use  $\triangle$  or  $\nabla$  key to select the desired room temperature, then there is balance between the desired temperature and the actual room temperature.

-Balance  $\geq 1^{\circ}\text{C}$ , fan will turn on at low speed automatically.

 
-Balance  $\geq 3^{\circ}\text{C}$ , fan will turn on at medium speed automatically.

-Balance  $\geq 4^{\circ}\text{C}$ , fan will turn on at high speed automatically.

$^{\circ}\text{C}/^{\circ}\text{F}$  : Set the temperature unit at  $^{\circ}\text{C}$  or  $^{\circ}\text{F}$ . (The key is on the back of remote.)

**Note** : when  is shown on the LCD, you must change new batteries because the power is shortage.

## TRANSMITTER

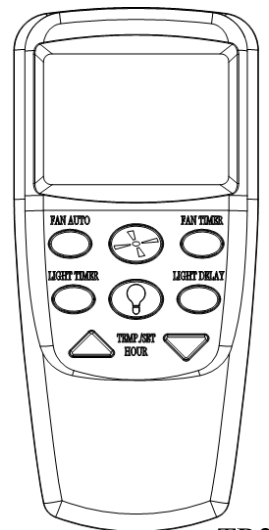

TR201A

**CAUTION:**

**To assure continued FCC compliance:**

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

**FCC ID : KUJCE10305**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.