WALL TRANSMITTER OPERATION AND INSTALLATION INSTRUCTIONS

(Please keep this instruction pamphlet.)

IMPORTANT

YOU MUST SET CEILING FAN MANUAL SWITCH TO HIGH SPEED LIGHT KIT ON POSTION BEFORE OPERATING REMOTE CONTROL.


IMPORTANT POINTS TO REMEMBER:

- 1. Read and save these instructions.
- 2. Please note that all fixed wiring appliances should be installed by a qualified electrician.
- 3. The supply to the remote control receiver should be connected through a mains switch, i.e. existing wall switch.
- 4. Disconnect from power supply at wall switch before working on remote control receiver or ceiling fan.
- 5. Install receiver into the ceiling fan canopy of the fan to ensure proper protection.
- 6. This unit is to be used for the control of ceiling fan and in an AC110/120V 60Hz power supply only.
- 7. Do not install in wee locations or immerse in water.
- 8. Do not pull on or cut leads shorter.
- 9. Do not drop or bump the unit.
- 10. PLEASE NOTE: The battery will weaken with age and should be replaced before leaking takes place as this will damage the transmitter. Dispose of used battery properly, keep the battery out of reach of children.
- 11. CAUTION: To reduce the risk of fire or injury, do not use this product in conjunction with any variable (rheostat) wall control.

INSTALLATION INSTRUCTIONS

CAUTION: INCORRECT WIRE CONNECTION WOULD DAMAGE THIS RECEIVER.

- 1. Ceiling fan must be set at HIGH speed after installation.
- 2. Once the connection has been made, the receiver inserts into the drop rod hanging bracket. The canopy comes up to cover the receiver and bracket. (FIG 1, 2 and 3)

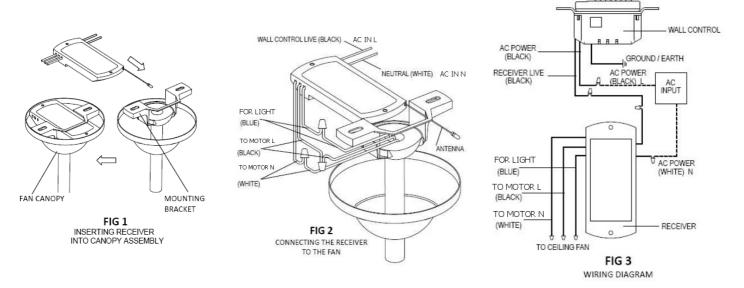

ACTIVATING THE LEARNING PROCESS

After installation is complete, AC power is turned on and SWITCH is at ON position within

30 seconds, press and hold the key for 3 seconds and start to learning by itself. Fan will turn on at medium speed and light (if installed) will turn on. This confirms that the SMART SYNC setting is active and ok.

FUCNCTIONS OF WALL REMOTE CONTROL

LED for show fan or light's function setting

FAN key : press and turn fan off

: fan speed control key

press the key or key each time for change fan speed



If installed energy light onto ceiling fan, please set the "light function select switch" "light function select switch" to on/off position," O". If installed tungsten light onto ceiling fan, please set the "light function select switch" to dimmer position," D".



ON/OFF- Press and release immediately to turn on or off dwon light.

DIMMER-Press Or and hold to dim or brighten light to the desired level and release.

(Tungsten only and light function select switch on dimmer position.)



1hr : Setting up that the ceiling fan will turn off after 1 hour automatically

3hr: Setting up that the ceiling fan will turn off after 3 hours automatically 6hr: Setting up that the ceiling fan will turn off after 6 hours automatically

Home Shield – Press and hold the buttons for 3 seconds. Fan will be off and the light will randomly turn on and off while you are away home.

: Walk Away Light Delay – Tap once - the light and fan turn off after 1 minute automatically.

Press the key for set fan speed for making natural wind.

Press the key for forward airflow of ceiling fan

Touch icon for reverse airflow of ceiling fan.



TR205B

Installing Wall Control (TRANSMITTER):

Remove wall plate, disconnect and remove the toggle switch from wall junction box. Using the wire connectors, make the electrical connections to the wall control (transmitter) unit. Carefully push all connected wires inside wall switch box. Secure wall control unit with 2 screws previously removed. Face plate could be clicked onto the transmitter.



To assure continued FCC compliance:

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

FCC ID:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.