DC POWER CEILING FAN REMOTE CONTROL MANUAL


LEARNING PROCESS

- NOTE :The Hand Held Remote Control is equipped with a learning ID function which has code combinations to prevent potential interference from other remote units.
- Step: 1. Install 2pcs DC1.5V/AAA batteries in transmitter. Within 30 seconds of turning the Receiver AC power ON, press the transmitter "U" button.
- Step: 2. Press $oldsymbol{\psi}$ about 5 seconds, once the receiver has detected the ID, the receiver will make sound, Bi Bi, twice. This will indicate the receiver has learned the ID that was previously selected on the transmitter.
- ♦ (you need to perform this step when replace blade or learning variable speed drive)
- **Step: 3. Fan setting :** Within 30 seconds of turning the Receivers AC power ON, Press and hold remote "**U**" button about 5~15 seconds, will hear 3 Bi Bi sound, within 60 seconds will hear 3 Bi Bi sound means setting is completed.
- Note: After the AC power is on, do not press any other buttons on the transmitter before touching button. Because doing so will cause the procedure to fail. After completing the steps above, you should be able to operate the ceiling fan and light. If the ceiling fan is not responding to the transmitter, please turn the power off to the receiver and repeat step 1 and 2.

Note:Remove the battery if not used for long periods of time to prevent damage to the hand held remote.

LIGHT FUNCTION SELECT SWITCH

If the ceiling fan has fluorescent lighting, please slide the "light function select switch" to "O" position. If the ceiling fan has incandescent, halogen lighting or dimmerable LED, please slide the "light function select switch" to "D" position.

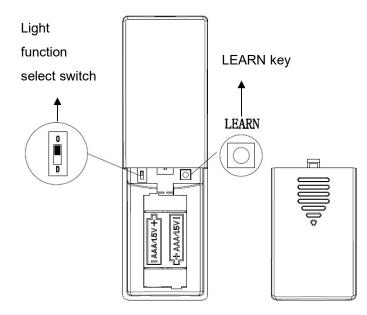

FUCNCTIONS OF TRANSMITTER

1. LIGHT:



:ON/OFF—Touch this icon and release instantly to turn on or off the light.



: Turn off ceiling fan.

2. FAN

- 1. Turn on ceiling fan at 1st speed (high speed).
- 2. Turn on ceiling fan at 2nd speed.
- 3. Turn on ceiling fan at 3rd speed.
- 4. Turn on ceiling fan at 4th speed. (lowest speed).



Touch icon for forward/reverse airflow of ceiling fan.



Natural breeze: Fan speed will modulate to simulate a natural breeze.

5. FAN TIMER:

2hr: Setting up that the ceiling fan will turn off after 2 hour automatically.

4hr: Setting up that the ceiling fan will turn off after 4 hours automatically.

6hr: Setting up that the ceiling fan will turn off after 6 hours automatically.



TR262C

To assure continued FCC compliance:

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

FCC ID: KUJCE10705

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.