

### **OPERATION INSTRUCTIONS:**

1. Two methods are provided to control fan and light operation: (a) control by pull chain switch or (b) control by remote controller.
2. (a) Use pull chain switch to control the fan and light operation:  
Before using pull chain switch, set Fan Speed to "HIGH" and light to "ON" position on the remote controller.
3. (b) Use remote controller to control the fan and light operation:
  - 3.1 Before using remote controller, pull chain switch, set Fan Speed to "HIGH" and Light to "ON" position.
  - 3.2 Your remote controller is ready for use after battery installation.
4. Once the remote controller is missing or damaged and pull chain switch can not perform its function, do the following:
  - (a) Turn off the master supply at the circuit breaker or fuse box.
  - (b) Remove the receiver and connect the wires according to the fan installation instruction. Then, the pull chain switch can be used.

