 


CODE SWITCH

1. **CODE SWITCH:** Codes are set by pushing dip switches up or down. It is imperative that the code used for both transmitter and receiver is exactly the same, otherwise remote controller will not work. Please note the code switch will enable you to operate a second remote controller independently. For example, if you have two ceiling fans with 2 remote control units, set 2 different codes for each set of transmitter/receivers. This means you can operate each ceiling fan independently.
2. Your remote control is ready for use after battery installation.

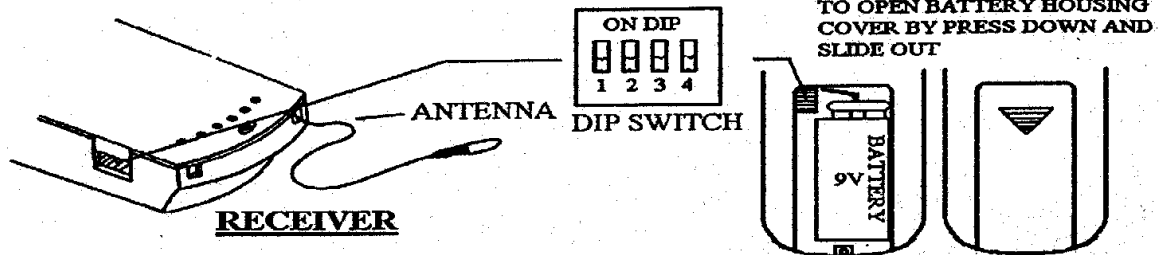

FUNCTIONS OF TRANSMITTER

 
- HI : High fan speed
- MED : Medium fan speed
- LOW : Low fan speed
- OFF : Turn off the ceiling fan.

LIGHT ON/OFF : To be controlled light ON or OFF, when light is ON, the light is the brightest



DIMMER : To be dimmed the light (Dimmed range is from 100% to 20%), Pushing the light ON/OFF key to turn off the light, then, pushing the dimmer key next time, the light will be same as before turning off.

(NOTE: When the wall switch is on, the beginning condition of receiver is light OFF, FAN ON) •

TRANSMITTER

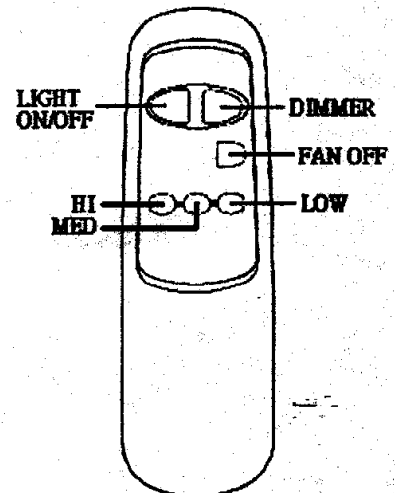

  Ceiling Fan Remote Control Wiring Connection

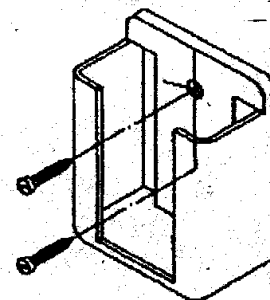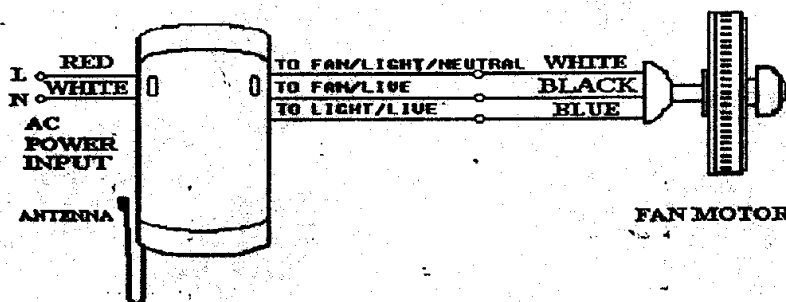

Installation of Transmitter Wall Mount Holder with two screws.