

CEILING FAN REMOTE CONTROL OPERATION AND INSTALLATION INSTRUCTIONS

(Please keep this instruction pamphlet.)

IMPORTANT

YOU MUST SET THE SWITCHES ON THE CEILING FAN MANUALLY
TO "HIGH" FOR FAN SPEED AND "ON" FOR LIGHT(S) (IF ANY)
BEFORE OPERATING WITH THE REMOTE CONTROL.

IMPORTANT POINTS TO REMEMBER:

1. Read and save these instructions.
2. Please note that all fixed wiring appliances should be installed by a qualified electrician.
3. This unit is to be used for the control of ceiling fans at AC120V 60Hz power supply only.
4. The supply to the remote control receiver should be connected through a mains switch, i.e. the existing wall switch.
5. Disconnect from power supply at wall switch before working on remote control receiver or ceiling fan.
6. Not for use in applications where the fan's canopy is to be mounted to an angle or vaulted ceiling.
7. Install receiver into the ceiling fan canopy of the fan to ensure proper protection.
8. Do not pull or cut leads.
9. Do not install in damp locations or immerse in water. (For INDOOR use only.)
10. Store the transmitter away from heat and moisture. Do not drop or bump the unit.
11. The battery will deteriorate with age. Replace before leaking takes place as this will damage the transmitter.

INSTALLATION INSTRUCTIONS

CAUTION: INCORRECT WIRE CONNECTION WOULD DAMAGE THIS RECEIVER.

1. Before installing the remote control receiver, connect the ceiling fan to power and set the switches on the fan manually to "HIGH" for fan speed and "ON" for light(s) (if any).
2. Then disconnect power from the fan and make wire connections to the receiver. After the connections are made, insert the receiver into the mounting bracket. Lift up and install the canopy to cover the receiver and mounting bracket. If the Light/Live wire is not connected, it must be insulated to prevent electric leakage.

