

FUNCTIONS OF TRANSMITTER

OFF (O) : Turn off the ceiling fan.

HI (□□□): Turn on the fan at high speed

MED (□□): Turn on the fan at medium speed

LOW (□) : Turn on the fan at low speed

LIGHT (💡): ON/OFF- Press and release immediately to turn on or off the light

DIMMER- Press and hold on to dimmer or brighten the light. (Tungsten only)

