

# Houselink® Keychain Transmitter Model 18T4


## 1. INTRODUCTION

In this package, you will find a keychain transmitter with 12V alkaline battery.



## 5. BATTERY


12 volt alkaline battery (size 23A) (included). It is time to change the battery when the red LED on the transmitter does not turn on when either button is pressed.

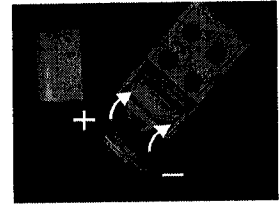

## 2. PROGRAMMING TRANSMITTER TO THE RECEIVER

Follow the instructions below to program transmitter into the receiver model 18R:

- 1 Plug in the receiver into an electrical outlet, the red light on the receiver will be on.
- 2 Press and hold the learn button on the receiver until the end of step 3. The red light will flash during the learning process.
- 3 Activate the transmitter by pressing the desire button that you would like to program to the receiver, the red LED on the receiver will be turned off if it learns the signal.
- 4 You may now release the learn button on the receiver, and the red light will be on steadily. The learning process is completed and you may activate the programmed transmitter, which will operate the garage door receiver.

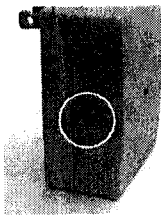

Note: A maximum number of 15 transmitting devices can be programmed to one receiver. 1 button on the transmitter is 1 transmitting device.

## 3. TROUBLE SHOOTING

- Q: The receiver does not respond after pressing the button on the transmitter:
- A: - Ensure when the button is pressed on the transmitter, the red light on the transmitter comes on. Otherwise, check if the battery is inserted properly.  
- Ensure the receiver is plugged in to an electrical outlet properly.

## 4. ERASE PROGRAMMED TRANSMITTER(S)

Programmed transmitters can be erased by following the instructions below:

- 1 Unplug the receiver from an electrical outlet.
- 2 Press and hold the learn button on the receiver.
- 3 While holding down the learn button, plug the receiver into an powered electrical outlet. The red light will flash rapidly, which indicates all the programmed transmitters have been erased. You may now release the learn button.

Note: When performing the erase operation, all the programmed transmitters will be erased. This operation cannot erase an individual transmitter.

## 6. ADDITIONAL RECEIVER

There are 2 buttons on the Model 18TN Keychain Transmitter, the other button can be used to control another Houselink® Garage Door Receiver Model 18R (sold separately), or Houselink® Wireless Switch Receiver Model SW-18R (sold separately).



## 7. FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## 8. WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase and a Return Authorization are required.

## 9. CUSTOMER SERVICE

If you would like to order Skylink's products or have difficulty getting them to work, please :

1. visit our FAQ website at [www.skylinkhome.com](http://www.skylinkhome.com), or
2. email us at [support@skylinkhome.com](mailto:support@skylinkhome.com) (reply within 24 hrs), or
3. call our toll free at 1-800-304-1187 from Monday to Friday, 9 am to 5 pm EST.

### CUSTOMER SERVICE

17 Sheard Avenue, Brampton, Ontario, Canada L6Y 1J3  
Email: [support@skylinkhome.com](mailto:support@skylinkhome.com) (Reply within 24 hrs)  
<http://www.skylinkhome.com>  
P/N. 101A218 Rev.0  
US Patent. D380895  
©2003 SKYLINK GROUP