PROGRAMMING THE TRANSMITTER

Thank you for your purchase of the Skylink garage door remote control, Model 39. There are 3 different steps you need to setup in order to use this universal garage door remote control to operate your existing garage door opener. These 3 steps are:

- Frequency switch select the correct frequency according to the brand of your existing garage door opener. Refer to Step 1.
- Brand jumpers place the brand jumpers at the correct position according to the brand of your existing garage door opener. Refer to Step 2.
- 3) Code setting Set the jumper connectors on the Model 39 so that they match the code setting of your existing garage door opener. Refer to Step 3 or Step 4 depending on the brand of your garage door opener.

Please follow the detailed instructions below in order to setup the Skylink Model 39 to work with your existing opener.

STEP 1 - SET FREQUENCY SWITCH

 Locate frequency switch on the top of the transmitter: (See diagram A)



Diagram A

 Determine the brand of your garage door opener and set the frequency switch to the corresponding position. (See chart 1)

		USA		
Brand of your opener	Set switch to position	Frequency		
Chamberlain*		390		
Lift-Master ^e	A	390		
Sears*	A	390		
Wayne Dalton®	D/A	300/390		
Master Mechanic*	A	390		
Genie [®]	A	390		
Overhead		390		
Pulsar/Allister/Allstar®	В	318		
Linear MegaCode	В	318		
Linear®	C	310		
NOW	C	310		
Stanley*	C	310		
Multi-Code*	D/C	300/310		
Martec/Teckey®	D	300		
Skylink UR-100	A	390		

Chart 1

STEP 2 - SET BRAND JUMPERS

2a. To set the brand jumpers, open the case with a coin (see diagram B).



Diagram B

 


Diagram C

REMOVE JUMPER = "0"

2b. The Model 39 contains 2 brand jumpers and 12 code connectors (see diagram C). The brand jumpers are located just above the battery with markings "A" and "B". There are 2 connectors, one is placed on the "A" column, the other one is placed on the "B" column. For each column, there is a connector. If the connector is placed on the top and middle post of that column, that column is set on "+". If the connector is placed on the middle and bottom posts, that column is set on "-". If the connector is removed completely, that column is set on "0" (see diagram C). In order for the Model 39 to work with your existing garage door opener (motor), you need to set the brand jumpers based on the brand of your existing garage door opener. Please set these 2 brand jumpers "A" and "B" based on the brand jumpers setting on chart 2. Please identify the group number on chart 2 in order to determine which is the next step to proceed.

STEP 2 - SET BRAND JUMPERS

Group	Brand	Brand jumpers setting		Proceed to
		A	В	
1	Chamberlain® , Sears®, Lift-Master®	-	+	
	(without DIP switches but with red, orange or green			ļ
	learn button)			Proceed
2	Chamberlain®, Lift-Master®, Sears®, Wayne Dalton®,	0	-	to Step 3.
	Master Mechanic® (without DIP switches but with	Ì	i	
	yellow, white, or gray learn button)			
3*	Genie [®] Intellicode™* (without DIP switches)	+	+]
4	Genie® (with DIP switches), Overhead®	0	+	
5	Chamberlain®, Lift-Master®, Sears®, Wayne Dalton®,	+		Proceed
_	Master Mechanic® (with DIP switches)			to Step 4, skip Step 3.
6	Stanley®, Multi-Code®, Martec®	-	-	
7	Linear®, Moore-O-Matic®	+	0	
8	Pulsar®, Allstar®, Allister®, Linear® MegaCode™	-	0	l

^{*} Note

Chart 2

For Genie® Intellicode™, if the brand jumper for group 3 cannot operate your garage door opener properly, please use setting A "+", B "-".

STEP 4 - SET CODE CONNECTORS

Note:

Proceed to this step only if the brand of your garage door opener belongs to either group 4, 5, 6, 7 or 8 on chart 2. Otherwise, proceed to Step 3 -

- 4a. If the brand of your garage door opener belongs to groups 4 to 8, that means you need to program the correct code setting in order for the Model 39 to work with your existing garage door opener. There are 12 code connectors on 12 columns from 1 to 12 (see diagram E). Each column has one connector. (see diagram F)
- 4b. Set the connectors numbered 1 through 12 to match the code setting of your existing transmitter or receiver. There are 2 places you can find out the code setting from a column of small switches of your existing garage door opener.
 - 1) your existing transmitter (the unit you currently use to open your garage).
 - the receiver of your garage door opener (the unit with the motor mounted on the ceiling of your garage).




Diagram E



Diagram F

STEP 4 - SET CODE CONNECTORS

4c. If the connector is placed on the top and middle posts, that column is set on " + " or "ON" or "CLOSE". If the connector is placed on the middle and bottom posts, that column is set on " - " or "OFF" or "OPEN". If the connector is removed completely, (not placed on any posts), it is set to " 0 " or the neutral position. (see diagram G for examples of how to set a column to the three different positions). When removing a connector to set a column to the neutral position, save the connector in case you change the code at a later date.

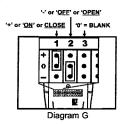

WARNING

If this transmitter triggers other garage doors in your neighborhood, change all your transmitters and receiver to a new code setting.

DO NOT let children use the garage door transmitter without adult supervision. Children can injure themselves or others by the garage door.

BATTERY

12 volt alkaline battery (size 23A) included.



The Universal Garage Door Remote Control is approved by the FCC and it complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions:

FCC

- This device may not cause harmful interference.
- This device must accept any interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible of compliance could void the user's authority to operate the equipment.

Skylink will not be held liable or responsible for any misuse or application of this product other than for its intended use.

SKYLINK TECHNOLOGIES INC.

2213 Dunwin Drive

Mississauga, Ontario,
LSI, 1X1, CANADA
(905)608-9274
(905)608-9274
(905)608-9274
(905)608-9274
(905)608-9744
(905)608-9744
(907)608-9744
(907)608-9744
(907)608-9744
(907)608-9744
(907)608-9744
(907)608-9744
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608-9748
(907)608
(907)608
(907)608
(907)608
(907)608
(907)608
(907)60



GARAGE DOOR/GATE
REMOTE CONTROL
USER'S INSTRUCTIONS
(Model 39)

