

PROGRAMMING THE TRANSMITTER

Thank you for your purchase of the Skylink garage door remote control, Model 69. There are 3 different steps you need to set-up in order to use this universal garage door remote control to operate your existing garage door opener. These 3 steps are:

- 1) Frequency switch – select the correct frequency according to the brand of your existing garage door opener. Refer to Step 1.
- 2) Brand jumpers – place the brand jumpers at the correct position according to the brand of your existing garage door opener. Refer to Step 2.
- 3) Code setting – Set the jumper connectors on the Model 69 so that they match the code setting of your existing garage door opener. Refer to Step 3 or Step 4 depending on the brand of your garage door opener.

Please follow the detailed instructions below in order to set-up the Skylink Model 69 to work with your existing opener.

STEP 1 - SET FREQUENCY SWITCH

- 1a. Locate frequency switch on the top of the transmitter: (See diagram A)

 


Diagram A

	A	B	C	D
USA	390	318	310	300
CANADA	390	318	315	310

- 1b. Determine the brand of your garage door opener and set the frequency switch to the corresponding position. (See chart 1)


Brand of your opener	USA		CANADA	
	Set switch to position	Frequency	Set switch to position	Frequency
Chamberlain®	A	390	CA	315/300
Lift-Master®	A	390	CA	315/300
Sears®	A	390	CA	315/300
Wayne Dalton®	DA	300/390	CA	315/300
Master Mechanic®	A	390	CA	315/300
Genie®	A	390	CA	315/300
Overhead®	A	390	A	390
Pulsar®/Master/Mate®	B	318	B	318
Linear®	B	318	B	318
Lincoln®	C	310	D	310
M-O-Matic®	C	310	D	310
Stanley®	C	310	D	310
Multi-Code®	Dec.	300/390	D	310
Martec®/Tackley®	D	300	A	390
Skylink® UR1-100	A	390	A	390

Chart 1

- 2a. To set the brand jumpers, open the case with a coin (see diagram B).



 Diagram B



A = "-"
B = "+"

Brand Jumper

REMOVE JUMPER = "0"

Diagram C

- 2b. The Model 69 contains 2 brand jumpers and 12 code connectors (see diagram C). The brand jumpers are located just above the battery with markings "A" and "B". There are 2 connectors, one is placed on the "A" column, the other one is placed on the "B" column. For each column, there is a connector. If the connector is placed on the top and middle post of that column, that column is set on "+". If the connector is placed on the middle and bottom posts, that column is set on "-". If the connector is removed completely, that column is set on "0" (see diagram C). In order for the Model 69 to work with your existing garage door opener (motor), you need to set the brand jumpers based on the brand of your existing garage door opener. Please set these 2 brand jumpers "A" and "B" based on the brand jumpers setting on chart 2. Please identify the group number on chart 2 in order to determine which is the next step to proceed.

STEP 2 - SET BRAND JUMPER

Group	Brand	Brand jumpers setting		Proceed to
		A	B	
1	Chamberlain®, Sears®, Lift-Master® (without DIP switches but with red, orange or green learn button)	+	-	Proceed to Step 3.
2	Chamberlain®, Lift-Master®, Sears®, Wayne Dalton®, Master Mechanic® (without DIP switches but with yellow, white, or gray learn button)	-	0	
3*	Genie® IntelliCode™ (without DIP switches)	+	+	Proceed to Step 4, skip Step 3.
4	Genie® (with DIP switches), Overhead®	+	0	
5	Chamberlain®, Lift-Master®, Sears®, Wayne Dalton®, Master Mechanic® (with DIP switches)	-	+	
6	Stanley®, Multi-Code®, Martec®	-	-	
7	Linear®, Moore-O-Matic®	0	+	
8	Pulsar®, Allstar®, Allister®, Linear® MegaCode™	0	-	

Chart 2

* Note:

For Genie® IntelliCode™, if the brand jumper for group 3 cannot operate your garage door opener properly, please use setting A "-", B "+".

STEP 4 - SET CODE CONNECTORS

Note: Proceed to this step only if the brand of your garage door opener belongs to either group 4, 5, 6, 7 or 8 on chart 2. Otherwise, proceed to Step 3 - Learn code.

- 4a. If the brand of your garage door opener belongs to groups 4 to 8, that means you need to program the correct code setting in order for the Model 69 to work with your existing garage door opener. There are 12 code connectors on 12 columns from 1 to 12 (see diagram E). Each column has one connector. (see diagram F)
- 4b. Set the connectors numbered 1 through 12 to match the code setting of your existing transmitter or receiver. There are 2 places you can find out the code setting from a column of small switches of your existing garage door opener.
- 1) your existing transmitter (the unit you currently use to open your garage).
 - 2) the receiver of your garage door opener (the unit with the motor mounted on the ceiling of your garage).

 


Diagram E



Diagram F

- 4c. If the connector is placed on the top and middle posts, that column is set on "+" or "ON" or "CLOSE". If the connector is placed on the middle and bottom posts, that column is set on "-" or "OFF" or "OPEN". If the connector is removed completely, (not placed on any posts), it is set to "0" or the neutral position. (see diagram G for examples of how to set a column to the three different positions). When removing a connector to set a column to the neutral position, save the connector in case you change the code at a later date.

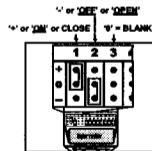


Diagram G

OPERATION

To operate the model 69 with your GDO properly, please press the button on the model 69.

Note: Transmission range may be reduced with use on a metal garage door.


WARNING

If this transmitter triggers other garage doors in your neighborhood, change all your transmitters and receiver to a new code setting.

DO NOT let children use the garage door transmitter without adult supervision. Children can injure themselves or others by the garage door.

BATTERY

12 volt alkaline battery (size 23A) included.

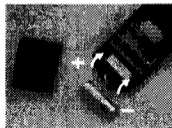

FCC

The Universal Garage Door Remote Control is approved by the FCC and it complies with Part 15 of the FCC Rules. Its operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible of compliance could void the user's authority to operate the equipment.

Skylink will not be held liable or responsible for any misuse or application of this product other than for its intended use.

CUSTOMER SERVICE
2213 Dunwin Drive
Mississauga, Ontario,
L5L 1X1, CANADA
(905)608-9223
(905)608-8744 FAX
Email: support@skylinkhome.com
(Reply within 24 hrs)
Customer Service: (800)304-1187
From 9am to 5pm EST (Mon-Fri)
http://www.skylinkhome.com
PN: 101A193-001 Rev.1
Patent no. D380895, 5680134,
5841360, 6005508
Patents Pending
©2003 SKYLINK GROUP

© is a registered trademark of Park representative corporation



**GARAGE DOOR/GATE
REMOTE CONTROL
USER'S INSTRUCTIONS
(Model 69)**



For garage door openers belonging to groups 1 to 3, please follow step 3 of the procedures, this will complete the setup. No need to proceed to step 4.

For garage door openers belonging to groups 4 to 8, you can proceed directly to "Step 4 - Set Code Connector" after you have successfully set the brand jumpers. Please skip step 3 below.