

GARAGE DOOR LOCK

 
Keyless Entry Transmitter

Model EL-100K

1. INTRODUCTION

In this package, you will find a keyless entry transmitter with 3V lithium batteries and screws.

- 1 pc 2.6 x 6 screw
- 1 pc 2.6 x 12 screw
- 1 pc 2.6 x 25 screw

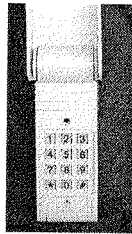



Keyless Entry Transmitter

2. PROGRAM A KEYPAD TO THE RECEIVER

You need to do the programming in order to add the keypad transmitter to the receiver.

- Press and hold the learn button on the "Garage Door Lock" control box. The red LED will turn on, continue holding the button until LED goes off. Release button.
- Press the factory programmed 4 digit pin [0000] [#] 2 times within 20 seconds. The keypad is now programmed.
- Entering the 4 digit pin [0000] [#] one more time will command the door to move. Programming is complete.
- You can now mount the transmitter on a desired location. Lift up the cover and insert screw above the keypad in the slot provided (a). Remove the battery cover and insert the second screw in the lower slot (b). Tighten all screws. Replace the battery cover, insert and tighten screw (c).

  (Learn Button)

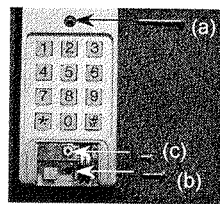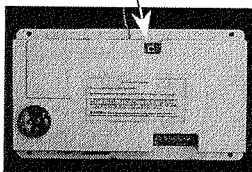

3. TROUBLESHOOTING

Q: Door opener does not react after pressing the button on the transmitter.

A: Ensure you hear 3 beeps from the keypad transmitter after entering the default PIN [0,0,0,0], [#]. If you do not hear 3 beeps, that means the PIN you entered is incorrect. Re-enter the correct PIN.

Ensure the wires that are previously connected to the wall mounted door control are not loose.

Ensure the keypad transmitter has been programmed to the receiver. Refer to section 2 for how to program a keypad to the receiver.

4. REMOVE TRANSMITTER AND ALL REMOTES FROM THE RECEIVER

You can delete a transmitter from a receiver.

Press and hold the learn button on the "Garage Door Lock" control box, LED will turn on, continue holding learn button, LED will turn off, continue holding, LED will turn on, release button. All transmitters and keypads are deleted.

5. KEYPAD OPERATION

The backlight comes on and a beep is emitted when any key is pressed. The backlight of the keypad may not be visible when it is too bright outside. When any key is pressed, the next key must be pressed within 5 seconds or the backlight turns off and the sequence is cancelled. You must begin again.

If the keypad does not emit a beep when pressed, wait a few seconds and press the key again.

6. CHANGE PIN

Follow the instructions below to change the PIN.
To change your PIN:

 
- Enter the current PIN, (factory default PIN 0 0 0 0), press * .
- Enter new 4 to 6 digit PIN, press * .
- Enter new PIN again, press * .

For example, if you are changing the PIN number from 0000 to 123456, enter the following sequence, 0000, *, 123456, * .


If confirmed, the backlit LED flashes and the unit emits a long beep.

If you do not hear 3 beeps after the 4-digit PIN, [#] is entered, that means you have entered an incorrect PIN, and the keypad transmitter will not operate your garage door.

7. BATTERY

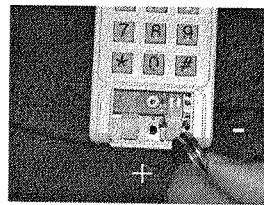

 Two 3 volt Lithium type (CR2032) batteries (included).

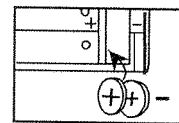

It is time to change the batteries when the backlight no longer appears.

Battery Compartment

8. FCC

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modification to this unit not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures;

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

9. WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase and a Return Authorization are required.

10. CUSTOMER SERVICE

If you would like to order Elocksys's products or have difficulty getting them to work, please:

- (1) Visit our website at www.elocksys.com, or
- (2) Write us at Elocksys Incorporated, 322 North El Camino Real Suite A Encinitas, CA 92024
- (3) Phone number (760) 479-1413