


QUICK GUIDE


CARHOME BUTTON REMOTE

Model: HB-318

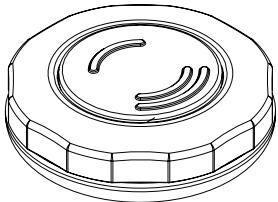

P/N : 101Y695-001

What's in the Bag

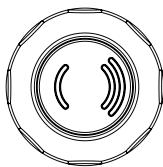

2 CarHome Button Remote
(Battery inside)



3M 4905 VHB™ Tape

How to pair and control with opener

- 1 Press the setting button on the opener device.



- 2 The segment LED on the opener device will display P




Press the button to open the door
Press the button to close the door

- 3 Press the or button on the remote.




How to set up in your car

- 1 Determine the installation location
(can be placed anywhere in your vehicle).

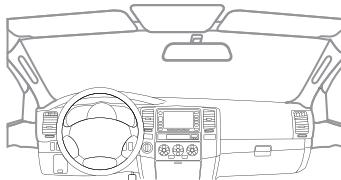


- 2 Attach one side of the 3M tape to the backside of Carhome Button Remote.

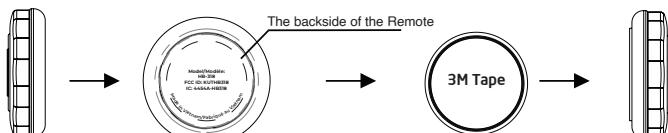

How to set up in your car (continue)

- 3 Attach the Remote to the installation location (step 1) using the other side of the 3M tape

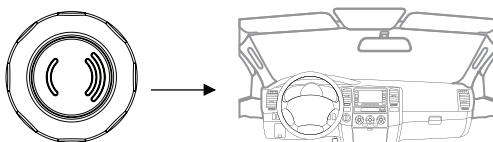

Complete installation


Remove this remote

To remove the CarHome Button Remote, you will need to peel off the 3M 4905 VHB™ tape. We recommend visiting the 3M website (www.3m.com) for guidance on the best methods to remove 3M 4905 VHB™ tape from your automobile.




Change battery

1. Proceed to detach the remote into two parts.

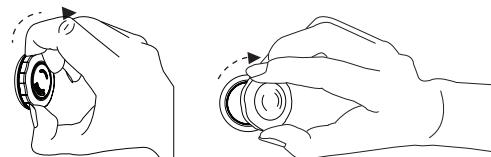

2. Replace the battery by gently pushing out the old battery from the battery slot and replacing it with a new battery.

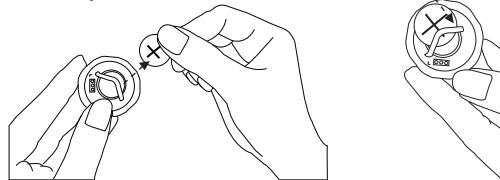

NOTE.

Using CR2023 and BR2023 batteries for the best controller performance.

Passcode ON or OFF

By default, the CarHome Button Remote is set to passcode OFF. If you want to turn the passcode ON, follow these steps:

1. Press and hold the button (about 6 seconds) until the LED blinks quickly. Then release the button the LED turns off.
2. Enter your password. If this is the first time passcode is turned ON the default factory password is 222 (press the button 3 times)
3. Press the button to confirm. The LED will blink 1 time if your password is correct and the LED will blink 3 times if your password is incorrect.
To turn OFF the passcode, repeat the steps above.

Change passcode

Only change the passcode while the HB-318 has passcode ON.

1. Press and hold the button (about 10 seconds) until the LED blinks slowly. Then release the button the LED will turn off.

2. Enter your old password (Ex. 222), then press the button to confirm.

If the entered passcode is correct the LED will blink 1 time then you enter your new passcode and press button to confirm. The LED will blink 1 time if the password was changed successfully.

If the entered passcode is incorrect the LED will blink 3 times and exit the setup program.

NOTE

The passcode can be 2 to 8 digits. Number 1 is button. Number 2 is button.

FCC and ISED

This device complies with Part 15 of the FCC Rules and Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules and Industry Canada ICES standards. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an antenna to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

Cet appareil est conforme aux dispositions de la partie 15 du règlement de la FCC et aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) L'appareil ne doit pas produire de brouillage nuisible, et (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ATTENTION: Tout changement ou modification de cet appareil, non expressément approuvés par la partie responsable de la conformité, pourrait annuler le droit de l'utilisateur d'utiliser l'équipement.

NOTE: Cet appareil a été testé et déclaré conforme aux limites imposées d'un dispositif numérique de la classe B, conformément à la partie 15 du règlement de la FCC et de la norme ICES d'Industrie Canada. Ces limites sont conçues pour fournir une protection raisonnable contre le brouillage nuisible dans une installation résidentielle. Cet équipement génère, utilise et peut émettre des communications radio. Cependant, s'il n'est pas installé et utilisé conformément aux instructions, il est susceptible de provoquer des interférences nuisibles aux communications radio. Cependant, rien ne garantit l'absence de brouillage nuisible dans une installation particulière. Si cet équipement provoque un brouillage nuisible à la réception radio ou télévisée, ce qui peut être identifié en éteignant et en rallumant l'équipement, il est recommandé à l'utilisateur d'essayer de résoudre le brouillage avec l'une ou plusieurs des mesures suivantes: (1) Réorienter ou déplacer l'antenne de réception. (2) Augmenter la distance entre l'équipement et le récepteur. (3) Connecter l'équipement dans une prise de courant sur un circuit différent de celui auquel le récepteur est branché. (4) Pour obtenir de l'aide, consulter le revendeur ou un technicien radio / TV expérimenté.

UL 4200A

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.



- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- The compatible battery type: BR2023, CR2032.
- The nominal battery voltage: 3V.
- "Do not mix old and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."
- "Ensure the batteries are installed correctly according to polarity (+ and -)."
- "Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations."
- "Non-rechargeable batteries are not to be recharged."
- "Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."
- "Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children."

WARNING

- INGESTION HAZARD:** This product contains a button cell or coin battery. **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause
 - Internal Chemical Burns in as little as 2 hours.**



WARNING

- KEEP** new and used batteries **OUT OF CHILDREN**
- Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body

Customer Service

Need help?

Visit our website or call our Customer Service
9:00 am - 5:00 pm EST, Monday - Friday

1-800-304-1187
WWW.SKYLINKHOME.COM