

1-Button Remote

2-Button Remote

3-Button Remote


Model MP-318-1
Model MP-318-2
Model MP-318

1. INTRODUCTION

Thank you for your purchase of Skylink® Remote, Model MP-318-1/MP-318-2/MP-318

The following items are included in this package:

- One of MP-318 series Remotes
- Lithium Battery CR-2032 (Installed)
- User's Instructions

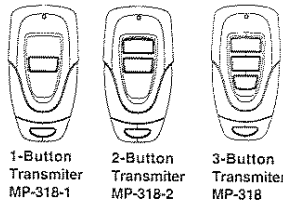

There are one or two or three buttons on transmitter, each button can be programmed to control Skylink garage door opener directly.

Follow one or more instructions below in Section 2 to program transmitter MP-318 to the receiver or receivers you want to control.


2a. PROGRAM A TRANSMITTER TO THE SKYLINK® GARAGE DOOR OPENER - EQ SERIES

You need to do the programming in order to add the transmitter to a Skylink® Garage Door Opener.

Skylink® Garage Door Opener can learn up to 16 remote controls.

To program the transmitter to the EQ Garage Door Receiver, follow the instructions below:

1. Press the LEARN/SET button once on the garage door opener.
2. Once the LEARN/SET button is pressed, the LEARN LED will flash. You may release the LEARN/SET button.
3. Within 30 seconds, press any one of the 3 buttons on the transmitter that you want to program to the receiver.
4. Once the transmitter is programmed, the LEARN LED will turn off.
5. You may now operate the garage door opener with this new transmitter.
6. To program a transmitter to control another garage door opener, repeat process (1) to (4) to program another button on the transmitter.

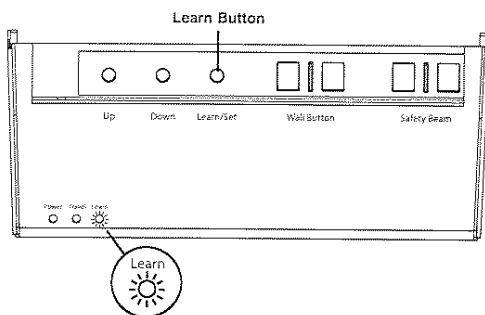

2b. PROGRAM A TRANSMITTER TO THE SKYLINK® GARAGE DOOR OPENER - IQ SERIES

To program the transmitter to the Skylink® IQ series Garage Door Opener, please follow the user's instruction from the Garage Door Opener.

2c. PROGRAM A TRANSMITTER TO THE IN-CAR REMOTE SYSTEM

In order to remotely control the Skylink Garage Door Opener with your in car remote system, a transmitter must be programmed to your in car remote system.

To program the transmitter to your in car remote system, a "Learn" code must be transmitted, follow the instructions below to transmit the "Learn" code to your in car remote system. Please disable the password feature in the Skylink Transmitter before programming to the in-car remote system.

1. Refer to the user's instructions of your in car remote system to put your in car remote into programming mode.
2. Press and hold the button on the Skylink transmitter you already programmed for 10 seconds to program to the car system. Release the button when the red LED changes from solid to flashing. The red LED on the transmitter will be flashing for the next 20 seconds advising you to transmit the 'learn' code.
3. Once the transmitter is programmed, your in car remote system will quit from programming mode. Your in car remote system is ready to be used after the next step.

2c. PROGRAM A TRANSMITTER TO THE IN-CAR REMOTE SYSTEM (CONT)

Note: Once the in car remote system is in programming mode, you have to finish the programming as soon as possible. The Skylink transmitter will quit from the programming mode after 20 seconds even if you have not finished the programming. If this occurs, you may have to start it over again.

It is recommended to erase the programmed in car remote system for security purpose when upon the sale of the vehicle. To erase the programmed in car remote system, please follow the user's instructions of your in car remote system.

3. TROUBLE SHOOTING

Q: What can I do if the door opener does not react after I press the button on the transmitter ?

- A: - Ensure when the button on the transmitter is pressed, the red light on the transmitter comes on. Otherwise, check if the battery is inserted properly.
- Make sure the correct button on the transmitter is pressed.
- Ensure the transmitter has been programmed to the receiver. Refer to section 2 for how to program a transmitter to the receiver.

Q: Why won't my in-car remote learn the signal from the Skylink transmitter?

- A: If you have enabled the password feature in the Skylink transmitter, please disable the password function before programming.

Q: Why won't my in-car remote accept the signal from the Skylink transmitter?

- A: Try to keep the Skylink transmitter close to your in-car remote while programming.

Q: What do I do if the garage door opener does not operate after I press the button on the in-car remote?

- A: Ensure that the in-car remote has been learnt to the Skylink transmitter. If your in-car remote has more than one button, verify which button has been learnt.

4. BATTERY

3 Volt lithium battery (CR 2032) (included).

It is time to change the battery when the red LED on the transmitter does not turn on when either button is pressed.

5. ADVANCED FEATURE - PASSWORD PROTECTION


Password protection (Only available for MP-318 (Not available for MP-318-1 or MP-318-2))

The MP-318-3 can be password protected. If you enable the password protection, you can only operate MP-318-3 after you input the correct password.

Password can be 2-8 digits long, which is a combination of 1, 2 and 3. For example, password can be 1, 2, 1, 2. To input this password, you have to press button [1], then [2], then [1], then [2].

Note:

[1] = Button 1 [2] = Button 2 [3] = Button 3

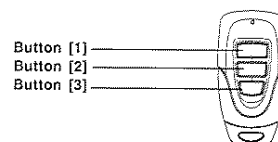

Note:

The time-out period is 1 second during above password input.

The factory default password is 2, 2, 2, and this password function is disabled out of factory.

5. ADVANCED FEATURE - PASSWORD PROTECTION (CONT)

Change password

1. Press 1 and 3 simultaneously and hold for more than 6 seconds until the LED changes from flashing quickly to flashing slowly.
2. Input old password.
3. Press 1 and 3 once simultaneously to confirm. If the password is wrong, the LED will flash 3 times and you have to start it over from step 1.
4. Input new password.
5. Press 1 and 3 once simultaneously to confirm.
6. Input new password again.
7. Press 1 and 3 once simultaneously to RE-confirm. If the password is different from the one of step 4, the LED will flash 3 times and you have to start over from step 1. Otherwise, the password has been changed to the new one and the password protection is enabled.

Disable password

1. Press 1 and 3 simultaneously and hold for more than 2 seconds until the LED flashes quickly but not until the LED flashes slowly.
2. Input password.
3. Press 1 and 3 once simultaneously to confirm. If the password is correct, the password protection will be disabled.

Enable password

1. Press 1 and 3 simultaneously and hold for more than 2 seconds until the LED flashes quickly but not until the LED flashes slowly.
2. Input password.
3. Press 1 and 3 once simultaneously to confirm. If the password is correct, the password protection will be enabled.

You can toggle the two states - password protection enabled or disabled.

Note:

The time-out period is 10 seconds during any of the above setting operations. After 10 seconds, the LED will flash 3 times and the remote will exit from setting.

If you forget your password and want to reset MP-318-3, follow the steps below:

1. Press 1 and 2 simultaneously and hold for more than 10 seconds until the LED flashes.
2. After you release 1 and 2, the LED will be turned off and MP-318-3 will be reset. The password will be reset to factory default.

After the reset, password protection is removed but the remote can not control any receiver until you reprogram it to receivers you want to control.

6. FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

7. WARRANTY

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase and a Return Authorization are required.

8. CUSTOMER SERVICE

If you would like to

- find out the up-to-date specifications
- know more about features and applications
- download documents, i.e. user's instructions
- order Skylink products

or if you have difficulty getting products to work, please:

1. visit our FAQ section at www.skylinkhome.com, or
2. email us at support@skylinkhome.com, or
3. call our toll free at 1-800-304-1187 from Monday to Friday, 9 am to 5 pm EST. Fax (800) 286-1320

IC

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CUSTOMER SERVICE

17 Sheard Avenue, Brampton, Ontario, Canada L6Y 1J3
Email: support@skylinkhome.com
<http://www.skylinkhome.com>
P/N: 101Y066-001
Patent Pending
©2010 SKYLINK GROUP