 


# WS-100 Wireless Remote Control - IMPORTANT SAFETY INSTRUCTION

## Introduction

Skylink wireless remote allows you to operate any electrical appliance (that meets the product's rating) indoors or outdoors without rewiring. Enclosed you will find:

- Keychain transmitter with 12-volt alkaline battery installed.
- Receiver

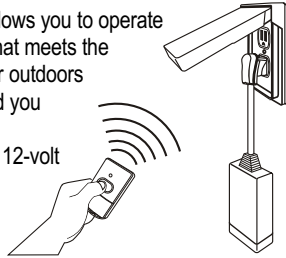 


## Installation

### **Plug in the receiver to an electrical outlet (indoors)**

Plug in the receiver to an electrical outlet fully. The receiver requires a grounded outlet. If you do not have a grounded outlet, please contact an electrician to upgrade your electrical system.

If you are using the receiver outdoors, read the extra precautions below.

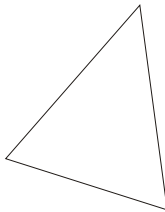 


### **Plug in the receiver to an electrical outlet (outdoors)**

Plug in the receiver to an electrical outlet fully. Let the receiver hang downward so moisture doesn't accumulate in the outlet. Install cord and unit above ground level with the receptacle in downward position. A weather protective cover must be used in order to prevent rain or moisture from entering the unit.

*Note: Not for water immersion or for use where direct exposed to water. Store indoors when not in use.*

*Note: The National Electrical Code and Canadian Electrical Code (and most local codes) require that outside outlets be protected by a Ground Fault Interrupter (GFI).*

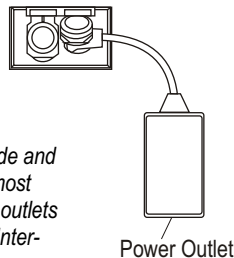

### **Plug in the device you wish to control into the outlet located on the bottom of the receiver**

Do not exceed the maximum load specifications listed. If you are not sure what is the rating of an appliance, check with an electrician before plugging it into the receiver.

## Operation

Press the button on the transmitter (battery already installed), the light on the transmitter will turn on and the device you plugged into the receiver should also be on immediately. Press the button on the transmitter again to turn the device off.

## Battery Replacement

Use 12-volt alkaline battery (Type 23A).

To replace, open the battery compartment cover, and replace the old battery with a new one. Do not dispose of battery in fire. Battery may explode or leak.

## Caution

Risk of electric shock, do not use with extension cord or near water or where water may accumulate. Keep plugs and receptacles dry. For use only on GFCI protected circuits.

## Warranty:

If, within one year from date of purchase, this product should become defective (except battery), due to faulty workmanship or materials, it will be repaired or replaced, without charge. Proof of purchase is required.

## FCC:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

## WARNING

Changes or modifications to this unit not expressly approved by the party responsible of compliance could void the user's authority to operate the equipment.

Skylink will not be held liable or responsible for any misuse or application of this product other than for its intended use.

## Specification

RANGE: Up to 100 feet

INPUT: 120VAC 60Hz

MAXIMUM LOAD:

RESISTIVE ..... 8A (960W)

INCANDESCENT..... 300W

BATTERY (TRANSMITTER):

12-volt alkaline battery