

Mass Notification Pendant

Quick Reference Guide





© 2017 RF Technologies, Inc. All specifications subject to change without notice.

All Rights Reserved. No Part of this work may be reproduced or copied in any form or by any means without written permission from RF Technologies, Inc.

CONTENTS

CONTENTS	1
WARNINGS AND CAUTIONS	3
Warnings	3
Bio-Incompatibility Notice	5
Cautions	6
Federal Communication Commission (FCC) Compliance ...	6
PREFACE	7
Overview	7
Intended Audience	7
Contact Information.....	7
Technical Support.....	7
Customer Care	8
Sales	8
Product Warranty	8
GENERAL INFORMATION	9
Introduction.....	9
Pendant	9
Display	9
LED Light Guidelines	11
Activate	13
Batteries	13
Alarms	14
Alarm Activation.....	15
Pendant in Alarm	15
Mass Notify in Alarm.....	15
Pendant Acknowledge	16
Alarm Tracking.....	16

Initiating Mass Notification	17
Alarm Acknowledge	18
Alarm Clearing	18
TESTING AND CARE	21
Pendant Testing	21
Periodic Testing	21
Visual Inspection.....	21
Operation	22
Storage.....	22
Pendant Cleaning and Care.....	23
Approved Cleaners	24
Non-Approved Cleaners	24
SPECIFICATIONS.....	25
Pendant	25
REVISION HISTORY.....	27

WARNINGS AND CAUTIONS

It is important for your facility to implement and enforce the following WARNINGS and CAUTIONS in order to keep all equipment functioning properly. Disregarding the information and instructions in this document is considered abnormal use and may result in injury or system failure.

Warnings



ACCESSORIES (SUPPLIES)—To ensure resident safety and proper operation of equipment, use only parts and accessories manufactured or recommended by RF Technologies, Inc. Parts and accessories not manufactured or recommended by RF Technologies, Inc. may not meet the requirements of the applicable safety and performance standards.

Failure to use the components and supplies specified by RF Technologies, Inc. may result in equipment and/or system failure.

EXPLOSION HAZARD—These devices should not be used in the presence of flammable gas mixtures. It should also not be used in oxygen enriched atmospheres.

STATIC DISCHARGE—Do not touch the PCB or battery contacts. Damage to the device may result.

SYSTEM WIRING—All permanent supply connections must be done in accordance with National Electric Code, NFPA 70.

INSTALLATION AND CONFIGURATION—It is the responsibility of the facility to follow the installation instructions carefully, as outlined in the applicable system guides, and to use the components and supplies specified by RF Technologies, Inc. for all installations.

Failure to use the components and supplies specified by RF Technologies, Inc. may result in equipment and/or system failure.

INSTRUCTIONS FOR SET UP AND USE—It is the responsibility of the facility to follow the instructions for set up and use carefully, as outlined in this manual, and to use the components and supplies specified by RF Technologies, Inc. for set up and use.

Failure to use the components and supplies specified by RF Technologies, Inc. may result in equipment and/or system failure.

SYSTEM INSPECTION—It is the responsibility of the facility to establish and facilitate a regular inspection schedule for your system. RF Technologies, Inc. recommends reviewing the system health on a monthly basis.

To arrange for a quarterly inspection by RF Technologies, Inc., call our Technical Support Department at (800)-669-9946 or (262) 790-1771.

Failure to provide regular inspection of these products may result in equipment and/or system failure.

SYSTEM MAINTENANCE AND TESTING—It is the responsibility of the facility to establish and facilitate a regular maintenance schedule for your system. This includes regular inspection, testing, and cleaning. RF Technologies, Inc. recommends monthly maintenance and testing of your system. It is also recommended that your facility keep records of maintenance and test completions.

Failure to provide regular maintenance and testing of these products may result in equipment and/or system failure.

USER TRAINING—Only users who have received adequate training on the use of the system, as outlined in this manual, should use the system. It is the responsibility of the facility to ensure all users have been trained.

Failure to adequately train employees may cause system failure due to user error. In addition, incorrect use of the equipment may also result in system failure.



MR UNSAFE

All RF Technologies transmitters, pendants and banding material “PRODUCT” have been determined to be MR Unsafe as defined by ASTM F 2503-05. Use of “PRODUCT” in a Magnetic Resonance Imaging system will cause injury to residents and staff, MR system malfunction or “PRODUCT” malfunction. Do not bring “PRODUCT” into the MR system area and follow your facilities policies to classify and label “PRODUCT” as MR Unsafe.

Bio-Incompatibility Notice

Do not use Pendants with people that have sensitivities or allergies to device materials. The device materials include Acrylonitrile butadiene styrene (ABS), Silicon, Rubber, and Neoprene.

Cautions



DISPOSAL—At the end of their service life the products described in this manual, as well as accessories (i.e. lithium batteries, etc.), must be disposed of in compliance with all applicable federal, state and local guidelines regulating the disposal of products containing potential environmental contaminants. Dispose of the packaging material by observing the applicable waste control regulations

PRODUCT WARRANTIES—Failure to follow the Warnings and Cautions in this guide voids any and all Product Warranties.

WORN OR DAMAGED PARTS—If the devices are worn or damaged, you must have the product serviced. For more information, see the section entitled “Service and Return.”

Federal Communication Commission (FCC) Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This portable transmitter with its antenna has shown compliance with FCC’s SAR limits for general population / uncontrolled exposure. The maximum listed SAR level is 0.18 W/kg (body). The antenna used for this device must not be co-located or operating in conjunction with any other antenna or transmitter.

PREFACE

Overview

This guide provides detailed instructions about using the Mass Notify Pendant as well as specific requirements.



WARNING: The Help Alert System is designed and intended to work in conjunction with a facility's overall security program, including reasonable operating policies and procedures. It is the responsibility of the facilities security team to maintain their best practices and operating procedure based upon Help Alert notifications.

Intended Audience

This User Guide is intended for users who use the Mass Notify Pendants. It includes detailed information about care and cleaning, testing the pendants, alerts, and pendant specifications.

Contact Information

For more information about RF Technologies, Inc. products, go to www.rft.com.

Technical Support

For technical support, contact the Technical Support Team at:

(800) 669-9946 or (262) 790-1771

tech@rft.com

**Customer
Care**

For questions on part replacement or for ordering new parts, contact the Customer Care Team at:

(800) 669-9946, opt 5

customer care@rft.com

Sales

For questions regarding system add-ons, contact your PinPoint Sales Manager.

**Product
Warranty**

Product Warranty information can be found with your original system proposal and invoice.

GENERAL INFORMATION

Introduction

This chapter provides general information about the pendants. It includes information on the Mass Notify Pendants, displays, alarms, and changing batteries.

Pendant




The Help Alert Mass Notification Pendant is a small wireless transmitter that enables users to call for assistance and to be located within their facility. Upon activation, it can vibrate to provide tactile feedback to the user and a bright LED flashes until cleared.

NOTE: To prevent damage to the Mass Notify Pendant, avoid humid/wet conditions and dropping the device.

When a user activates the Mass Notify Pendant, an alert is generated and can be viewed via the Help Alert Software.

Email and SMS notifications can be configured to monitor for alerts or devices requiring assistance (such as battery replacement).

Display

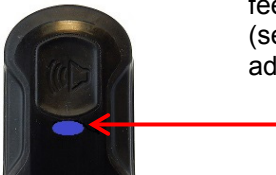

The LED on the Pendant will provide feedback on to what the Pendant is doing (see the LED Light Guidelines for additional information).



The Mass Notify Pendant has 3 buttons:

- The primary button on the top activates an alarm within the Help Alert software.



- The two side buttons will activate a secondary alarm. The secondary alarm is activated by simultaneously pressing and holding both side buttons for ~2 seconds. Once activated, the Pendant will vibrate to let the user know the alarm has been sent.

NOTE: If Mass Notification is enabled and turned on in the software, the Mass Notification event will occur when both buttons are pressed.

If Mass Notification is not turned on in the software, then the secondary button activation will trigger a Priority Alert.









RADIO FREQUENCY: The radio frequency (RF) characteristics of certain building materials may interfere or block the Pendant's signal.






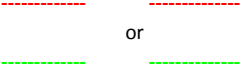





LED Light Guidelines

The LED on the Pendant is a status indicator of the Pendant. The meanings are in the following table:

Listed below is the pendant LED activity reference table:

- Blink
- Solid
- P** Button Press

LED Sequence (over 10-15 sec)	Meaning	How to Respond
	Blinking Normal operation Battery status is good	No action required
	Blinking Normal operation Battery status is low	Change batteries immediately
	Cannot connect to AP Battery status is good	Move to area within range of network and wait < 5 min for blinking pattern to change
	Solid Orange – Brown Out State, the battery made momentary contact with the terminal and did not power up properly	Cycle the batteries
	Alarm is being triggered	The sequence was started by user holding top button for > 1 second
	MassNote Alarm is being triggered	The sequence was started by user holding both side buttons for > 2 second

LED Sequence (over 10-15 sec)	Meaning	How to Respond
	Alarm is escalated to MassNote triggered	The sequence was started by user holding both side buttons for > 2 second during alarm
	Pendant is in alarm	No action required
	Pendant is in MassNote alarm	No action required
	Pendant Alarm has been acknowledged	No action required
	MassNote Alarm has been acknowledged	No action required
	Pendant is not receiving updates from system server	Attempt to move within range of the network
	Rapid red blinking – Firmware is being updated	Wait until finished before use
	Red-green-red flashing – Pendant configuration is being updated	Wait until finished before use
	User has forced the Pendant to check in	Sequence was started by user pressing button five times
	Forced Pendant check-in not reaching system server	Attempt to move within range of the network, or retry
	Pendant Blinking Orange once a second – Pendant was reset to manufacturer defaults	Exchange with supervisor

LED Sequence (over 10-15 sec)	Meaning	How to Respond
	No Activity – Pendant may not be functioning	Remove/Replace Batteries, or exchange with supervisor

Activate

Mass Notify Pendants are pre-configured to customer specific environments. To activate the Pendant, insert the batteries.

Batteries

RF Technologies uses only Energizer Ultimate Lithium AAA batteries (model # LR92). These batteries provide more battery life than other batteries of the same size. Depending on pendant use, the batteries will last approximately 6 months.

To replace a battery in a Mass Notify Pendant:

1. Unlock the battery door either with the provided tool, or by rotating the latch.



2. Open the battery door.



3. Remove the old batteries and dispose of properly.
4. Insert the new LR92 batteries in the battery compartment. Be sure to align the positive (+) end of the battery (plus side up) as marked inside the battery holder.



5. Close the battery door
6. Lock the battery door either with the provided tool, or by rotating the latch.

Alarms

Watching for Active Alerts

An active alert is triggered when an individual has pressed the Alert button on their pendant or when an equipment tracker has been tampered with.

1. Navigate to the URL provided by the system administrator
2. Log in using your assigned username and password
3. If there are no alerts in the system, the page will contain a message explaining that there are No Active Alerts

Alarm Activation

Trigger an Alarm

To activate the alarm, press and hold the button for at least one second. When activated, the pendant vibrates briefly and the red light flashes until the alarm is cleared.



Trigger a Mass Notification

Firmly press and hold the two side buttons until you feel the pendant vibrate (~2 seconds)



Pendant in Alarm

The LED light shines **RED** for 10 seconds at a time to indicate that the pendant is in an alarm state



Mass Notify in Alarm

The light shines **BLUE** for 10 seconds at a time to indicate that the pendant is in an alarm state

NOTE: As the other pendants in the system receive the mass notification signal, they will vibrate and enter the mass notification state as well.




Pendant Acknowledge




Alarm Tracking

When a responder has indicated that help is on the way, the light will begin to shine **GREEN** for 10 seconds at a time.

1. If one or more alerts are active in the system, a **RED** card will appear on the left-side of the screen containing information about who or what triggered the alarm and their calculated location.

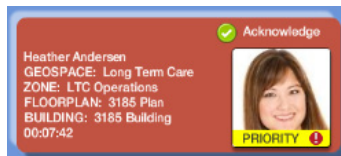

2. Priority Alarms will show first and have a Priority indication on the card

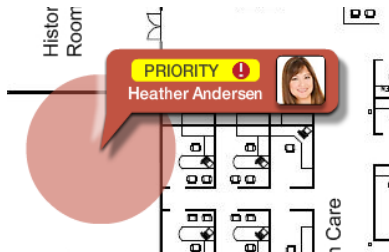

3. The right-side of the screen will display a map of the floor/building

- When a mass notification is triggered, a **PURPLE** card will appear on the left-side of the screen containing information about who or what triggered the alarm and their calculated location.



- Mass Alert alarms will **always** display first in the list and have a MASS ALERT indication on the card



Initiating Mass Notification




- If the notification needs to go out to all participants, click the **YELLOW MASS ALERT** banner to initiate the mass alert
- If asked if you want to Initiate MASS ALERT?, click the **Yes** button
NOTE: This will only appear when Mass Notification User Consent has been configured for the system
- Every pendant within the system will start to alarm and the **RED** cards will appear in the list

Alarm Acknowledge



1. Address the alert(s) according to priority by clicking the alert's information card on the left-hand side of the screen
2. Click the Acknowledge button to indicate that the alert has been seen
NOTE: If this is a mass notification, click the Acknowledge button on the original Mass Alert notification
3. The card will turn **ORANGE** to differentiate it from any new alarms that might appear in the system

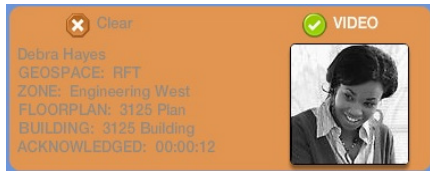

4. If the alarm is a mass notification, every pendant within the system will turn to **ORANGE** when it is acknowledged
5. Once a responder has Acknowledged an alert in the system, the light on the alarming pendant will turn **GREEN** to indicate to the user that assistance is on the way

Alarm Clearing



1. Once an alert situation has been Acknowledged and addressed according to your facility's protocols, click the **Clear** button
NOTE: If this is a mass notification, click the **Clear** button on the original Mass Alert notification and all pendants within the system will be cleared

2. The application requires the user to enter a brief explanation of the situation before the alert can be cleared



You cannot clear individual pendants when a mass notification alarm has been triggered. Clearing must be done on the original alert.

This page intentionally left blank.

TESTING AND CARE

Pendant Testing

Prior to use, verify the pendant is ready to use by checking the LED indicator.

The status LED should be blinking green. This indicates that the Pendant is within range of the WiFi network and will alarm in the software if the button is pressed.

Periodic Testing

1. Make sure before testing your Pendant that you have followed all the protocols in place by your facility to indicate you are performing a test.
2. In the Help Alert software, flag the next alarm for your Pendant (via MAC ID) as a Test. To do this you need Administrator credentials.
3. Push and hold the button on the pendant you are trying to test.
4. When the alert is seen in the software, follow the protocol in place to acknowledge and clear the alarm.
5. Your facility must keep the records for test and pendant inspection.

Visual Inspection

1. Visually inspect the device for damage or loose parts.

Operation

1. The main button acts as the primary alert trigger. When the button is held for the amount of time configured in the software (default 1 second), the Pendant will enter into an alarm state and send the alarm information to the Help Alert server.
2. The Pendants location will update in the software every 10 seconds and no other action is required from the Pendant user. Acknowledging and Clearing alarms happens in the software.
3. The two side buttons act as the Mass Notification trigger. When both side buttons are held down simultaneously for the appropriate amount of time (~2 seconds), the Pendant will vibrate and the LED will turn blue to let the user know that a Mass Notification alert has been sent to the server.
4. The Pendants location will update in the software every 10 seconds and no other action is required from the Pendant user. Acknowledging and Clearing alarms happens in the software.

Storage

Store unused Pendants in an area that has adequate WiFi coverage to prolong battery life.

Avoid storing Pendants in metal drawers or lockers as this will drain the batteries quicker.

Pendant Cleaning and Care

This section provides detailed information about cleaning and caring for a pendant.



CAUTION: Use of non-approved cleaners on pendants can cause permanent damage and will void any and all warranties.



CAUTION: Using an approved cleaner does not confirm the suitability of the cleaner to meet your infection control standard; it only indicates that the Pendant will not be harmed by the cleaner.

The pendants may be sprayed or rinsed with water or the approved cleaners during cleaning, but must NOT be soaked. Soaking pendants may result in equipment and/or system failure.



NOTE: In order to avoid inadvertent alarms, cleaning procedures must be performed with care so as to not press the buttons.

Approved Cleaners

Clean the Mass Notify Pendant with a rag moistened with warm soapy water only.


Non-Approved Cleaners

These cleaners may cause plastic embrittlement and erosion.

Other cleaning agents (such as Isopropyl Alcohol) will weaken or damage the device.

3M [®] Neutral Quat	Hi-Tor [®] Plus
Airx [®] 109A	Isopropyl Alcohol
Cavicide [®] Caviwipes [™] Cavicide1 [™] Caviwipes1 [™]	PDI [®] Sani-Cloth [®] HB PDI [®] Sani-Cloth Plus PDI [®] Super-Sani PDI [®] Sani-Cloth [®] AF3
Clorox Healthcare [®] Hydrogen Peroxide Cleaner Disinfectants	Quest 256 [®]
Ecolab [®] Quik Fill 920	Steriplex [®] SD RTU
Health-Tec [™]	Virex [®] II-256 Virex [®] TB Virex [®] HB
Bleach Cleaners containing Bleach	Cidex [®] Activated Cidex [®] Plus Cidex [®] OPA
3M [™] Phenolic	

SPECIFICATIONS

Pendant	
Size	8.0 x 2.5 x 2.75 cm (without bracket)
Weight	2.1 ounces
Color	Black
Operating Temperature	32–140° Farenheit 95% non-condensing, relative humidity
Storage Temperature	-40–140° Farenheit
Composition	Latex Free ABS Plastic
Battery Life	6 month, Energizer L92 – AAA Lithium
Frequency	2.412 – 2.462 GHz
Regulations	FCC, Part 15.212

Part Number	Description
1000-9160	Mass Notify Pendant w/ Finger Latch, Configured
1000-9165	Mass Notify Pendant w/ Wrench Latch, Configured
1000-9170	High Priority Pendant w/ Finger Latch, Configured
1000-9176	High Priority Pendant w/Wrench Latch, Configured
0500-0225	Hinge Spring Belt Clip
0550-0226	Cap Lock Wrench

REVISION HISTORY

Revision	Change
A	Release



3125 North 126th Street, Brookfield, WI 53005
Phone 800.669.9946 fax 262.790.1784
www.rft.com

0510-0543-A
Release Date: 09/2017

