


# LCD TV

---

**OWNER'S MANUAL**  
**MODEL: L26GAZ5**  
**L32GAZ5**

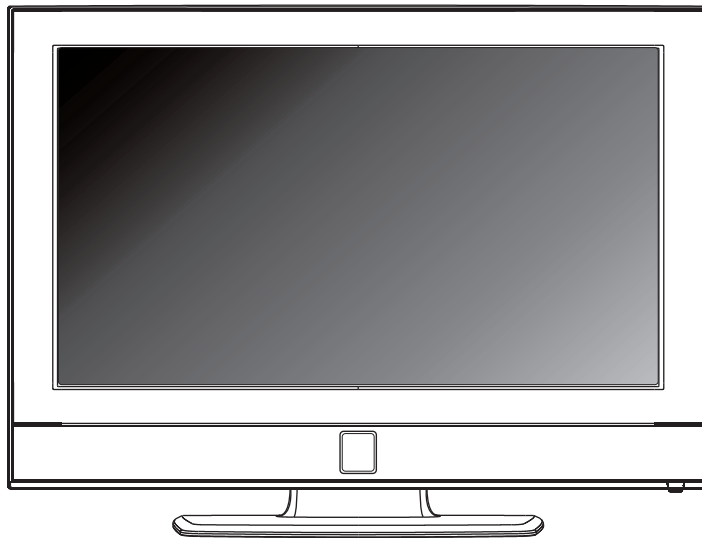

Read this manual before operation

# TABLE OF CONTENTS

CAUTION AND WARNING .....	3
IMPORTANT SAFETY INSTRUCTIONS .....	5
FCC Rules .....	5
CLEANING AND MAINTENANCE .....	6
SAFETY PRECAUTIONS .....	7
Set up.....	7
AC Power Supply Cord .....	7
If Problems Occur During Use.....	7
When Using the TV Set.....	8
INSTALLATION .....	8
Selecting a Location for the TV.....	8
Optional External Equipment.....	8
FRONT PANEL .....	9
REAR PANEL .....	10
REMOTE CONTROL LAYOUT .....	11
REMOTE CONTROL INSTRUCTIONS.....	13
CONNECTIONS AND EXTERNAL INPUT SETTINGS .....	14
TURNING ON AND OFF THE TV .....	15
TURN ON LCD TV .....	15
TURN OFF LCD TV .....	15
SELECT ON SCREEN LANGUAGE .....	15
VOLUME ADJUSTMENT .....	15
ADJUST THE ON SCREEN DISPLAY .....	16
CHOOSING TV CHANNEL .....	16
SELECTING INPUT SOURCE .....	17
PICTURE MENU OPTIONS .....	17
Picture Mode.....	17
Contrast.....	18
Brightness.....	18
Sharpness.....	18
Color.....	18
Tint (NTSC Input only).....	18
Aspect Ratio .....	18
AUDIO MENU OPTIONS.....	18
Audio Mode.....	18
Audio Language .....	19
Bass .....	19
Treble .....	19
Balance .....	19
Digital Audio Output.....	19
SETUP MENU OPTIONS .....	19
Tuning Band.....	19
DTV-Signal.....	19

Auto Channel Search.....	19
Add On Channel Search.....	20
Manual Channel Set.....	20
Channel Labels.....	20
Menu Language.....	20
Reset.....	20
<b>FEATURE MENU OPTIONS .....</b>	<b>21</b>
Time Set.....	21
Time Set Mode .....	21
Time Zone.....	21
Sleep Timer.....	21
Advanced Video Menu .....	21
Password Set.....	22
Parental Control.....	22
US Ratings.....	22
MPAA .....	23
TV Rating.....	23
Advanced Parental Lock.....	23
Canadian French.....	24
Digital Closed Captions.....	24
<b>VGA MENU OPTIONS.....</b>	<b>25</b>
VGA Set .....	25
H-Position .....	25
V-Position.....	25
Phase.....	26
Clock .....	26
Position .....	26
Auto Adjust.....	26
Setting.....	26
<b>YPBPR MENU OPTIONS .....</b>	<b>26</b>
Component Setting .....	26
<b>HDMI MENU OPTIONS.....</b>	<b>27</b>
Time Set.....	27
Sleep Timer.....	27
Advanced Video Menu .....	27
<b>APPENDIX-TROUBLESHOOTING .....</b>	<b>28</b>
IDENTIFYING PROBLEMS .....	28
SETUP AND CONNECTION ISSUES.....	28
OSD MENU & REMOTE CONTROL ISSUES.....	28
PICTURE QUALITY ISSUES .....	28
SOUND ISSUES .....	29
CHANNEL ISSUES.....	29
VGA MODE ISSUES.....	29

## CAUTION AND WARNING



**CAUTION :** Changes or modifications not directly approved by the party responsible for compliance with the FCC Rules may void the users' authority to operate this equipment.

**CAUTION :** The monitor should not be exposed to water or any other liquids. Do not place any objects filled with liquids, such as vases, on or near the monitor.

**CAUTION :** Do not place this TV on an unstable cart, stand, or table. The TV may fall, causing serious injury to a child or an adult, and may result in serious damage to the TV. Use only with a cart or stand recommended by the manufacturer, or sold with the TV.

**NOTE :** Installation on concrete wall has passed UL safety test.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the TV.



**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

WARNING: THE MONITOR SHOULD NOT BE EXPOSED TO WATER OR ANY OTHER LIQUIDS. DO NOT PLACE ANY OBJECTS FILLED WITH LIQUIDS, SUCH AS A VASE, ON OR NEAR THE MONITOR.



CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT.

CAUTION: THESE SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED SERVICE PERSONNEL ONLY.

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING ACTIVITIES BY YOURSELF; CONTACT A QUALIFIED ELECTRICIAN FOR SERVICE OF ANY KIND.

CAUTION: RESULT OF EXPLOSION MAY OCCUR IF BATTERY IS INCORRECTLY REPLACED. ONLY USE BATTERIES WITH THE SAME SPECIFICATION AS THE ORIGINAL BATTERY INCLUDED BY THE MANUFACTURER.

## **FCC Rules**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# IMPORTANT SAFETY INSTRUCTIONS

1. READ THESE INSTRUCTIONS
2. KEEP THESE INSTRUCTIONS
3. READ ALL WARNINGS
4. FOLLOW ALL INSTRUCTIONS
5. DO NOT USE THIS PRODUCT NEAR WATER

Do not use this TV near moist surroundings. For example, do not use it near a bathtub, washbowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool, etc. The TV set should not be exposed to dripping or splashing conditions. Keep all liquid from getting into the TV set for safety.

6. CLEAN ONLY WITH DRY CLOTH

Unplug the TV from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

7. DO NOT BLOCK ANY VENTILATION OPENINGS. INSTALL IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS.

Vents and openings in the cabinet back or bottom are used for ventilation to ensure reliable operation of the TV and to protect it from overheating. These vents should not be blocked or covered. The openings should never be blocked by placing the TV on a bed, sofa, rug, or any other similar surfaces. This TV should never be placed near or over a radiator or heat resource. This TV should not be placed in an enclosed area such as bookcase or rack unless enough vents are provided or the manufacturer's instructions have been adhered to.

8. DO NOT INSTALL NEAR ANY HEAT SOURCES SUCH AS RADIATORS, HEAT REGISTERS, STOVES, OR OTHER DEVICES (INCLUDE AMPLIFIERS) THAT PRODUCE HEAT.
9. TAKE USE OF THE GROUNDING-TYPE PLUG. A GROUNDING TYPE PLUG HAS TWO BLADES AND A THIRD GROUNDING PRONG. THE THIRD PRONG IS PROVIDED AS A GROUNDING METHOD FOR YOUR SAFETY. IF THE PROVIDED PLUG DOES NOT FIT INTO YOUR WALL OUTLET, CONSULT AN ELECTRICIAN FOR REPLACEMENT OF THE OUTLET.
10. PROTECT THE POWER CORD FROM BEING PINCHED, STEPPED ON, OR RESTED ON BY ANY OBJECT TO

PREVENT BREAKAGE OF THE WIRE AND ELECTRICAL SHOCK.

11. ONLY USE ATTACHMENTS/ACCESSORIES SPECIFIED BY THE MANUFACTURER.
12. USE ONLY WITH CART, STAND, MOUNT, OR TABLE SPECIFIED BY THE MANUFACTURER OR SOLD WITH THE MONITOR. IF A CART IS USED, REMOVE THE MONITOR FROM THE CART BEFORE MOVING IN ORDER TO AVIOD INJURY CAUSED FROM THE MONITOR FALLING OFF OF THE CART.

Do not place this TV on an unstable cart, stand, mount, or table. The TV may fall and cause serious person injury or damage to the unit. A TV and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the TV and cart combination to overturn.

13. UNPLUG THIS PRODUCT DURING LIGHTNING STORMS OR WHEN UNUSED FOR LONG PERIODS OF TIME.

For added protection, unplug the power and cable/antenna during a lightning storm or when it will be left unattended and unused for long periods of time. This will prevent damage to the TV due to power line surges.

14. REFER ALL SERVICING TO QUALIFIED SERVICE PERSONNEL. SERVICING IS REQUIRED WHEN THE PRODUCT HAS BEEN DAMAGED IN ANY WAY. SUCH DAMAGES INCLUDE THE POWER CORD OR PLUG IS DAMAGED, LIQUID HAS BEEN SPILLED ON OR OBJECTS HAVE FALLEN ON TO THE UNIT, THE MONITOR HAS BEEN EXPOSED TO RAIN OR MOISTURE, THE UNIT DOES NOT OPERATE NORMALLY, OR HAS BEEN DROPPED.

15. Wet Location Marking

The monitor should not be exposed to water or any other liquids. Do not place any objects filled with liquids, such as vases, on or near the monitor.

