

FCC ID: L25301



SUPREME TOYS (H.K.) LTD.

INSTRUCTION

ITEM NO.301

WIRELESS STAGE MICROPHONE & AMPLIFIER

1. OPEN THE BATTERY COMPARTMENT AND INSTALL 1 "9V" AND 2 "AA" BATTERIES.
2. TURN ON THE MICROPHONE AND THE SPEAKER BASE.
3. TALK OR SING THROUGH THE MICROPHONE AND YOUR VOICE WILL BE TRANSMITTED THROUGH THE SPEAKER BASE.
4. IF THERE IS "FEED BACK" SOUND, TURN THE VOLUME DOWN OR PLACE THE MICROPHONE AWAY FROM THE BASE.

REMRK: USER CAN NOT MODIFY THIS PRODUCT.

Hong Kong Office : Rm 907-9, 9/F Tower B, New Mandarin Plaza, 14 Science Museum Road,
Tsimshatsui East, Kowloon, Hong Kong
Tel: 2317 5168 Fax: 2317 6607 E-mail: SUPREMEH@HKSTAR.COM
USA Office: 8348 C. Olive St. Rd.,
St. Louis, MO 63132, USA.
Tel: (314) 567-1777 Fax: (314) 567-1734 E-mail: IABDROB@AOL.COM