

#### 4 Transistors Walkie Talkies (Item 99129)

- SIMPLE & USEFUL “PRESS TO TALK” BUTTON
- SEND & RECEIVE MORSE CODE
- SAFETY FLEXIBLE ANTENNA

#### CAUTION :

1. Your Transceiver Set has been fully adjusted prior to shipment from the factory. Be sure not to touch the internal components other than replace batteries.
2. When the sound becomes weak, it is time to change the battery.
3. Always return the front “ON/OFF” button to the “OFF” position after playing.
4. Keep product in a dry and clean place.

#### HOW TO OPERATE YOUR TRANSCEIVER:

1. Open battery cover and snap in a 9-Volt battery.
2. Turn the front “ON/OFF” button to “ON” position to get product in a stand-by mode.
3. Turn the small knob on the top left corner for volume receives control.
4. Press the “TALK” button to transmit.
5. Release the “TALK” button to receive.
6. When transmitting, speak in a clear voice with the microphone about three inches (7.5 cm) away from your mouth.
7. Best transmission and reception are achieved when the antenna is held in a vertical position.

#### HOW TO USE MORSE CODE :

1. Switch the front “ON/OFF” button to “ON” position.
2. While pushing the “TALK” button, press in the “MORSE CODE” button momentarily and release for desired signal length.
3. When back to voice communication again, simply use normal “TALK” operation.

#### PRECAUTION:

Non-Rechargeable batteries are not to be recharged.

Rechargeable batteries are to be removed from the toy before being charged. (If

removable)

Rechargeable batteries are only to be charged under adult supervision.

Only batteries of the same or equivalent type as recommended are to be used.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the toy.

The supply terminals are not to be short-circuited

The packaging has to be kept since it contains important information.

Do not use rechargeable batteries.

Keep product away from extreme heat.

---

**REQUIRES 2x9V BATTERIES (NOT INCLUDED)**

For Product Questions Call 1-800-567-1774

Ask for Customer Service Only in the US and Canada.

DISTRIBUTED BY SUPREME TOYS (H.K.) LTD.

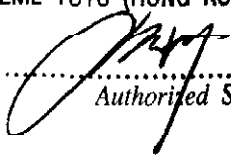
U.S.A. OFFICE : 602 Edgemoor drive, Hopkins, MN 55305, .U.S.A.

**WARNING:**

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT, SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Specifications are subject to change without notice

*or and on behalf of*  
超霸玩具(香港)有限公司  
SUPREME TOYS (HONG KONG) LIMITED

  
.....  
*Authorized Signature(s)*