


USER'S MANUAL

Thanks for your purchasing wireless Keyboard + Optical Mouse Combo. This wireless combo combines the exceptional comfort of a split-key keyboard layout with the high-performance wireless Optical mouse, and it adopts the latest 27MHz radio frequency technology that is different from traditional IR transmission. It assures 360-degree omni-directional working while in use and provides 256 ID codes to select (255 in random and 1 default). This combination fits where you want it without compromising performance, precision, or power.

Multimedia key

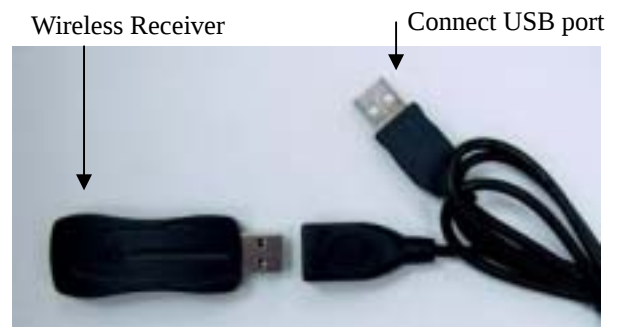

Contents:

- | | | |
|----|-----------------------------|------|
| 1. | Wireless optical mouse..... | 1pcs |
| 2. | Multimedia keyboard..... | 1pcs |
| 3. | Mini receiver..... | 1pcs |
| 4. | USB extension..... | 1pcs |
| 5. | 1.5V AA battery..... | 4pcs |
| 6. | User's manual..... | 1pcs |
| 7. | Multimedia drive CD..... | 1pcs |

Features:

- Comfortable split-key keyboard
- Cordless freedom through digital radio technology
- Customizable, keyboard-based access to any application, including email and multimedia
- Comfortable, optical mouse shape that fits good in right hand
- Powerful optical sensor for twice the speed and twice the accuracy of standard optical mice
- Windows 98SE/ME/2000/XP
- USB port supports "Plug and Play".

Warning: For USB device, Windows 98 does not provide default driver; OS version should be Windows 98SE or above. Connect receiver to USB port, computer will search the new hardware and request to install driver, put your OS Setup CD into CD-ROM and follow the instructions on the screen to finish the installation.

Installation

1. Install two AA batteries each to the mouse & keyboard
2. Connect the receiver to USB port
3. Turn on your computer; the receiver will automatically select the ID # for your mouse & keyboard. After LED light stops blinking, the ID code setting has been completed.

Warning: Do not use hybrid batteries that will lead to explode. Do not blend new and old batteries together that will damage the combo.

LED display

You can tell if your RF mouse & keyboard work well and smooth away the obstacles by checking the LED light. The meanings of the LED display are as following:

LED display	State	Indication
Lighting when you boot your PC	Connecting	Combo will try to connect the PC when you boot, at this moment the LED light is on and that means the receiver power supply has no problem.
Lighting you're your PC is ready	Unavailable	If the LED light is on when the PC is ready, that means your combo doesn't connect with the PC. Please refer to the "troubleshooting".

Blinking	Searching	When you are setting the channel, the LED light will keep blinking. Till the signals from combo and the Receiver have been connected, the LED light will be off automatically.
----------	-----------	--

ID codes setting

1. Press three buttons of wireless mouse (left/right/roller) and the button under the keyboard separately for 3 seconds at the same time. After LED light stops blinking, new ID code setting has been completed.
2. Move your mouse lightly. If LED light is blinking continuously that means the Receiver is ready for your combo.

Note:

1. You don't have to set up ID code unless you have additional wireless mouse or keyboard being set in the same area.
2. After you restart your computer or replace batteries, just move the mouse lightly; the Receiver will select the ID code automatically.

Warning: Please do the ID setting while the computer has been powered on first.

Installing driver

1. Boot your system
2. Insert the keyboard driver CD
3. Select the correct model and the system automatically installs keyboard drive

* Function Key of Keyboard

For Internet

	WWW Backward	Back to front page
	WWW Forward	Forward to next page
	WWW Stop	Stop connecting the page
	WWW Home	Back to Home page
	E-Mail	Open E-Mail account
	My Favorite	Open the my favorite folder
	WWW Refresh	Refresh the Web
	WWW Search	Search the Web

For Multimedia

	Multimedia*	Open Media Player
	Sleep	Sleep status
	Volume -	Volume -
	Volume +	Volume +
	Backward	Backward to previous song
	Stop	Stop playing CD
	Play/Pause	Play/Pause of CD
	Forward	Forward to next song
	Mute	Mute status/ push again to release

* Troubleshooting

1. If you feel the mouse or keyboard does not move smooth as usual....
2. Make sure the receiver is connected to the computer.
3. Place the batteries in the correct direction.
4. Make sure the batteries are sufficient to operate.
5. Make sure your OS is Windows 98SE/ME/2000/XP
6. If you use wireless mouse on a desk, which is made of metal, that will affect the performance of the mouse.
7. For mouse performance, place the receiver at least 20cm away from other electrical devices such as power box, TFT-LCD monitor...etc.
8. Refer to "ID code setting" and follow the instruction to install ID code again.
9. Replace new batteries and try again.
10. The optical sensors will perform poorly on the desktop, which is red, orange or yellow. Try to use a mouse pad to avoid this situation.

➤ **FCC Warning statement:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.**
- (2) This device must accept any interference received, including interference that may cause undesired operation.**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

---Reorient or relocate the receiving antenna.

---Increase the separation between the equipment and receiver.

---Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

---Consult the dealer or an experienced radio/TV technician for help

Installation and use of this Wireless Mouse device must be in strict accordance with the instructions included in the user documentation provided with the product. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or television interference caused by unauthorized modification of this device, or the substitution of the connecting cables and equipment other than manufacturer specified. It is the responsibility of the user to correct any interference caused by such unauthorized modification, substitution or attachment. Manufacturer and its authorized resellers or distributors will assume no liability for any damage or violation of government regulations arising from failing to comply with these guidelines.