

User's manual

1. Information to user:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

2. Introduction to transmitter's function



- a. Lock : Pressing and releasing the Lock Button will arm the system and lock all of the doors. Press and hold this button to activate Remote Panic with locking doors.
- b. Unlock : Pressing and releasing the Unlock Button will disarm the system and unlock all of the doors. Press and hold this button to activate Remote Panic with unlocking doors.
- c. Panic : Pressing and releasing the Panic Button the Remote Panic can be activated anytime, whether the vehicle's ignition is turned on or off, and has a 60 second duration of flashing light and alarming sound unless a transmitter is used to stop it.