

Crime Guard

Keyless Entry and Security

Model: Revolución

Owners and Installation Manual

New Products From Omega



EXCALIBUR
of America

MODEL: Excalibur-500



FREEDOM
KEYLESS ENTRY & SECURITY

Model: Freedom-550

INCLUDES **PIVOT**

Sounds Siren & Horn Together / Sirens Chime / Sirens Alerts



K-9

SISTEMA DE SEGURIDAD

MODELO: K9-Mundial SS

Sounds Siren & Horn Together / Sirens Chime / Sirens Alerts


MERCURY-SS
Sistema De Seguridad

Sounds Siren & Horn Together / Sirens Chime / Sirens Alerts



K-9
SOMBRA

RFID
Seguridad Por Presencia



EXCALIBUR
of America

MODEL: AL-2000-E

2-Way Paging, Vehicle Security and Remote Start System



GSM 850/1900 Telephones



Transmission Lock (AU-Tran)

TURBO TIMER
Cool Your Turbo...



STR-304D (4 Strobe Lights)
STR-302D (2 Strobe Lights)

60 WATT STROBE KIT

90 WATT STROBE KIT



Back Up Camera (CCD)

Table Of Contents

Owner's Guide

Arming the System	3
Disarming the System	4
Emergency Override	4
System Armed & Activated	5
Panic	5
Sensor By-Pass	5
Auxiliary Channel	6
3rd Channel	6
Remote Controlled Anti-Carjack ...	6
Anti-Carjacking	7
Valet Mode	8
LED Status Indicator	8
Auxiliary Sensor & Prewarn	9

Installation Instructions

How To Program Remote Control	9
How To Program Features	10
Programmable Features	10 - 12
Wiring Diagram	13
Door Lock/Unlocking Systems	14

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions, (1) This device may not cause harmful interference and, (2) This device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Remote Control Quick Reference Guide


Arming: Press & Release the "Lock" button




Silent Arming: Press & Release the Middle "••" button Twice in 3 sec.



Disarming: Press & Release the "Unlock" button

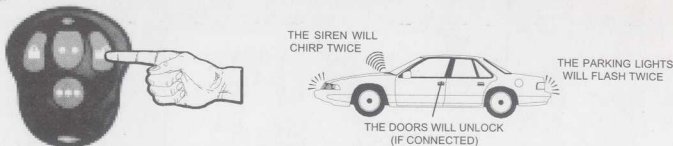

Silent Disarming: Press & Release the Middle "••" button Twice in 3 sec

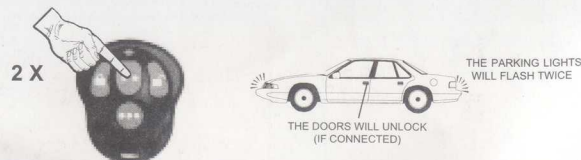



Emergency Override:



THEN WITHIN 10 SECONDS




 Panic: Press & Hold the "Lock" Button for 3 Sec's, with the ignition "Off"

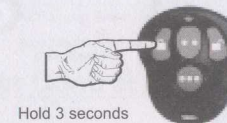


Shock Sensor & Prewarn Bypass:

- 1) Arm the alarm by, Pressing & Releasing the "Lock" button
- 2) Within 2 seconds Press & Release the Middle "••" button.

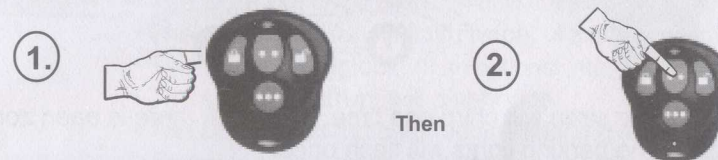



To Activate the Auxiliary Channel: Press & Hold The Middle "••" Button for 3 Seconds

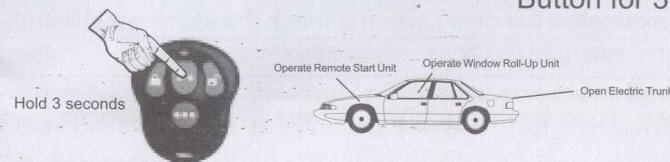

To Activate the 3rd Channel: Press & Hold The "... " Button for 3 Seconds



 
To Activate Remote Anti-Carjack: (programmable feature # 10) Press & Hold the "... " button, for 3 Secs, with the ignition "On"

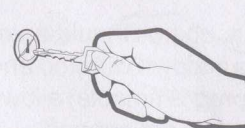


Arming the Alarm

The system may be "Armed" by any of 3 methods:

1) Remote Control Arming: Press & Release the "Lock" button

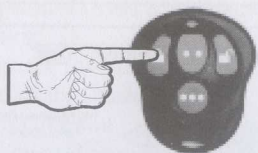

2) SILENT Remote Control Arming: Press & Release the Middle "••" button Twice within 3 seconds

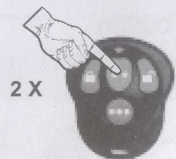

- Upon Arming:**
- The siren will chirp one time. (3 times if there is open zone)
 - The parking lights will flash once.
 - The doors will lock. (If an optional interface is connected)
 - The starter interrupt will engage.
 - The LED Status Indicator will begin to flash slowly.

- If a zone is open, (for example a car door), when arming, the alarm will still arm, but will bypass the open zone until the zone is secured (siren will chirp 3 times).

3) To Passively Arm: Turn Ignition "Off", Then Close all Doors.

Automatic "Last Door Arming" is a programmable feature which allows the alarm to arm itself and, if desired, lock the doors upon arming.

If on, anytime the ignition is turned off, and then a door is opened and closed:

- The Siren will chirp once to confirm arming countdown has begun.
- The LED Status Indicator will begin to flash rapidly.

Thirty seconds later:

- The siren will chirp & the lights will flash once.
- The LED Status Indicator will begin to flash slowly.
- The starter interrupt will engage.


- The alarm is now fully armed. The doors will lock at this time, if programmed to do so, and if the vehicle is equipped.

- The system can not Last Door Arm if a protected zone is open. Should a vehicle door be opened during the arming countdown, the countdown will stop and start over again when the door is closed. **AUTO REARM** (programmable) allows the Alarm to Rearm itself, if it is Disarmed and a vehicle door is not opened.


Disarming the Alarm

The system may be "Disarmed" by any of 3 methods:

1) Remote Control Disarming: Press & Release the "Unlock" button

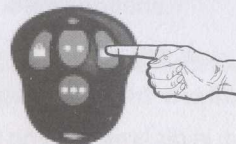

2) SILENT Remote Control Disarming: Press & Release the Middle "••" button Twice within 3 sec

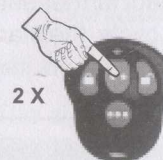


- Upon Disarm:**
- The siren will chirp twice. (4 chirps if alarm has activated & reset)
 - The parking lights will flash twice. (4 times if alarm has activated)
 - The doors will unlock. (If an optional interface is connected)
 - The starter interrupt will disengage.
 - The LED Status Indicator begins flashing rapidly for Automatic Rearming, until alarm Rearms or a vehicle door is opened.

2-STAGE DISARM: If Disarming the alarm while it is triggered (siren sounding), the first press of any remote control button will only silence the siren/horn. A second press of the "Unlock" button will Disarm the alarm.

IMMOBILIZER MODE: If this mode is programmed "On", the starter interrupt will remain engaged after the alarm is Disarmed, until the ignition is turned "On" and you Press & Release the Valet button. (Refer to programmable feature # 5)


To Start Vehicle:

 1. Disarm the alarm, then Turn "On" the vehicle's ignition
2. Press & Release the Valet Button.



Emergency Override

 - Step 1: With the system in the armed condition, enter the vehicle via the driver's door (be aware that the alarm will trigger when the door is opened).
- Step 2: Using your key, turn the vehicle's ignition to the "On" position.
- Step 3: Within 10 seconds, Press & Release the Valet/ Override Switch.



System Armed & Activated

Regardless of method used to Arm the alarm, once Armed, the alarm will monitor all protected zones, and if an intrusion attempt is detected it will activate, or "trigger".

A trigger consists of the following:

- The electronic siren, or optionally the vehicle's horn, will start sounding.
- The exterior parking lights will flash on and off repeatedly.

An activation has a 30 second duration unless the system is disarmed using the remote control or the Valet /Override switch. If all protected zones are secure at the end of the trigger, the system will stop and rearm itself to detect further entry attempts. If a protected zone is still open at the end of the trigger cycle, the alarm will continue to re-trigger itself for up to six activated cycles before it resets itself and ignores the violated zone.

Remote Panic Operation

Should it be needed in a threatening situation, or you feel the need to attract attention, the alarm can be triggered using the remote control. Your alarm features "Panic Mode", which allows you to activate "Panic" from the "Arm/Lock" button.


To Activate Remote Panic: Press & Hold the "Arm/Lock" Button, for 3 seconds, with the ignition "Off".



Sensor By-pass

The shock sensor & Prewarn zone can be by-passed using the remote control. This may be useful in stormy weather.

- 1) Arm the alarm by, Pressing & Releasing the "Lock" button.
- 2) Within 2 seconds, Press & Release the Middle "••" button.

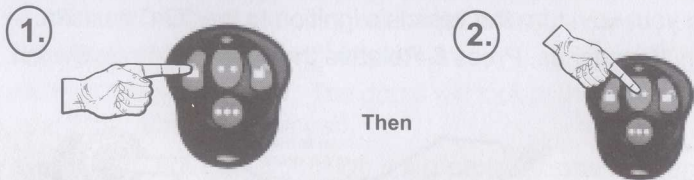

- The siren will chirp once to confirm sensor has been by-passed.
- Upon Disarming the alarm, the sensor zone will reset.

The Auxiliary Channel

The Auxiliary Channel may be used to operate an optional function. Possibilities include remote trunk release, remote car starting, or an on-demand remote window roll-up interface. Please see your Omega dealer for details on available options.

To Activate the Auxiliary Channel:

Press & Hold the Middle "••" Button for 3 Seconds.




- The alarm will Disarm upon activating the Auxiliary channel.
- The Auxiliary Channel cannot be activated if the vehicle's ignition is "On".

The 3rd Channel Auxiliary Output

The programmable 3rd Channel may be used to operate an optional function, such as a remote start unit or an on-demand remote window roll-up interface. Please see your Omega dealer for details on available options.

To Activate the 3rd Channel:

Press & Hold the "... " button for 3 Seconds.

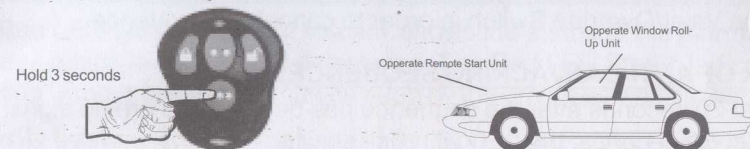

- The 3rd Channel can be programmed to Supply a (-) output when the alarm is Armed to operate a Window Roll-Up module (Programmable feature # 12).

Remote Anti-Carjack

The Anti-Carjacking mode can be activated using the remote control.

- Refer to next page for sequence details. (programmable feature # 10)

To Activate Remote Anti-Carjack:

Press & Hold The "... " Button, For 3 Seconds, With The Ignition "On".

