

transmitter has been used to unlock them. Turning the ignition "on" during the 90 second period will cancel the automatic relocking.

- 4) **Doors Lock With Ignition "On":** Default ON.
- 5) **Ignition "Off" Unlock #1:** Default ON.
- 6) **Ignition "Off" Unlock #2:** Default ON.

These three Features control the doorlocks in relation to the ignition being turned on or off.

- 7) **Operating Trunk Release Also Unlocks Doors:** Default ON.
When the transmitter's II button is pressed for 3 seconds to activate the Trunk Release output, this Feature will unlock the doors. Both doorlock unlock outputs will operate.
- 8) **Doorlock Pulse Time .8/3 Seconds:** Default .8 Second (press LOCK).
Some vehicle's power doorlocking systems (example: Mercedes Benz pneumatic systems) require a longer output pulse to operate properly. This Feature allows the installer the flexibility to accommodate such systems.
- 9) **Double Unlock Pulse:** Default OFF.
This is another Feature provided for the installer's benefit. Some newer vehicles require a double pulse to remotely unlock the doors and/or to disarm a factory-equipped security system.
- 10) **Confirmation Chirps:** Default ON.
This Feature causes the system to acknowledge the reception of a transmitter command. Pressing LOCK produces one beep; pressing UNLOCK produces two beeps. Turning this Feature OFF silences the confirmation beeps.

Page 16

- 14) **Transmitter Activated Anti-Carjacking:** Default OFF.
This Feature adds Anti-Carjacking protection, and the ignition must be "on" for the Anti-Carjacking to operate. Press and hold the transmitter's II button for 3 seconds. The piezo will start beeping 53 seconds later, and for the next seven seconds pressing the Valet Switch once will cancel the Anti-Carjacking Feature. At 60 seconds the piezo starts making a siren sound, and the parking and dome lights will also flash. At 90 seconds the starter interrupt output will activate. Once the siren sound occurs and lights flash, Anti-Carjacking cannot be canceled unless the ignition is turned "off", then back "on"; the Valet Switch must be pressed once within 10 seconds of turning the ignition back "on". This is the only way to cancel or turn off the Anti-Carjacking Feature - once activated, the transmitter cannot be used to cancel or turn off the Feature.

- 15) **30 Second Parking Lights Upon Unlock:** Default 30 Seconds.
This feature gives the option of having the parking light output flash twice then illuminate for 30 seconds upon Unlock or have the parking lights only flash twice upon Unlock. To change this feature press the Lock button for the 2 flashes only setting.

- 16) **"Panic" or 3rd Channel From Button III:** Default 3rd Channel.
This feature allows button III to operate either "Panic" or 3rd channel. In the default setting holding button III depressed for 4 seconds will activate the 3rd channel output. Panic can be activated from either the lock or the unlock button. Press and hold either button for 5 seconds to activate panic. With this feature off press and hold button III for 5 seconds to activate "panic". Press the lock and unlock buttons together for 5 seconds to activate the 3rd channel output.

Page 18

- 11) **The Starter Disable Will Automatically Engage 90 Seconds After The Ignition Switch Is Turned "Off":** Default OFF.

When this Feature is activated, the Starter Disable circuit will automatically engage 90 seconds after the ignition switch is turned "off". Turning "on" the ignition switch during this 90 second period will reset timer period. Once the Starter Disable circuit engages, the transmitter's use to unlock the doors or putting the system into Valet Mode are required to disengage it.

- 12) **The Starter Disable Will Automatically Engage 90 Seconds After The Transmitter Is Used To Unlock The Doors:** Default OFF (press LOCK).

When this Feature is activated, the Starter Disable circuit will automatically reengage 90 seconds after remotely unlocking the doors. Turning "on" the ignition switch during this 90 second period will override this Feature, preventing the automatic engagement.

- 13) **Ignition Activated Anti-Carjacking:** Default OFF.

This Feature adds automatic Anti-Carjacking protection; Automatic Anti-Carjacking protection is activated every time the ignition switch is turned "on". In this form of Anti-Carjacking, the Valet Switch may be pressed within 60 seconds of turning the ignition "on", including the final 7 seconds when the piezo is beeping to remind you of impending engagement of the feature. At 60 seconds the piezo starts making a siren sound. At 90 seconds the starter interrupt output will activate. Once the siren sound occurs, Anti-Carjacking cannot be canceled unless the ignition is turned "off", then back "on"; the Valet Switch must be pressed once within 10 seconds of turning the ignition back "on". This is the only way to cancel or turn off the Anti-Carjacking Feature - once activated, the transmitter cannot be used to cancel or turn off the Feature.

Page 17

- 17) **One or Two Button Operation:** Default Two

This feature allows the unit to be locked and unlocked from two separate buttons or have the unit "toggle" the lock and unlock operations from one button.

List of Programmable Features:

- 1) Secret Override Code: Default **1&0 Programming Switch Press**
- 2) Doors Automatically Lock 90 Seconds After The Ignition Is Turned "off" : Default **OFF**
- 3) Doors Automatically Relock 90 Seconds After Remotely Unlocking : Default **OFF**
- 4) Doors Lock With Ignition "on" : Default **ON**
- 5) Ignition "off" Unlock #1 : Default **ON**
- 6) Ignition "off" Unlock #2 : Default **ON**
- 7) Operating Trunk Release Also Unlocks Doors: Default **ON**
- 8) Doorlock Pulse Time .8/3 Seconds :Default **.8 Second**
- 9) Double Unlock Pulse : Default **OFF**
- 10) Audible Confirmation Of Received Transmitter Signal : Default **ON**
- 11) The Starter Disable Will Automatically Engage 90 Seconds After The Ignition Switch Is Turned "off" : Default **OFF**
- 12) The Starter Disable Will Automatically Engage 90 Seconds After The Transmitter Is Used To Unlock The Doors : Default **OFF**
- 13) Ignition Activated Anti-Carjacking : Default **OFF**
- 14) Transmitter Activated Anti-Carjacking : Default **OFF**
- 15) 30 Second Parking Lights Upon Unlock : Default **ON**
- 16) "Panic" / 3rd Channel From Button III : Default **3rd Channel**

Page 19