EUT:NOTEBOOK PC

FOC/MELLON

DEC 3 0 1998

FCC ID: L4PK1100PX13

KAPOK COMPUTER CO.

USER'S MANUAL

FEDERAL COMMUNICATIONS COMMISSION

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient o relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables (except microphone, headphone data cable) and output power cord must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Trademarks

IBM PC, PS/2, EGA, and VGA are registered trademarks of International Business Machines Corporation.

Intel, Pentium are trademarks of Intel Corporation.

MS-DOS, Microsoft Windows, Windows NT and Microsoft Mouse are registered trademarks of Microsoft Corporation.

Sound Blaster Pro is a trademark of Creative Labs, Inc.

SystemSoft is a registered trademark of SystemSoft Corp.

Other brand and product names are trademarks of their respective companies.

Warranty Provisions

Keep the product's bar code legible to protect your right for warranty services.

The manufacturer warrants this personal computer to be in working order for a period of one year from the date of shipment. If this product fails within the one year warranty period the manufacturer will, at its option, repair or replace the product at no charge except as set forth below.

Warranty service will be furnished on an exchange basis. The manufacturer may repair or replace your product with a new or reconditioned one. Any replaced components or parts become the property of the manufacturer.

No warranty is expressed or implied for products damaged by accident, abuse, misuse, acts of god, or un-authorized modification. No warranties apply after the one year warranty period.


To obtain warranty service described herein, deliver the product along with proof of purchase date, to any of the manufacturer's authorized distributors during the warranty period. The owner agrees to insure the product and assume the risk of damage or loss in transit, to pay in advance all shipping charges, and to use the original shipping container (or the equivalent).


The manufacturer is not liable to any purchaser or end-user for any damages including, but not limited to, lost revenue, lost wages, lost savings, or any other incidental or consequential damages arising from the purchase, use, or inability to use this product.


Safety Notice


The notebook computer is a delicate device that requires careful handling. Negligence or mistaken use may cause serious damage. Before you learn to operate or use this computer, you need to understand the instruction regarding safety handling.

 
The following mentions the incorrect handling that is seriously inhibited. To keep the computer from being damaged, please keep these precautions in your mind.

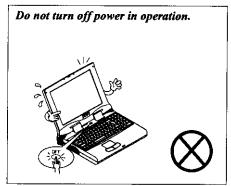


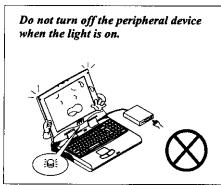

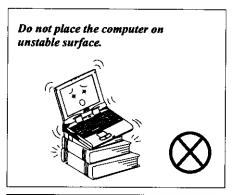


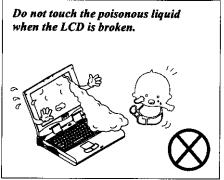



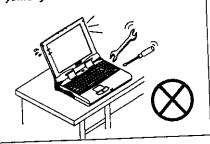




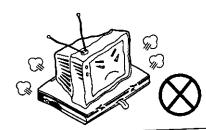


Do not touch power cord by wet hand.




Do not use broken power cord.

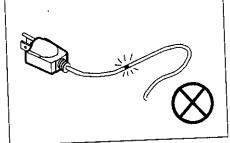

Keep the computer away from any metal appliance.

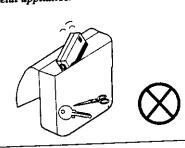


Do not throw the computer or accessories into fire.

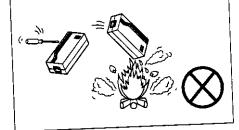



The following mentions the actions that are important for your computer. To keep your computer in the most excellent condition, please follow the instruction as much as possible.







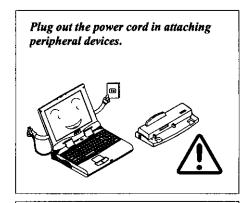


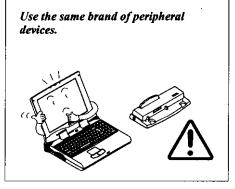


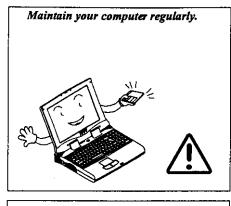

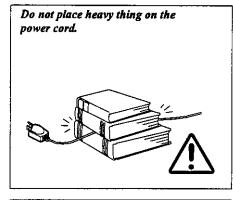

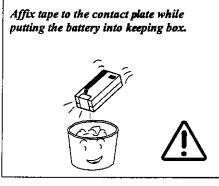

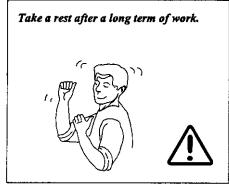

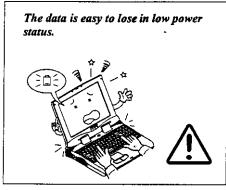



Conventions

This manual uses the following conventions to describe, identify, and highlight terms and operating procedures.

Text Conventions

Text in boldface contains messages that are important for safe operation. Please read.

Characters in boldface represent specific items or keys, e.g. CardBus, Fn key.

File names are presented in bold capitals, e.g. A:\>0VMAKFIL /Pn.

Abbreviations

For the purpose of clarity, abbreviations are enclosed in parentheses following their definition; for example, Enhanced Parallel Port (EPP) mode.

Icons

Icons identify ports and jacks of the Notebook computer. The system status indicators are also identified with their relative icons.

Keys

Keys appear in boldface. A plus sign (+) between two keys indicates that they should be pressed simultaneously.

Messages

Note: A note is an advice that helps you make best use of your Notebook computer. Please read.

Ergonomics

Developing good work habits are important if you need to work in front of the computer for long periods of time. Improper work habits can result in discomfort or serious injury from repetitive strain to your hands, wrists or other joints. The following are some tips to reduce the strain:



- O Adjust the height of the chair and/or desk so that the keyboard is at or slightly below the level of your elbow. Keep your forearms, wrists, and hands in a relaxed position.
- O Your knees should be slightly higher than your hips. Place your feet flat on the floor or on a footrest if necessary.
- O Use a chair with a back and adjust it to support your lower back comfortably.
- O Sit straight so that your knees, hips and elbows form approximately 90° angles when you are working.

Lighting

Proper lighting and comfortable display viewing angle can reduce eye strain and muscle fatigue in your neck and shoulders.

- O Position the display to avoid glare or reflections from overhead lighting or outside sources of light.
- O Keep the display screen clean and set the brightness and contrast to levels that allow you to see the screen clearly.
- O Position the display directly in front of you at a comfortable viewing distance
- O Adjust the display viewing angle to find the best position.

In addition, continuous concentration on computing work can result in discomfort and injury. Remember to:

- O Alter your posture frequently.
- O Stretch and exercise your body several times a day.
- O Take periodic breaks when you work at the computer for long periods of time. Frequent and short breaks are of greater benefit than fewer and longer breaks.

Table of Contents

Chapter 1: Getting Started	
Unpacking	1-2
Operating Environment	1-3
Quick Start-up	
Powering the System	
AC Power Adapter	1-4
Battery Pack	1-5
Inserting	1-5
Removing	
Recharging by AC Power	1-6
Proper Handling of the Battery Pack	1-6
Opening the LCD Cover	
LED Indicators on the LCD Cover	1-8
Top-Front View	1-9
LCD Panel	1-9
Stereo Speakers	1-9
Trackpad and Buttons	1-9
Keyboard	1-9
Microphone	1-9
System Status LED Indicators	1-10
Power Button	1-10
Rear View	1-12
Headphone Jack	1-12
Microphone-in Jack	1-12
Phone Jack	
PS/2 Type Port	
Serial Port	
Parallel Port	
External Monitor (CRT) Port	
USB Port	1-12
Right-side View	
3.5" Floppy Diskette Drive	1-14
5 25" CD_ROM Drive	1_1/

	PC Card Sockets 1 Infrared 1 Right-side Stands 1 -side View 1 DC-in Socket 1 Ventilation 1 Left-side Stands 1 tom View 1 2.5" Hard Disk Drive 1	-14 -16 -16 -16 -16 -16
	CPU Cover1	
	Battery Pack1	-17
	CD-ROM Cover1	
	er 2: Operation grading Processor Module2	
	Replacing Processor Module2	
	Reinstalling Heat Sink2	
Sett	ing DIP Switch2	
	Accessing the 2-Pole DIP Switch2	
Exp	anding Memory2	
	Accessing the Memory Sockets2	
	Installing Memory Module2	
	Removing Memory Module2	
Usir	ng Hard Disk Drive2	
	Removing2	
	Inserting	
	Replacing Hard Disk Drive2	
Usır	ng Floppy Disk Drive2	
	Inserting/Removing Diskettes	
	Write-Protecting Diskettes	
TT_1.	Do's and Don'ts2	
Usir	ng CD-ROM	
	Removing CD-ROM Module	
	Loading Compact Discs	
T Inia	Handling of Compact Discs	
USII	ng PC Card Sockets	
	Inserting PC Cards	-17

Removing PC Cards	2-2
Using Hot Keys	
Using Numeric Keypad	
TV Out	
LCD Panel	
Using Power Management	
Advanced Power Management (APM 1.2)	
Advanced Configuration and Power Interface (ACPI)	2-2
Hard Disk Standby	
Global Standby	
Suspend and Resume	
Powered On Suspend (POS)	2-29
Resume from POS Mode	2-29
Suspend To RAM (STR)	2-29
Resume from STR Mode	2-29
Suspend To Disk (STD)	2-30
Resume from STD Mode	2-30
Attaching Peripheral Devices	2-31
Attaching a Phone Line	
Attaching a PS/2 Keyboard or Mouse	
Attaching a Serial Mouse	
Attaching a Parallel Printer	2-34
Attaching an External Monitor (CRT)	2-35
Attaching a Proprietary Port Replicator	
Attaching a Video Input Device	2-37
Attaching a TV Set	
Attaching a USB-compatible Device	2-39
Chapter 3: BIOS Utilities	
Power On Self Test (POST)	3-2
POST Message: Normal Operation	3-2
POST Message: Error Detected	
System Configuration Utility	. 3-4
Information in the System Configuration Utility	
Initiating the System Configuration Utility	
	- -

Initiating the System Configuration Utility	3-5
Working with the Menu Bar of the SCU	3-6
Working with the Pull-down Menu of the SCU.	3-7
Features of the System Configuration Utility	3-8
Startup Menu	
Memory Menu	
Disks Menu	3-11
Components Menu	3-12
Power Menu	
Exit Menu	
Chapter 4: Troubleshooting	
Battery	4-2
Power	
Hard Disk Drive	
Floppy Disk Drive	
Hardware Installation	4-4
LCD Panel	
Memory Module	
PC Card	
Boot Password	4-7
Audio	
CD	
Printer	
Chapter 5: Installing Drivers Preparation Installing Windows	
Drivers for Win95	
Drivers for Win98	
Drivers for WinNT 4.0	
Appendix A: Specifications	A- 1
Appendix B: I/O Port Pin Assignments	R _1


Chapter 1: Getting Started

This chapter provides a short introduction and tutorial that will familiarize you with the Notebook system and get you up and running quickly. This Chapter will discuss:

	Unpacking	1-2
	Operating Environment	
	Quick Start-up	
	Top-Front View	
፱	Rear View	1-12
	Right-side View	1-14
	Left-side View	
	Bottom View	1-17

Unpacking

Carefully unpack the Notebook Computer and the included accessories (Figure 1-1). If there is any discrepancy or problem, contact your dealer immediately. Be sure to save the packing materials in the event that the notebook needs to be shipped at some point in the future.

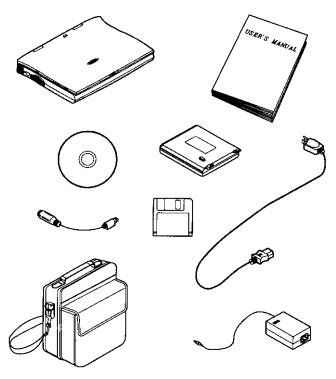

- Notebook Computer.
- O Carrying Bag.
- O Power Adapter.
- O Power Cord.
- O User's Manual.
- O PS/2 Transfer Cable.
- O Battery Pack.
- O Utilities Diskettes.
 - CD for drivers.

Figure 1-1

Operating Environment

As with any other precision electronic equipment, proper care and operation of your Notebook will provide long and reliable service. Be sure the computer system is not:

- O Exposed to excessively heat or directly sunlight.
- O Subjected to shock or vibration.
- O Exposed to strong magnetic fields.
- O Left in a place where foreign matter or moisture may enter the system.

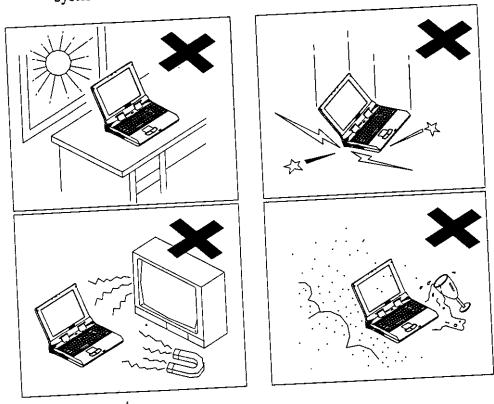


Figure 1-2

Quick Start-up

Powering the System

AC Power Adapter

Use only the power adapter that comes with your Notebook Computer. System operation with an incorrect power adapter will cause damage to the Notebook and its components.

- 1. Plug the power adapter to the DC-in socket on the left panel of the Notebook.
- 2. Connect the power cord to the power adapter.
- 3. Plug the AC power cord into a properly grounded outlet (Figure 1-3).
- 4. Refer to Chapter 1, System Status LED Indicators for more information on system power status.

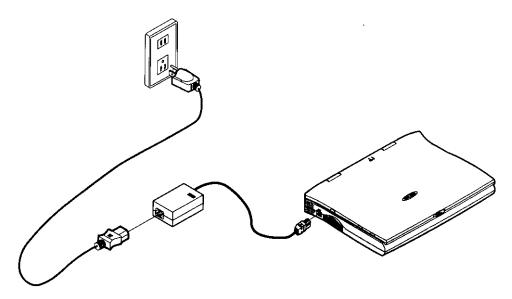


Figure 1-3

Battery Pack

Power for continuous portable operation of the Notebook is provided by a battery pack. When using the battery no external power source is required. However, the actual operating time will be determined by the application used and the configuration set.

Inserting

- Turn the Notebook over.
- Position the battery pack and firmly fit it into the Notebook (Figure 1-
- 3. The two latches will click into place when it is seated.

Removing

- Turn the Notebook over.
- 5. Press the two latches in the direction indicated to release the battery pack. (Figure 1-5)
- 6. Carefully lift the battery pack from the Notebook.

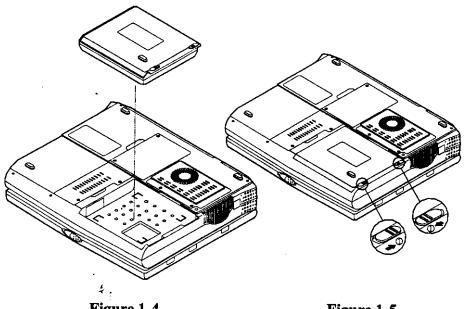


Figure 1-4

Figure 1-5

Recharging by AC Power

The system's battery pack will recharge whenever the system is plugged into the AC power supply, regardless of whether the system is being operated or not. Please refer to *Chapter 1, System Status LED Indicators* for more information concerning battery charge status.

Off-Line Charge

The Notebook system is powered off. Connect the AC adapter to the unit. Its DC output will be used solely to charge the battery. It will take hours to bring a completely discharged battery to its full charge state.

Trickle Charge

The Notebook system is powered on. Again, make sure the AC adapter is connected to the unit. Its DC output will both power the system and charge the battery. It may take more hours than off-line charge to charge the battery.

Proper Handling of the Battery Pack

- Do not attempt to disassemble the battery under any circumstances.
- The battery may explode if exposed to fire or high temperatures.
- Avoid short circuiting the battery by preventing contact between the metal terminals (+, -).

Opening the LCD Cover

- 1. To release the top cover slide the latch to the right (Figure 1-6).
- 2. Lift the top cover to reveal the LCD panel and keyboard (Figure 1-7).
- 3. Adjust the LCD panel to a comfortable viewing angle.
- 4. Press the power button to turn the system on or off (refer to *Chapter 1*, *Top-Front View* for the information of the power button).

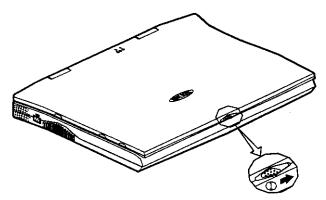


Figure 1-6

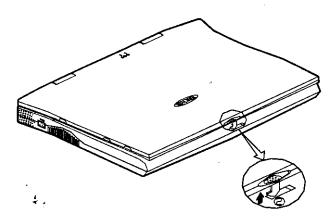


Figure 1-7

LED Indicators on the LCD Cover

Icon	Color	Description
0	Green	Battery power is used with system turned on.
	Red	AC power is used with system turned on or
		AC and Battery are used with system turned on.
	Green	Battery is fully charged.
	Red	Battery is being charged.
	Blinking Red	Battery power is critically low.

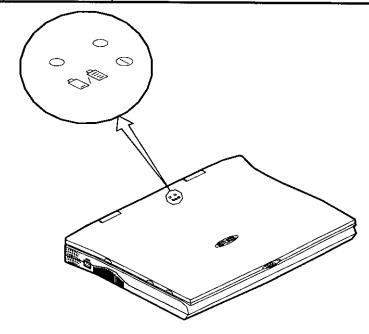


Figure 1-8

Top-Front View

LCD Panel

The Notebook provides you with a large LCD panel. Depending upon the model you have purchased, it can either be a 14.1"/13.3" XGA (1024x768 pixels) compatible, using TFT technology, or a 12.1" SVGA (800x600 pixels) compatible, using DSTN technology. The LCD panel is driven by a AGP local bus video controller with 4MB video memory.

Stereo Speakers

Two built-in speakers provide clear stereo sound.

Trackpad and Buttons

The pointing device features a sensitive glide pad for precise movements. It functions like a two-button mouse does. The right trackpad button is equivalent to the right mouse button; the left trackpad button is equivalent to the left mouse button.

Keyboard

The Notebook utilizes a Windows 95 keyboard that is integrated with the numeric keypad. It is detachable for various language versions. You may refer to *Chapter 2: Operation* for more information.

Microphone

This is the built-in microphone for recording sound into your applications.

System Status LED Indicators


The LED indicators display the system's operation status.

Icon	Color	Description
0	Green	Battery power is used with system turned on.
	Red	AC power is used with system turned on or
		AC and Battery are used with system turn on.
	Green	Battery is fully charged.
	Red	Battery is being charged.
	Blinking Red	Battery power is critically low.
0	Green	The hard disk is being accessed.
D		
	Green	The system has entered Suspend-To-RAM (STR) or Power-On-Suspend (POS) mode.

Power Button

Icon	Description	
	Use this button to turn the system on or off.	
9	After proper configuration under SCU, this button can be used as suspend/resume hot button (refer to <i>Chapter 3: BIOS Utilities, Power Menu</i> for more information).	

Note: After turning off the system, wait for a few seconds to power it on again when you need to.

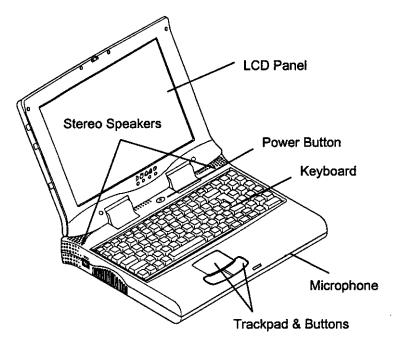

ij

Figure 1-9

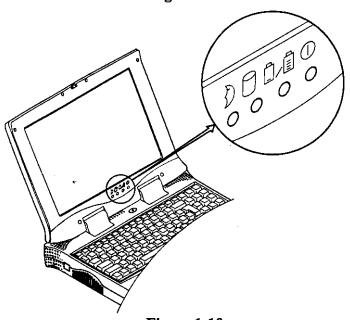


Figure 1-10

Chapter 1: Getting Started

Rear View

Microphone-in Jack

Use this jack to connect a microphone to the system for audio input.

Headphone Jack

Headphone can be attached to the system through this jack for audio output, so can external speakers that have built-in output power amplifier.

■\b PS/2 Type Port

A PS/2 type mouse and keyboard may be connected to the system using this port.

Serial Port

This port is NS 16C550 compatible. It features a 9-pin connector for the addition of an external mouse for example.

Parallel Port

This parallel port supports EPP (Enhanced Parallel Port) and ECP (Extended Capabilities Port) modes.

External Monitor (CRT) Port

This port is used for transmission of the display to an external monitor. Simultaneous display with the LCD panel is available.

Expansion Port

This port is used to connect the proprietary Port Replicator.

User's Manual

S-video Jack

Use this jack to transmit video signal to a TV set. You may need to select the video standard (NTSC/PAL) for video display (please refer to Chapter 3, Components Menu for more information).

← USB Port

The Universal Serial Bus (USB) port simplifies the expansion capability for peripherals by daisy-chain connection of a number of USB-equipped devices.

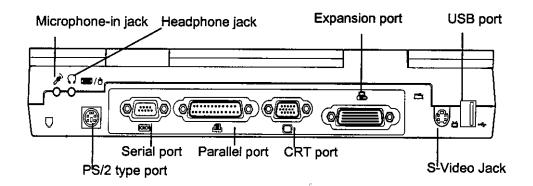


Figure 1-11

Chapter 1: Getting Started

Right-side View

3.5" Floppy Diskette Drive

The Notebook comes standard with a 1.44MB floppy drive installed. Press the button on its top-right side to eject the diskette.

5.25" CD-ROM Drive

The 5.25" IDE CD-ROM module is designed to be changeable installing or removing the two screws that fasten the CD-ROM drive. The eject button is located in the middle of the front cover of the CD-ROM drive. Pressing it will release the CD tray. Refer to Chapter 2: Operation, for more information.

PC Card Sockets

One Type III or two Type II PC cards may be used. Both sockets will expand the system capabilities when a PC card is inserted. To eject the PC card, press the appropriate eject button (Figure 2-17).

Infrared

The system adopts infrared technology as the interface for simple, fast and convenient data exchange from the Notebook to an infrared-compatible device. It implements IrDA (HPSIR), Amplitude Shifted Keyed IR (ASKIR), and Fast IR (FIR). No object should be blocking the line of sight between the Notebook and the infrared-equipped device. For further information refer to the manual of the wireless device you wish to connect on how to use the point-and-shoot operation.

Right-side Stands

When a high speed CPU is installed, the erecting stands on both sides will help heat dissipation during operation.

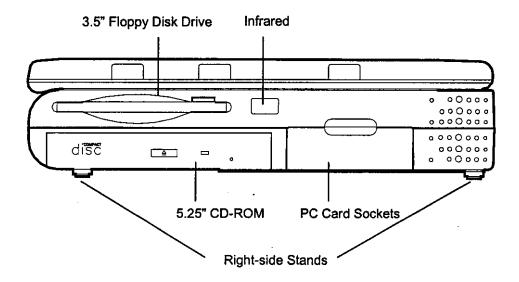


Figure 1-12

Chapter 1: Getting Started

Left-side View

DC-in Socket

Plug the AC adapter into this socket for power supply. To disconnect, pull the plug (not the cord) directly back.

Ventilation

The Notebook provides ventilation to dissipate the system's operating heat. Do not block or obstruct it during operation.

Left-side Stands

When a high speed CPU is installed, the erecting stands on both sides will help heat dissipation during operation.

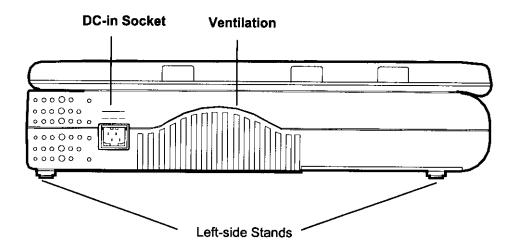


Figure 1-13

Bottom View

2.5" Hard Disk Drive

The 2.5" hard disk drive accepts any 2.5" IDE hard disk drive with a height of 12.7mm or less. Accessing the corresponding screws will allow you to install or to remove this hard disk drive. Refer to Chapter 2: Operation, for more information.

CPU Cover

Detaching the screws to remove the cover will reveal the microprocessor. You may upgrade the CPU for higher system performance.

Battery Pack

This compartment houses a rechargeable battery pack of either Ni-MH or Li-Ion. To recall detailed information turn back to the section *Battery Pack*.

CD-ROM Cover

The CD-ROM cover functions for easy installation and easy removal of the CD-ROM, in case you need maintenance service during warranty period.

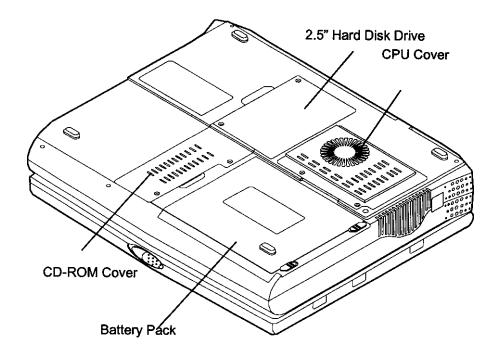


Figure 1-14

Chapter 2: Operation

The Notebook has many advanced features to help you with your computing work. This chapter describes each of the Notebook's hardware features and shows you how to use them.

Before you begin working with any internal components of the Notebook, remove the battery and disconnect the AC power adapter.

Make sure that you wear an anti-static wrist strap to ground yourself before working with any internal components of the Notebook. Static electricity may damage components beyond repair.


Upgrading Processor Module	. 2-2
Setting DIP Switch	. 2-6
Expanding Memory	. 2-7
Using Hard Disk Drive	
Using Floppy Disk Drive	
Using CD-ROM	
Using PC Card Sockets	
Using Hot Keys	
Using Numeric Keypad	
TV Out	. 2-25
LCD Panel	
Using Power Management	. 2-27
Attaching Peripheral Devices	
Attaching a Phone Line	
Attaching a PS/2 Keyboard or Mouse	. 2-32
Attaching a Serial Mouse	. 2-33
Attaching a Parallel Printer	
Attaching an External Monitor (CRT)	. 2-35
Attaching a Proprietary Port Replicator	. 2-36
Attaching a Video Input Device	. 2-37
Attaching a TV Set	
Attaching a USB-compatible Device	
-	

Chapter 2: Operation


Upgrading Processor Module

The Notebook Computer features the structure of Intel's Mobile Module (MMC2). The Processor Module incorporates an Intel Pentium Mobile processor, secondary cache, and the Intel PCIset "Northbridge" system controller, voltage regulator, and thermal sensor on a single printed circuit board.

The Processor Module connects to the mainboard through two board-to-board connectors. This design facilitates users to easily upgrade their system by simply replacing the Processor Module.

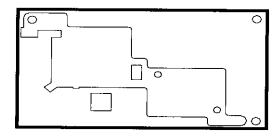

View from Top

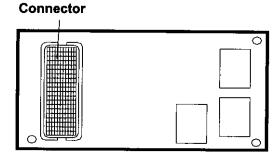

View from Bottom

Figure 2-1

Replacing Processor Module

- O Remove all power sources (AC power and battery).
- O Turn the Notebook over.
- O Remove the CPU cover.
- O Remove the screws that fasten the heat sink mounted on the Processor Module.
- O Carefully detach the Processor Module from the mainboard (Figure 2-2).


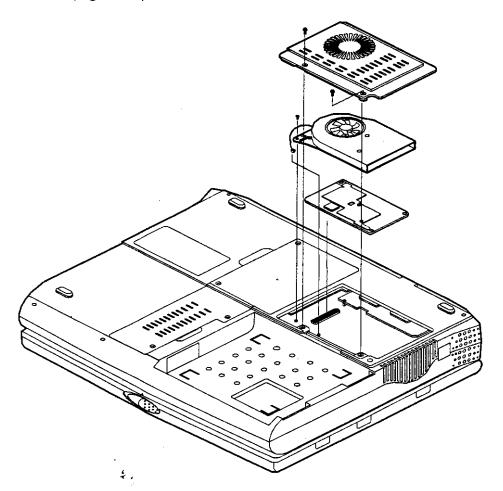


Figure 2-2

Note: To insert or extract your processor mobile module, please contact your service dealer for correct operation.

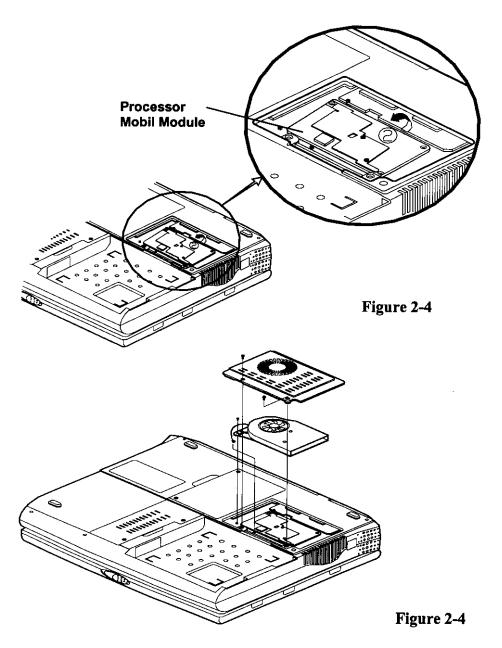

User's Manual

Reinstalling Heat Sink

Reinstall the CPU in the reverse order of removal. Make sure that the heat sink cable is properly installed. (Figure 2-5.1/2-5.2)

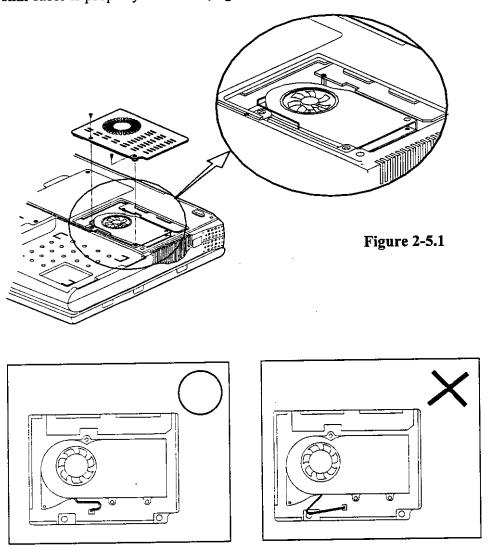


Figure 2-5.2

Chapter 2: Operation

Setting DIP Switch


In order to keep up with the latest system BIOS, your Notebook may be upgraded. Consult your dealer for further information. The DIP Switch needed to be set in the **On** position when updating the existing system BIOS. The DIP Switches should be reset to the **Off** position after BIOS updating is complete.

Fish ROM BIOS	1	2
Existing BIOS	Off	Off
Updating BIOS	On	On

^{*} X = Not Applied.

Accessing the 2-Pole DIP Switch

- O Turn the system power off.
- O Press the two keyboard latches so that the keyboard can be elevated from its normal position (Figure 2-6.1).
- O Carefully lift the keyboard assembly out so that the mainboard is exposed. Employ the 2-pole DIP Switch to set the configuration (Figure 2-6.2)

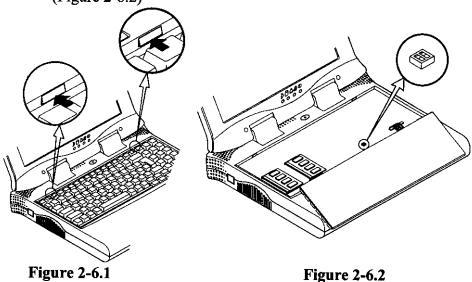

User's Manual

Expanding Memory

The system has two memory sockets for different RAM modules to expand the memory up to 256MB. These RAM modules are of a 144-pin SODIMM (Small Outline Dual In-line Memory Module) type. The Notebook supports Fast Page Mode, EDO (Extended Data Out), and SDRAM operation. With the following memory configurations the total memory size will be automatically detected by the POST routines:

Bank 1 (64-bit)	Bank 2 (64-bit)	Power	Minimum Speed	Total Size
(1Mx16)x4	None			8MB
(1Mx16)x4	(1Mx16)x4]		16MB
(1Mx16)x8	None			16MB
(1Mx16)x8	(1Mx16)x4] ,		24MB
(4Mx16)x4	None		FPM: 60ns	32MB
(1Mx16)x8	(1Mx16)x8]	TTW. COLD	32MB
(4Mx16)x4	(4Mx16)x4	3.3V	EDO: 60ns	64MB
(4Mx16)x8	None			64MB
(8Mx8)x8	None]	SDRAM:75MHz	64MB
(4Mx16)x8	(1Mx16)x4]		72MB
(4Mx16)x8	(1Mx16)x8]		80MB
(4Mx16)x8	(4Mx16)x4]		96MB
(4Mx16)x8	(4Mx16)x8]		128MB
(8Mx8)x8	(8Mx8)x8			128MB
(16Mx8)x8	(8Mx8)x8			192MB
(8Mx8)x8	(16Mx8)x8]		192MB
(16Mx8)x8	(16Mx8)x8			256MB

Accessing the Memory Sockets

- O Turn the system power off.
- O Press the two keyboard latches so that the keyboard can be elevated from its normal position (Figure 2-6.1).
- O Carefully lift the keyboard assembly out so that the mainboard is exposed. Locate the memory sockets (Figure 2-7).

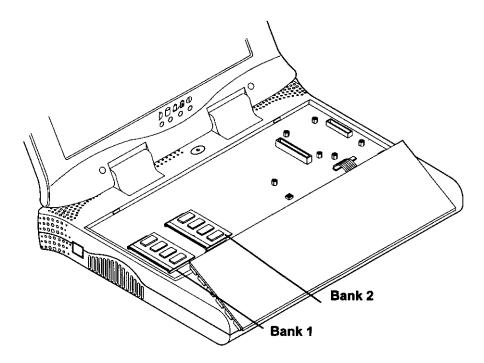


Figure 2-7

Installing Memory Module

Follow the steps below to install the memory module:

- O Turn the system power off.
- O Press the two keyboard latches so that the keyboard can be elevated from its normal position (Figure 2-6.1).

O Carefully lift the keyboard assembly out so that the mainboard is exposed. Locate the memory sockets (Figure 2-7).

- O Position the memory module at a slight angle and fit its connectors into the socket firmly. Push the module down and ensure it locks into place (Figure 2-8).
- O Reinstall the keyboard assembly.

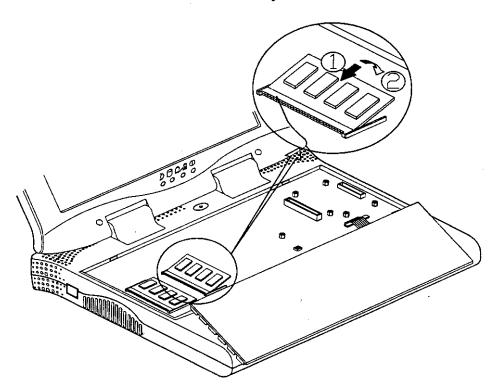


Figure 2-8

Removing Memory Module

- O Turn the system power off.
- O Press the two keyboard latches so that the keyboard can be elevated from its normal position (Figure 2-6.1).
- O Carefully lift the keyboard assembly out to expose the mainboard. Locate the memory sockets (Figure 2-7).
- O Gently pull the two latches on both ends of the module outward. The module will pop up (Figure 2-9).
- O Remove the memory module.
- O Reinstall the keyboard assembly.

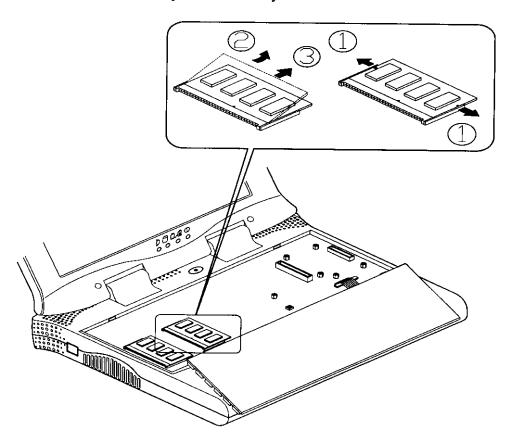


Figure 2-9

Using Hard Disk Drive

The hard disk drive is mounted in a removable case and may therefore be taken out to accommodate other 2.5" IDE hard disk drives with a height of 12.7mm. The system supports drives with capacities greater than 528MB through the Logical Block Addressing (LBA) mode. It also supports Programmed I/O (PIO) mode 4 and provides a high performance data transfer rate at speeds up to 33 MBytes/second (ATA-33).

Removing

- O Turn the system power off.
- O Turn the Notebook over.
- O Remove the HDD cover (Figure 2-10).
- O Disconnect the cable (Figure 2-10).
- O Detach the HDD case from the Notebook (Figure 2-10).

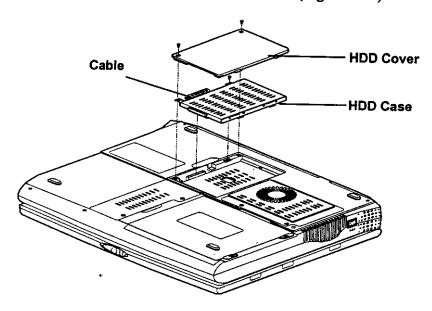


Figure 2-10

Inserting

Reinstall the Hard Disk Drive in the reverse order of removal.

Replacing Hard Disk Drive

The hard disk drive is contained within a case. Two screws on each side of the case need to be removed so that the hard disk drive can be taken out of the case to replace with another one (Figure 2-11). The location of the two screws may be varied depending on different hard disk models. Gently disconnect the cable from the hard disk drive when taking it out of the case. Be careful not to bend any pins or crimp the cable.

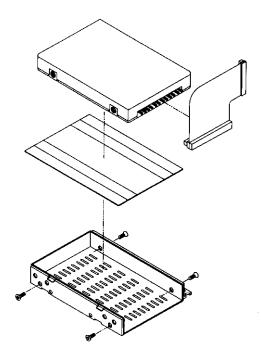


Figure 2-11

Using Floppy Disk Drive

The Notebook comes standard with a 1.44MB, 3.5" floppy disk drive. It is labeled drive A: and may be used as a boot device if properly set.

Inserting/Removing Diskettes

When using the floppy drive, always insert your floppy diskette label-side up (Figure 2-12). To remove your diskette, press the eject button on the top-right corner of the floppy drive.

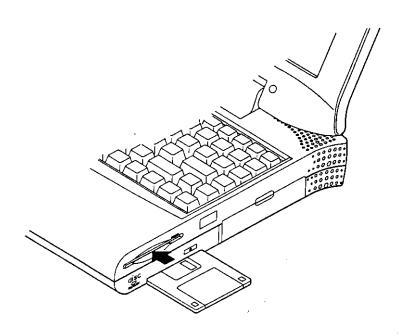


Figure 2-12

Write-Protecting Diskettes

Diskettes can be write-protected to prevent files from being accidentally erased or destroyed. To write-protect a 3.5" floppy diskette, move the built-in write-protect tab to the write-protect position, ("up" so that you can see through the "hole" in the upper, right-hand corner of the diskette). Putting the write protect tab back "down" will enable you to write data on the disk again.

Do's and Don'ts

- Always make backup copies of your software and data diskettes.
- Keep diskettes away from magnetic fields.
- Do not remove diskettes from the drive while the diskette "in-use" light in on.
- Do not open or remove the protective shutter which covers the diskette's media.
- Do not allow dust or moisture to collect on diskettes.
- Do not bend or throw diskettes.
- Do not clean diskettes with liquids or solvents.

Using CD-ROM

The Notebook comes standard with a removable 5.25" CD-ROM module. It is labeled drive D: and may be used as a boot device if properly set.

Do not disassemble the CD-ROM module. Only certified technicians should perform repairs to the CD-ROM module.

To insert a CD, press the **Eject Button** and place the CD on the **Disc Tray** label-side facing up. Push the CD tray in and you are ready to start. The **Busy Indicator** will light up while data is being accessed or while an audio CD is playing. When power to the system is unexpectedly interrupted, insert an instrument such as a straightened paper clip into the **Emergency Eject Hole** to manually eject the tray (Figure 2-13).

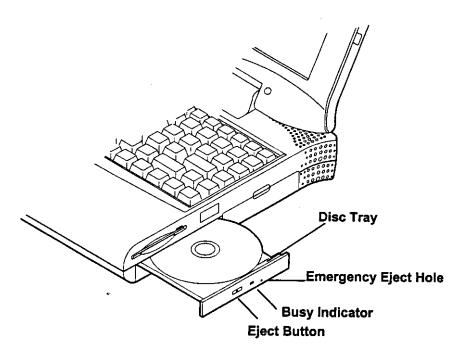


Figure 2-13

Removing CD-ROM Module

- O Turn the system power off.
- O Turn the Notebook over.
- O Remove the CD-ROM cover (Step 1 in Figure 2-14).
- O Remove the securing screw to release the CD-ROM module. (Step 2 in Figure 2-14).
- O Slide the CD-ROM module slightly out to disconnect the cable (Step 3 and Step 4 in Figure 2-14).
- O Pull gently and firmly the CD-ROM module away from the compartment (Step 5 in Figure 2-14).

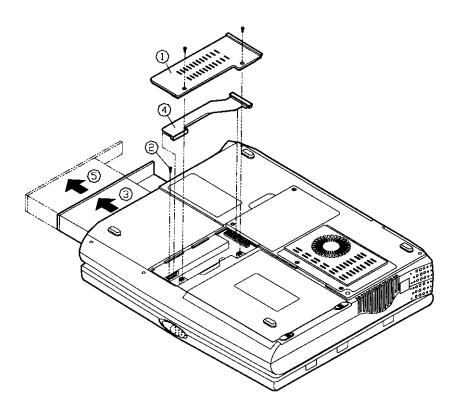


Figure 2-14

Loading Compact Discs

- O Turn on the power.
- O Press the CD-ROM eject button; the disc tray will pop out partially.
- O Pull the disc tray out.
- O Carefully load the CD on the disc tray with label-side facing up. Press it gently to ensure it fits into place (Figure 2-15).
- O Push the tray into the computer to close it.

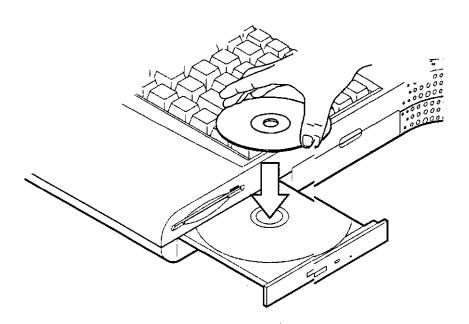


Figure 2-15

Handling of Compact Discs

Proper handling of your CDs will prevent them from being damaged and ensure the accessibility of data stored on them.

- Hold the CD by the edges; do not touch the surface of the disc.
- Use clean, soft, dry cloth to remove dust or fingerprints.
- Do not write on the surface using pen.
- Do not attach any paper or other materials to the surface of the disk.
- Do not store or place the CD in areas where it will be exposed to high temperatures.
- Do not use benzine, thinners, or other cleaners to clean the CD.
- Do not bend the Compact Disc.
- Do not drop or subject the CDs to shock.

Using PC Card Sockets

The Notebook provides system expansion capabilities with two PC card sockets (previously referred to as PCMCIA). PC cards to be inserted can be LAN, fax/modem, communication devices, or expanded memory. Both sockets support 3.3V 32-bit PC cards, referred to as **CardBus**. The CardBus sockets are backward compatible with 5V 16-bit PC cards. There are three types of PC cards. Type I measures 3.3mm thick; Type II 5.0mm; and Type III 10.5mm.

The PC card sockets accommodate one Type III card or two Type II cards and the lower socket named Socket A is capable of ZV (Zoomed Video), which allows a direct connection between a PC card and video devices that enables high quality video playback.

Inserting PC Cards

- O Open the access door (Figure 2-16.1).
- O Align the PC card with the slot and push it in firmly until it locks into place (Figure 2-16.2).

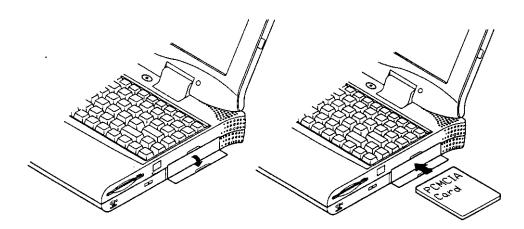


Figure 2-16.1

Figure 2-16.2

Removing PC Cards

To remove a PC card, press the appropriate eject button and the card will be ejected from its slot (please refer to Figure 2-17).

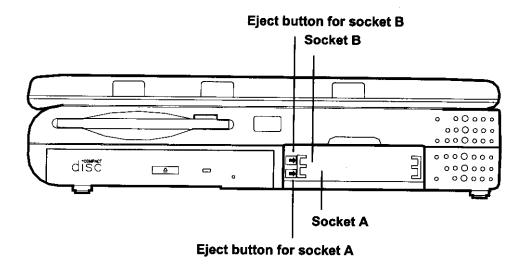


Figure 2-17

Using Hot Keys

Located on the bottom-left edge of the keyboard layout is a colored **Fn** key. It is a special feature found only on the Notebook that provides for key combinations with other keys for easy access to system features. Hold down the **Fn** key while pressing other key as below:

Hot Keys	System Features	Remark
Fn + F3	Expand LCD display	
Fn + F4	Control display top/center position	
Fn + F6	Toggle CRT/LCD/LCD+CRT	
Fn + F9	Decrease LCD brightness	
Fn + F10	Increase LCD brightness	
Fn + F11	Decrease audio volume	
Fn + F12	Increase audio volume	
Fn + Z	Toggle audio mute on/off	
Fn + Esc	Put the system in a suspend state for power management	

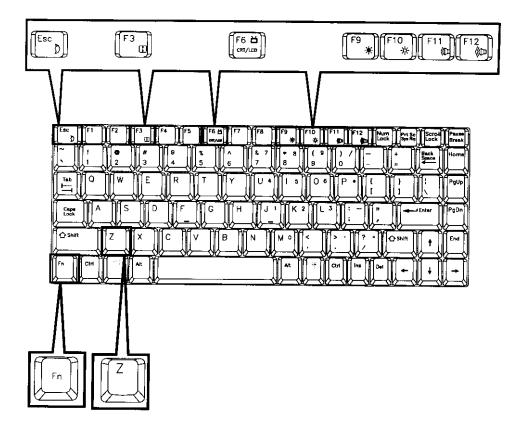


Figure 2-18

Using Numeric Keypad

The colored keys in the middle section of the keyboard will function as a Numeric Keypad (Figure 2-19). The numeric keypad overlay can be used for numeric data input. Follow these steps to access the Numeric Keypad:

- Press the NumLock key to lock the Numeric Keypad.
- Press the Fn key along with the colored keys to operate the Numeric Keypad.

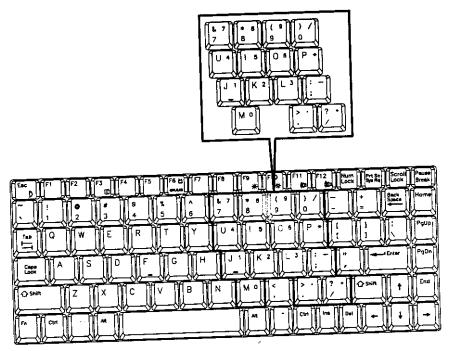


Figure 2-19

TV Output

The Notebook is equipped to send video signals to a TV set through the S-video jack. Different countries use different TV broadcast standards. A TV set must comply with the appropriate standard to properly receive broadcast signals. In the United States, TV sets are built to comply with the NTSC standard. Many countries in Europe and Asia use the PAL standard. You should refer to your TV user guide to make sure which TV standard you are using and enter the System Configuration Utility (SCU) to specify the proper TV mode (please refer to Chapter 3: BIOS Utilities, Components Menu for more information).

TV-output capabilities allow display of realistic game, video, and multimedia on a large-screen TV. The Notebook uses hardware filtering technologies to reduce flicker for better definition.

LCD Panel

The Notebook Computer features the LCD panel display with the following:

- PCI local bus controller.
- 4MB video RAM (SGRAM type).
- Capability to support 1024x768 (XGA) resolution TFT display.
- Ability to transmit video signals to a VGA monitor (CRT).
- Capable of simultaneous display on LCD and CRT.
- Video Port Manager (VPM) for video input from ZV-capable PC card.

Remark:

Two technologies of LCD display:

Active technology (TFT = Thin Film Transistor).

Chapter 2: Operation

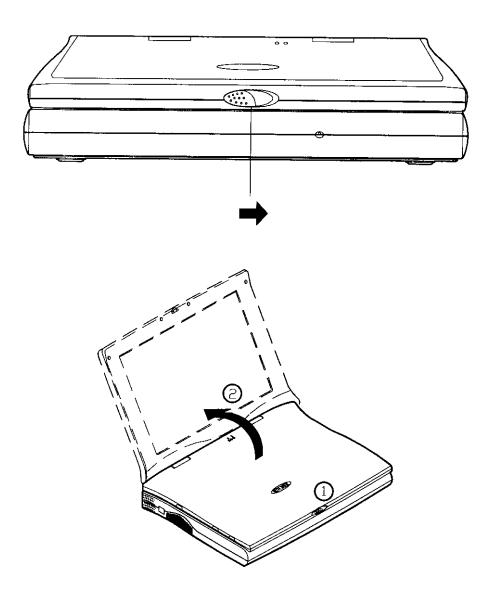


Figure 2-20

Using Power Management

The Notebook system provides you with various modes to manage its power consumption while maintaining system performance. Please refer to Chapter 3: BIOS Utilities, System Configuration Utility, Power Menu for more information.

Advanced Power Management (APM 1.2)

The Notebook provides built-in Advanced Power Management (APM 1.2) support to reduce power consumption. APM function varies depending on the operating system you are using. Some operating systems do not support APM, such as Windows NT, and therefore, cannot take advantage of the system's capabilities in this area.

Advanced Configuration and Power Interface (ACPI)

The ACPI interface gives the operating system (OS) direct control over the power management and Plug and Play functions of a computer. The operating system can perform the functions covered by the ACPI specification, such as system power management, device power management, and thermal management.

Hard Disk Standby

The system will turn off the Notebook's hard disk drive motor if it has not been accessed after a specified period of time. The motor will be turned back on once the system attempts to read or write data to it.

Global Standby

In Global Standby mode, the CPU clock will be stopped and most controllable peripheral devices will be powered off. If the idle timer expires before any system activity is detected, the system will change from Standby mode into Suspend mode.

Suspend and Resume

When at extremely low power the system will halt operations yet retain all its programming. This is called **Suspend** Mode. The Suspend Mode features three levels: Powered-On-Suspend (POS) mode, Suspend-To-RAM (STR) mode, and Suspend-To-Disk (STD) mode.

Be sure not to initiate the Suspend Mode when any of the disk drives is accessed such as HDD, FDD and CD-ROM drive.

The system operation can be returned to exactly where it was suspended when wake-up event occur. This is called **Resume**.

Powered On Suspend (POS)

Of the three suspend modes, Powered-On-Suspend saves the least amount of power. However, it takes the shortest time to return to full operation.

Resume from POS Mode

The system may be resumed from Powered-On-Suspend mode by:

- Alarm resume (month/day/hour/minute)
- Modem ring
- Any keyboard key pressed
- Depressing the power button (if configured as Suspend/Resume function under SCU)

Suspend To RAM (STR)

Suspend-To-RAM mode is the medium level of system power management.

Resume from STR Mode

The system may be resumed from Suspend-To RAM mode by:

- Alarm resume (month/day/hour/minute)
- Modem ring
- Depressing the power button (if configured as Suspend/Resume function under SCU)

Suspend To Disk (STD)/Soft Off (SOFF)

Suspend to Disk is a 0-volt suspend mode for system power management. STD mode saves the maximum power but takes the longest time to return to full operation.

- 1. Use your operating system's FDISK program to delete all partitions of the hard disk if any already exist on the target drive.
- 2. Boot the system from the A: drive and run the 0VMAKFIL.EXE Utility to create the Suspend to Disk partition on the hard disk of a size that will accommodate the installed DRAM (n) plus 2MB integrated video RAM.

A:\>0VMAKFIL /Pn

For example, if the system DRAM is 32MB, 0VMAKFIL will create a partition size of approximately 34MB.

A:\>0VMAKFIL /P32

Note: Rewrite the sector signatures if you need to partition the hard disk again.

C:\>0VMAKFIL/PW

3. Re-partition the hard disk using your operating system's FDISK program.

Resume from STD Mode

The system may be resumed from Suspend-To-Disk mode by:

- Power back on
- Alarm resume (month/day/hour/minute)

User's Manual

Attaching Peripheral Devices The herein mentioned shows you how to attach peripheral devices to the

ports or jacks on the rear panel of the Notebook Computer.

Attaching a PS/2 Keyboard or Mouse

The Notebook can be operated with a PS/2 keyboard or mouse attached by means of the PS/2 transfer cable. Attach the external keyboard or mouse as shown below (Figure 2-22).

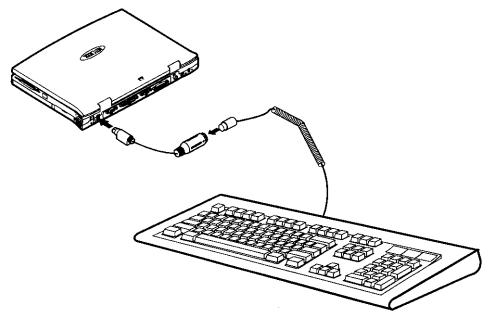


Figure 2-22

Attaching a Serial Mouse

The serial port features a 9-pin connector. You can connect any serial device such as a mouse to this port.


O Turn the system power off.

O Connect the cable to the serial port on the rear of the Notebook Computer (Step 1 in Figure 2-23).

O Tighten the screws that fasten the cable to the serial port (Step 2 in Figure 2-23).

O Turn on the Notebook Computer.

In addition, you may need to install the manufacturer-supplied driver for the serial mouse. Refer to the device's user's guide for more information.

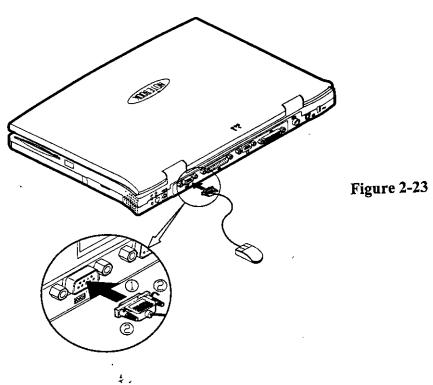


Attaching a Parallel Printer

You may connect any standard Centronics parallel printer to your Notebook using the parallel port.

- O Turn the system power off.
- O Connect the cable to the parallel port on the rear of the Notebook Computer (Step 1 in Figure 2-24).
- O Tighten the screws that fasten the cable to the parallel port (Step 2 in Figure 2-24).
- O Insert the other end of the cable to the printer's connector. Fasten the cable's connector.
- O Turn on the printer and Notebook Computer.

In addition, you will need to install the manufacturer-supplied driver for the printer. Refer to the device's user's guide for more information. If the connected printer supports EPP (Enhanced Parallel Port) or ECP (Extended Capabilities Port) mode, please enter System Configuration Utility (SCU) to configure the required setting.

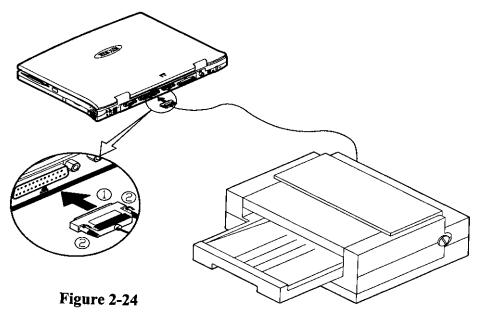

Attaching an External Monitor (CRT)

The computer is capable of displaying information not only on the LCD, but also on SVGA compatible displays attached to the computer. Information can be displayed on both the LCD and the external monitor simultaneously. Enter the System Configuration Utility (SCU) to select the appropriate parameters or use the Fn + F6 keys (refer to Chapter 2, Using Hot Keys).

- Turn the system power off.
- O Connect the cable to the CRT port on the rear of the Notebook Computer (Step 1 in Figure 2-25).
- O Tighten the screws that fasten the cable to the CRT port (Step 2 in Figure 2-25).
- Insert the other end of the cable to the external monitor.
- Turn on the Notebook Computer.

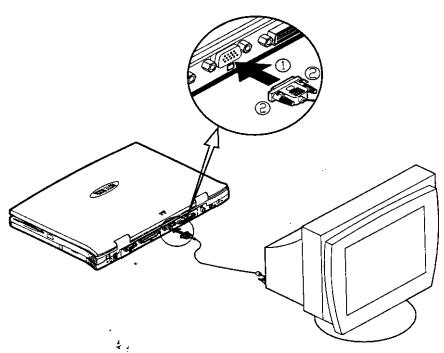


Figure 2-25

Attaching a Proprietary Port Replicator

The proprietary Port Replicator, providing interfaces for those found on the Notebook system, frees you from fumbling with multiple cables every time you leave the office. Please contact your dealer for detailed information.

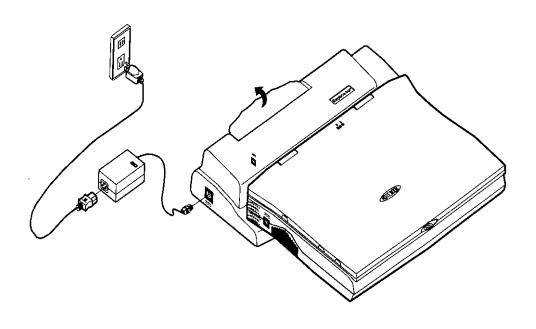


Figure 2-26

Chapter 2: Operation

Attaching a TV Set

The S-video jack on the rear panel of the Notebook is used for transmitting video signals to a TV set. You may need to select the video standard for video display. Enter the System Configuration Utility (SCU), Components Menu to specify the appropriate TV mode. Simultaneous display on external monitor (CRT) and TV is available. You may enter the SCU to select the appropriate parameters or use the Fn + F6 keys (refer to Chapter 2, Using Hot Keys).

Attach the TV set as shown below (Figure 2-28).

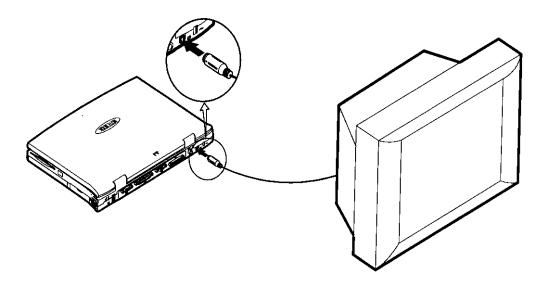


Figure 2-28

Attaching a USB-compatible Device

1

The Notebook provides a USB port for connection of a USB-compatible keyboard, mouse or other devices. Attach the device as shown below (Figure 2-29).

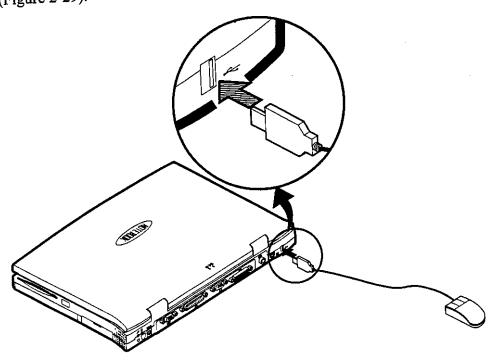


Figure 2-29

Chapter 3: BIOS Utilities

This chapter provides information regarding the Power On Self Test (POST) and shows you how to configure the system parameters using the System Configuration Utility (SCU).

TOOM (DOCT)	3-2
Power On Self Test (POST)	3-2
POST Message: From Detected	3-4
System Configuration Utility	3-4
Information in the System Configuration Utility	3-5
Initiating the System Configuration Utility	3-5
Initiating the System Configuration Utility	3-6
Working with the Menu Bar of the SCU	3-7
Working with the Pull-down Menu of the SCU	3-8
Features of the System Configuration Utility	3-8
C1. 1 1 1	
T. F. T.	
To 1 1 - 1 A compa	
a manda Manii	~ ~ ~ ~
T Mana	
Exit Menu	5-10

Chapter 3: BIOS Utilities

Power On Self Test (POST)

The system BIOS (Basic Input/Output System) performs a series of Power On Self Test (POST) on system memory and key computer components every time the computer is turned on. If an error exists, the POST routine may halt execution (depending on the severity of the problem). The POST also initializes BIOS configuration then boots the operating system.

POST Message: Normal Operation

If no error occurs, the system will be operating after the POST process is completed.

You may press the Spacebar key to skip the memory test.

SystemSoft MobilePRO BIOS Version 1.01 (2482-00) Copyright 1983-1996 SystemSoft Corp. All Rights Reserved

233 MHz Pentium with MMX CPU External Cache: 512KB installed 4 MB Video RAM SystemSoft Plug-n-Play BIOS Ver.1.17.01

Base Memory 000640 Kb Extended Memory 064512 Kb Total Memory 065536 Kb

Auto Detecting IDE Devices[Done]

<CTRL-ALT-S> to enter System Configuration Utility

User's Manual

POST Message: Error Detected

If an error is detected, a WARNING message will be displayed. You should either press F1 key to continue, or press the Ctrl-Alt-S keys simultaneously to enter the System Configuration Utility.

SystemSoft MobilePRO BIOS Version 1.01 (2482-00) Copyright 1983-1996 SystemSoft Corp. All Rights Reserved

233 MHz Pentium with MMX CPU External Cache: 512KB installed 4 MB Video RAM SystemSoft Plug-n-Play BIOS Ver.1.17.01

000640 Kb Base Memory 064512 Kb Extended Memory 065536 Kb Total Memory

WARNING - HARD DISK CONTROLLER 1 FAILURE Auto Detecting IDE Devices[Done]

<CTRL-ALT-S> to enter System Configuration Utility Press F1 to Continue

System Configuration Utility

The System Configuration Utility (SCU) is a ROM-based configuration utility that displays the system's configuration status and provides users with a tool to set their system parameters. The settings are stored in non-volatile battery-backed CMOS RAM which saves the information even when the power is turned off, and retains it when the system is turned back on.

Information in the System Configuration Utility

The following shows the system settings that may be changed within the System Configuration Utility.

Menu Bar Items	Poll-down your flens	
Startup	Date and Time, Fast Boot, Boot Device, Display, Enable Battery Low Beep, Enable LCD Expand Mode, Boot Password, SCU Password.	
Memory	Cache Systems.	
Disks	Diskette Drives, IDE Settings.	
Components	COM Ports, LPT Port, PS/2 Mouse Port, Microsof Intellimouse Support, Keyboard Numlock, Keyboard Repeat, TV Mode, Video In Mode, ZV Port Enable.	
Power	Enable Power Saving, Low Power Saving, Medium Power Saving, High Power Saving, Customize, Suspend Controls, Resume Timer, Enable MODEM Ring Resume, Enable Battery Low Suspend, Advance CPU Controls.	
Exit	Save and Exit, Exit (No Save), Default Settings, Restore Settings, Version Info.	

Initiating the System Configuration Utility

The System Configuration Utility (SCU) will be accessed when simultaneously pressing the Ctrl, Alt, and S keys.

<CTRL-ALT-S> to enter System Configuration Utility

The above message only lasts seconds. If you miss it, the computer will initiate the boot process. You must reboot the system and try again within the time limit if you want to enter the System Configuration Utility.

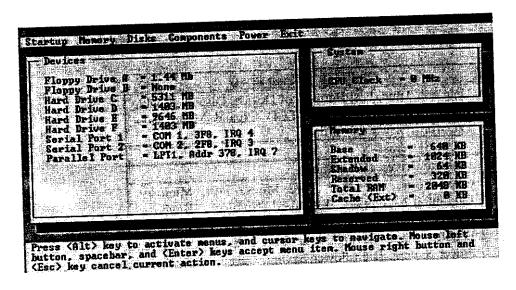


Figure 3-1
System Configuration Utility (SCU)

Working with the Menu Bar of the System Configuration Utility

Press Ctrl-Alt-S keys simultaneously to enter the menu bar of the System Configuration Utility.

Action	Keys Used	Description
Activate menus	Alt	Activate the System Configuration Utility.
Select menu bar item	Left arrow (←) Right arrow (→)	Move to a menu bar item on the left. Move to a menu bar item on
	The highlighted letter key	the right. Move to the corresponding menu bar item.
Accept menu bar item	Mouse left button Spacebar Enter	Enter the selected menu bar item to configure settings.
Cancel current action	Mouse right button Esc	Undo the current command.

Working with the Pull-down Menu of the System Configuration Utility

When the desired menu bar item is highlighted, press the **Enter** key to enter the pull-down menu for values setting.

Action	Keys Used	Description
Select pull-down	Down arrow (↓)	Move to the next pull-down menu item.
menu item	Up arrow (†)	Move to the previous pull-down menu item.
	The highlighted letter key	Move to the corresponding pull-down menu item.
Select a control	Tab	Move between the options.
Change values	Down/Up arrows $(\downarrow)(\uparrow)$	Modify the settings.
Accept entries	Spacebar	Enable/disable the specified function. When a check mark ($$) appears, the function is on.
	Enter	Choose <ok> from a list of options.</ok>
Reject entries	Esc	Undo the current setting.
	Enter	Choose <cancel> from a list of options.</cancel>
Activate accelerators	Alt	Initiate all the highlighted letters corresponding to their respective options.
Quit	Esc	Press the Esc key to close the pull-down menu.

Chapter 3: BIOS Utilities

Features of the System Configuration Utility

Startup Menu

Item		tting/Option	Dunction
Date and Time	Day/Month/Year Hour/Minute/Second		Set the current date and time.
Fast Boot	Enable		Initialize and quickly boot the system in a few seconds by skipping certain diagnostic tests.
Boot Device	Disable 1st Boot device	Hard Disk C	Disable the above. Specify where the system
	2 nd Boot	CD-ROM Drive Diskette A	boots from.
	Device	Hard Disk C CD-ROM Drive Diskette A	Specify where the system boots from.
	3 rd Boot Device	Hard Disk C CD-ROM Drive Diskette A	Specify where the system boots from.
Display	LCD	Diskette A	Activate an external monitor.
	CRT		Activate the system's LCD panel.
	LCD+CR	Γ	Activate both the LCD and the CRT.
	TV		Activate an external TV.
	LCD+TV		Activate both the LCD and the TV.
	CRT+TV		Activate both the CRT and the TV.
	LCD+CRT	T+TV	Activate both the LCD, CRT and the TV.
Enable Battery Low Beep	Enable		The system emits a series of warning beeps sound when the
}-	Disable		battery power becomes low.
	DISAUIC		Disable the above.

User's Manual

Item	Setting/Option	Function	
Enable LCD Expand Mode	Enable	Stretch the display to fill the entire viewing area of the LCD panel.	
	Disable	Disable the above.	
Boot Password	Enter old Power-On Password	Set password for booting computer. Users are authorized	
	Enter new Power-On to start the system after correct password.		
	Verify new Power-On Password		
	Enable Password to Power-On		
SCU Password	Enter old Setup Password	Set password for modifying	
	Enter new Setup Password	SCU. Users are authorized to change the SCU setting after	
	Verify new Setup Password	entering correct password.	
	Enable Setup Password		

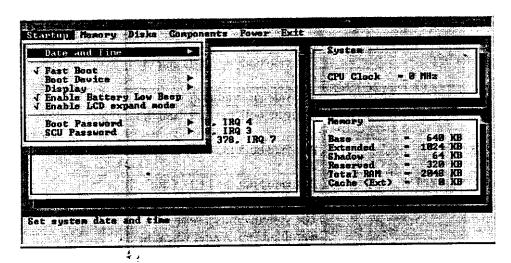


Figure 3-2
Startup Menu

Chapter 3: BIOS Utilities

Memory Menu

Item	Set	ing/Option	Ducton
Cache	LI	Disabled	Disable the processor's internal cache.
Systems	Cache	Write Back	Enable the write-back policy for L1 memory to access only when necessary
	1		to update the cache contents with
			changes for faster performance.
	L2	Disabled	Disable the L2 cache controller.
	Cache	Write Back	Enable the write-back policy for L2
	1		memory to access only when necessary
			to update the cache contents with
	7700		changes for faster performance.
	BIOS	Cached	The process of shadowing copies
	Shadow		instructions from system BIOS into
			RAM to improve system performance.
		Not Cached	Disable the above.
ľ	Video	Cached	The process of shadowing copies
	Shadow		instructions from video BIOS into
			RAM to improve system performance.
		Not Cached	Disable the above.

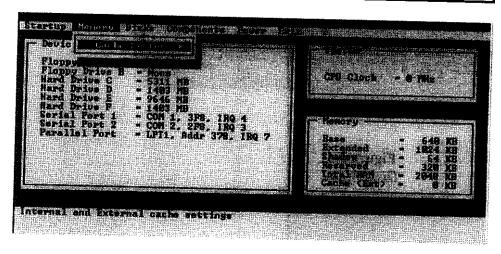


Figure 3-3
Memory Menu

Disks Menu

Item	Setting/Option		Function
Diskette	Drive A	None	Specify the drive types for the
Drives		1.44 MB	diskette drive A.
		2.88 MB]
IDE Settings	Primary	Drive Enabled	Enable enhanced IDE settings.
	HDD	PIO Mode]
	CD-ROM	Drive Enabled	
		PIO Mode]

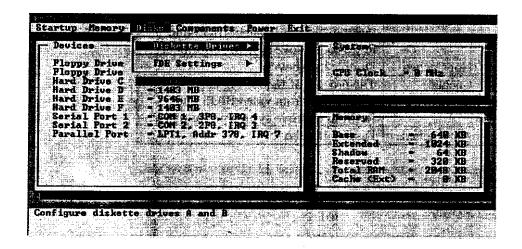


Figure 3-4
Disks Menu

Components Menu

Item	Set	ting/Option	
COM Ports	COM A I/O	None	Specify the COM A
1	Settings	COM1, 3F8, IRQ4	configuration.
1		COM2, 2F8, IRQ3	
		COM3, 3E8, IRQ4	
		COM4, 2E8, IRQ3	
	COM B I/O	None	Specify the COM B
	Settings	COM1, 3F8, IRQ4	configuration.
		COM2, 2F8, IRQ3	
		COM3, 3E8, IRQ4	
T 7000		COM4, 2E8, IRQ3	
LPT Port	Port Address	None	Specify the LPT port
		LPT1, Addr 378h,	and IRQ
		IRQ7	configuration.
		LPT2, Addr 278h,	
		IRQ5	
	1	LPT3, Addr 3BCh,	
	D (D C)	IRQ7	
	Port Definition	Standard AT (Centro	nics)
		Bidirectional (PS-2)	
		Enhanced Parallel (El	
	D) () G	Extended Capabilities	s (ECP)
	DMA Setting	DMA 1	Specify the ECP
	For ECP Mode	DMA 3	DMA configuration.
	ЕРР Туре	EPP 1.7	Specify the EPP type.
	<u></u>	EPP 1.9	· .

Item	Setting	/Option	Function
PS/2 Mouse Port	Enable		Enable the system's trackpad or an external PS/2 mouse.
	Disable		Disable the internal or external PS/2 mouse if IRQ resource is not enough.
Microsoft Intellimouse	Enable		Support PS/2 mouse with the wheel button.
Support	Disable		Do not support PS/2 mouse with the wheel button.
Keyboard	Key Repeat	2 cps	Define the rate (characters per
Repeat	Rate	6 cps	second) at which the keyboard
		10 cps	repeats while a key is
		15 cps	depressed.
		20 cps	
		30 cps	
	Key Delay	1/4 sec	Specify the amount of time
		½ sec	(second) that will pass after a
		3/4 sec	key is depressed before the
		1 sec	key starts to repeat.
TV Mode	TV Modes Selection	NTSC	Specify the TV mode as NTSC or PAL.
		PAL	
Video In Mode	Video In Modes	Enable	Support the Video input mode
	Selection	Disable	Do not support Video input mode
ZV Port Enable	Enable	-	Support ZV port as Video output function.
	Dísable		Do not support Video output function.

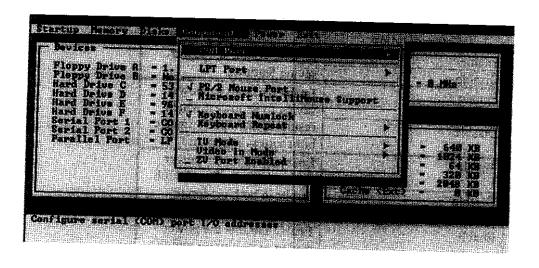


Figure 3-5
Components Menu

Power Menu

Item	Setting/Option		Function
Enable Power	Enable		Enable/Disable all power
Saving	Disable		saving features.
Low Power	Enable		Enable/Disable the power
Saving			saving to its lowest which
	Disable		results in max. performance
			but shortest battery life.
Medium Power	Enable		Enable/Disable the power
Saving			saving to its medium which
	Disable		results in both moderate
			performance and battery life.
High Power	Enable		Enable/Disable the power
Saving	D: 11		saving to its highest which
	Disable		results in min. performance
			but longest battery life.
Customize	Disk Standby	Always on	The hard disk will be put on
		30 sec	standby if it is not accessed within the specified period.
		1 min	Hard disk power will be
		3 min	restored when the disk drive
		10 min	is accessed again.
	Global Standby	Always on	The system power will be
		1 min	reduced if the system has
		2 min	been idle for the specified
		4 min	period. System power will
		6 min	be restored when any system
		8 min	activity is detected.
		12 min	
	•	16 min	

Item	Se	tting/Option	Allegion
Suspend Controls	Power Button	Power On/Off	The power button is switched to turn the system on or off.
	Function	Suspend/Resume	The power button acts as a suspend/resume button for switching the system between a working state and the suspend mode. Pressing the power button for more than four seconds will generate a power button over-ride event to switch the system from a working state to the Soft-Off state.
	Suspend Type	Suspend To Disk Suspend To RAM Powered On Suspend	Specify the suspend mode for power management.
	Suspend Timeout	Never 1 min 5 min 10 min 20 min 30 min	If the system has been idle for the specified period, the system will enter user-defined suspend.
Resume Timer	Alarm Resume	Enable Disable	Resume the system from the configured suspend mode when resume alarm timer expires.
	Resume Month/Day	/Hour/Minute	The system will resume at the specified time (month, day, hour and minute).

Item	Setting	/Option ====	Function
Enable MODEM Ring Resume	Enable		Resume the system from STR or POS mode when a modem ring is detected from the serial port.
	Disable		Disable the above.
Enable Battery Low Suspend	Enable		Automatically suspend the system upon a low battery condition.
	Disable		Disable the above.
Advance CPU Controls	Clock Control Mechanism	Full Speed Doze Mode	Specify the type of Processor Clock Control.

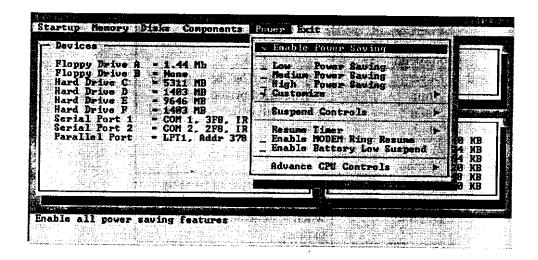


Figure 3-6
Power Menu

Exit Menu

Item	Sincion and a second		
Save and Exit	Save the current settings and reboot the system.		
Exit (No Save)	Exit without saving any current changes.		
Default Settings	Restore the default settings (the original ones found in ROM).		
Restore Settings	Restore the current setup settings to the original custom ones.		
Version Info	Show current BIOS version information.		

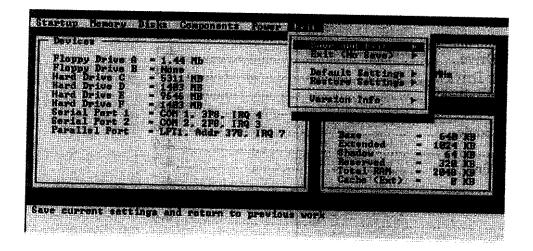


Figure 3-7
Exit Menu

Chapter 4: Troubleshooting

Sometimes your computer has some problems. Before you consult the computer vendor, you can try to solve problems yourself. The following is a list of some commonly experienced problems and their possible solutions.

Battery	4-2
Power	
Hard Disk Drive	
Floppy Disk Drive	4-4
Hardware Installation	
LCD Panel	4-5
Memory Module	4-6
PC Card	4-6
Boot Password	4-7
Audio	4-7
CD	
Printer	4-9
	Hard Disk Drive

Battery

Problem: The battery pack can not be charged.

Solution 1: The battery pack is exposed to excessively hot or cold environment. Let it restore to normal temperature before

you use it.

Solution 2: The battery pack might be used up.

Problem: The battery pack can not be charged and the charge indicator turns off.

Solution 1: The battery has been fully charged.

Solution 2: The battery pack is exposed to excessively hot or cold environment. Let it restore to normal temperature before

you use it.

Solution 3: The battery pack is used up.

Problem: The beep sound is heard and the low power indicator turns on.

Solution: The computer is in low power status. Please connect your computer with AC adapter, or press Fn + Esc key

combination to enter suspend mode.

Problem: The beep sound isn't heard whereas the low power

indicator turns on, or the gauge indicates power is less

than 10%.

Solution: The computer is in low power status. Please adjust the

volume control and connect the computer with AC adapter.

Problem: The actual battery operation time is shorter than expected.

Solution 1: The battery is exposed to excessively high or low

temperature. The ideal temperature for battery operation is between 50°F and 95°F (10°C and 35°C) whereas keeping

is between 32°F and 113°F (0°C and 45°C).

Solution 2: The battery has released some power. Please recharge it.

Solution 3: The power management has been turned off.

Some peripheral device or PC card is consuming power. Solution 4:

Turn off the unused device to save power.

The battery has been given a partial charge. When Solution 5: charging, always fully charge after fully discharge.

Power

The computer can not boot when the battery pack is not Problem:

inserted.

The power cord is not correctly connected with AC adapter. Solution 1:

Make sure the power cord is firmly plugged into grounded

outlet and computer.

The grounded outlet is not in normal operation. Check the Solution 2:

outlet's function or use other outlet.

The system has automatically entered suspend mode. Problem:

The system's temperature is too high. Let it cool before Solution 1:

you use it.

The system has entered suspend mode after a specified Solution 2:

period of time. Please press any key or touch the trackpad

to wake up the computer.

Hard Disk Drive

The message "Non-system disk" appears.

The computer is trying to boot from the floppy including no Problem: Solution:

software. Please take the floppy out and restart the

computer.

It takes a longer time to read the hard disk drive after Problem:

restarting the computer.

The data saved on hard disk drive may be lost. Please Solution 1:

operate the "disk defragmenter" to check the lost unit.

As in low battery status, the computer is waking up from Solution 2:

the suspend mode.

Floppy Disk Drive

Problem: The floppy disk drive can not write data to disk.

Solution 1: The floppy is not formatted.

Solution 2: The floppy is write-protected. Please cancel the protection.

Solution 3: The data is written to incorrect disk drive.

Solution 4: The space left on disk is not enough. Please use a new disk

or delete the unneeded data.

Problem: The disk drive can not read the disk.

Solution 1: The disk is not formatted. **Solution 2**: The disk is damaged.

Solution 3: An incorrect disk type is used.

Hardware Installation

Problem: The computer can not recognize the device as part of the

system.

Solution 1: The power switch of new device is not turned on. Please

turn on the power switch, then restart the computer.

Solution 2: You do not rearrange the computer after the device is

installed.

Solution 3: The power cord or the connector between device and

computer is plugged out. Please make sure the device is

firmly connected with the computer.

Solution 4: You do not follow the system configuration as the

computer suggested. Please follow the suggestion.

LCD Panel

Problem: The font is too dark.

Solution: The brightness or contrast is not correctly set. Please press

Fn+F7 or Fn+F8 key combination (only limited to DSTN panel) to adjust the contrast control, and use Fn+F9 or

Fn+F10 to adjust the brightness control.

Problem: The screen is blank.

Solution 1: The panel blank application might be set.

Solution 2: The system operates the screen saver after a specified

period of time. Please press any key or touch the trackpad.

Solution 3: The brightness or contrast needs to be adjusted. Please

press Fn+F7 or Fn+F8 key combination (only limited to DSTN panel) to adjust the contrast control, and use Fn+F9

or Fn+F10 to adjust the brightness control.

Solution 4: The system has entered suspend mode. Please press any

key or touch the trackpad to wake up the computer.

Problem: The panel displays incorrect font or blinks when the

computer is connected with monitor.

Solution: The resolution you use for monitor exceeds that the panel

can support whereas you have switched to panel. Please

restart the computer.

Memory Module

Problem: The computer can not boot.

Solution: The incorrect type of memory module is installed.

Problem: The memory capacity is not enough.

Solution: The memory is not correctly configured for the application.

Problem: The detected memory capacity is not correct.

Solution: Some memory module is not correctly installed or not

compatible with your computer.

Problem: The message "out of memory" is displayed.

Solution: The memory configuration is not correctly set or the

memory is not enough to run the application.

Problem: The message "insufficient memory" is displayed.

Solution: The application can not be operated as the memory is used

up.

PC Card

Problem: The PC card can not be configured.

Solution: The PC card is not supported.

Problem: The system can not recognize the PC card.

Solution 1: The PC card is not completely plugged into the socket or

reversely plugged.

Solution 2: The PC card driver is not installed.

Solution 3: The PC card or card driver is not compatible with the

computer.

Problem: The beep sound is not heard while the PC card is plugged

into.

Solution: The beep sound control is closed.

Boot Password

Problem:

You forget the boot password.

Solution:

While forgetting the password, you must unpack the

computer and delete the memory. Please ask the vendor for

help.

Audio

Problem:

The audio speaker can not be heard.

Solution:

The volume might be set too low. Please check your

volume control.

Problem:

The volume is too high (or too low).

Solution:

The volume is not correctly set. Please check your volume

control.

Problem:

The headphone can not be heard.

Solution 1:

The volume is not correctly set. Please check the volume

control.

Solution 2:

The volume source is not chosen.

Solution 3:

The headphone is plugged into the wrong jack.

CD

Problem: The compact disk can not be ejected.

Solution: The compact disk is not correctly placed in the tray.

Problem: The compact disk can not be read.

Solution 1: The compact disk is not correctly placed in the tray.

Solution 2: The compact disk is dirty. Please clean it with a CD-ROM

cleaner kit.

Problem: The musical compact disk can be read while the data disk

can not.

Solution: The compact disk hardware for reading data needs to be

checked.

Problem: All compact disks can not be read.

Solution 1: The Windows system can not recognize the CD-ROM drive

or the CD-ROM drive is not compatible with other devices.

Solution 2: The compact disk is dirty. Please clean it with a CD-ROM

cleaner kit.

Solution 3: The compact disk hardware for reading data needs to be

checked.

Printer

Problem: The printer is not ready.

Solution: The printer power cord is not plugged into or the connector

is not correctly connected.

Problem: The printer can not print.

Solution 1: The printer is not power on. Please turn on the printer.

Solution 2: The printer is not in "connected" status. Please set the

printer in "connected" status.

Solution 3: The paper is used up. Please add the paper.

Solution 4: The printer driver is not installed or correctly chosen.

Please check the system.

Solution 5: The printer for network is not connected with the network.

Problem: The printer prints incorrect data.

Solution 1: The printer driver is not installed or correctly chosen.

Solution 2: The printer power cord is not plugged into or the connector

is not correctly connected.

Chapter 5: Installing Drivers

The chapter helps you starting to operate the Notebook Computer with the procedures of how to install software, device drivers and utilities step by step. This chapter is designed for notebook beginners as well as advanced users. Please follow the steps and suggestions below to start a new notebook computing work.

Use the CD for drivers in the package; prepare a DOS startup disk and DOS files before installing drivers for the first time.

By following the steps and procedures in the chapter, users can start to work with your Notebook Computer at once.

For more details and operating help, please contact your service dealer.

Preparation	4-3
Installing Windows 95/98	4-4
Drivers for Win95	4-5
Drivers for Win98	
Drivers for WinNT 4.0	

Preparation

Preparation for a new notebook:

- 1. Use a DOS startup disk to start the Notebook Computer.
- 2. Run FDISK utility from DOS to create a bootable partition.

 After A prompt, type fdisk. (A: fdisk) Choose "1" and "C" to create hard disk as drive C:

(See DOS manual for the operation detail.)

- 3. Format hard disk. Follow the command "Format C:/S" to create a bootable hard disk and a bootable floppy disk. (A: format C) (C:/S copies system files to the formatted disk)
- Insert the disk of the CD-ROM driver. Type "Install" after A prompt.(A: install) See the driver manual for detail.

Preparation for installing software:

- 5. Restart the system
- 6. Make CD-ROM Drive readable
 - O Restart the system from the CD-ROM Drive:

 Press the key [Delete] and go to SUC Status while running the DOS system. Choose [BIOS], moving [CD-ROM] at the first one and save to exit the system. Restart the computer.
 - Restart from the Drive A:
 Copy Dos file [MSCD.exe] to drive C: and reboot the system. After A: prompt, type the letter of the CD-ROM Drive to begin installation. (d: e: or f:)

Installing Windows 95

- 1, Start DOS.
- 2. Insert the Windows 95 CD-ROM.
- 3. Go to the "setup" directory.
- 4. After the directory prompt, type "setup", then press [Enter].
- 5. After the Windows 95 setup program performs a routine check on your system, press [enter] to continue.
- 6. When the setup initializes, click "Continue".
- 7. Click "Yes" on the "License Agreement" screen.
- 8. Click "Next" to select "Collecting Information About your PC".
- 9. Click "Next" to select the default of "C:\Windows", or enter a different directory.
- 10. On the screen of "Setup Options", select "Portable" for Notebook Computers, then click "Next".
- 11. On the screen of "Certificate of Authenticity", enter the Product Identification Number, then click "Next".
- 12. On the screen of "User Information", enter your name and company, then click "Next".
- 13. Select "Install the Most Common Components (recommended)", then click "Next".
- 14. On the screen of "Startup Disk", insert a blank diskette into Drive A to create a startup diskette.
- 15. The Setup Wizard is now copying files. After the copying is finished, remove the disk, then click "OK".
- 16. Click "Next" to start copying Windows 95 files to your computer.
- 17. Click "Finish" to restart Windows 95.
- 18. On the screen of "Set Up a Printer", click "Cancel". Note: Do not install a printer at this time.
- 19. Click "OK" to restart the Notebook Computer.

Installing Windows 98

- 1. Start DOS.
- 2. Insert the Windows 98 CD-ROM.
- 3. Go to the "setup" directory, type "setup", then press [Enter].
- 4. Follow the instructions on the screen. Also choose the recommended ones showing on screen.
- 5. The Windows 98 setup program will check the hard disk drive automatically.
- 6. When the setup initialize, click "Continue".
- 7. Choose "License Agreement" to agree the contrast.
- 8. Click "Next" to type the product ID number.
- 9. Click "Next" the program will automatically check the system.
- 10. Choose the directory for your computer. Select the path of "C:\Windows", or type another path.
- 11. For reinstallation, choose "Yes" (recommended) to keep the files.
- 12. Select your location.
- 13. To create a Win98 Startup disk, insert a floppy disk into drive A. To create the startup disk later, choose "cancel".
- 14. Press "Next", and then the program will copy files to the hard disk to your computer.
- 15. At the same time, the screen will show the Win98 concerned information, also the items of setup one by one.
- 16. After the automotive setup stops, restart the computer.

Installing Drivers for Win95 OSR2.1

Step I: Run USB supplement path update file

- After finishing Win95 ORS2.1 installation, go to Win95.
- O Download the file <USB supplement path update file> from Microsoft Web Site to run the USB supplement path.

Step II: Setup [TXPATCH]

- O Under Win95, open the driver [TXPATCH] Intel 82371xb.inf TX chip from the compact disk.
- Open [setup.exe.] and follows the instruction to complete the installation.
- O Restart the system.

Step III. VGA Driver Installation

O Under Win95, Click [Start] at the bottom-left corner on the screen. Select [Run]. Open the path [D:\WIN9X\setup.exe] Note: When ATI VGA driver has been existed in Win95 system, Click [Start]. Select [Run]. Open the path [atiuinst-clean]. Double-click [Ok] to finish installation.

Step IV: Audio Driver Installation

- Under Win95, click [Start]; select [Setting]; click [Control Panel] \ [Device Manager]\ [Other Devices] and delete [Unknown Device] by clicking [Remove] and [Ok].
- O Restart the notebook; go to Win95. Repeat the steps by opening [Start]\[Setting]\[Control Panel]. Open [Add New Hardware Wizard] (PCI Multimedia Audio Device). Click [Next]\[Other Locations] and [Browse] to find the path from CD-ROM driver as [CD-ROM drive: \Audio\Win95]. Then click [Ok]. Press [Finish] to set up the first audio driver.

Step V: PCMCIA Driver Installation

- Under Win95, click [Start]; open [Setting], [Control Panel],
 [System], [Device Manager], select [Other Device] and
 remove [PCI CardBus Bridge]. Select [Ok]
- Under Control Panel, choose [Add New Hardware]; click [Add PCMCIA Socket]. Choose the file [pcmcia.inf] from the disk

or CD to install. Click the following one by one, [Manufacture Texas Instruments], [Texas Instruments], [PCI-1225 CardBus Control], [Next], [Next] and [Finish].

Note: Make sure whether the files are copied to drive ${\it C}$ successfully.

[c:\windows\system\cbss.vxd] [c:\windows\system\pccard.vxd] [c:\windows\system\pci.vxd]

[c:\windows\inf\pcmcia.inf]

Step VI: Video-in Driver Installation

- O Boot the system, switching to SCU system by press keys Ctrl+Alt+S before running Windows. Choose [Components] from the top of the screen. Choose [Enable] for [Video-In Mode]
- O Under Windows, Select [Start], [Run] and open the path [D:\video-in \setup.exe] to complete the installation.

Step VII: ATI DVD Play Driver Installation

Note: Firstly install VGA Driver, Secondly installing Audio Driver and then DirectX 5.

 Under Win95, click [Start], [Run] and open the path [D:\Ati-DVD\Setup.exe].

Drivers for Win98

Step I: VGA Driver Installation

- O After installing Win98 successfully, enter into the system. Click [Start] at the bottom-left corner; select [Run]; open the path of [D:\WIN9X\setup.exe] to run VGA driver installation.
- O When ATI VGA driver has already included in the system, click [Start], select [Run] and open the path of [\atiuinst-clean] and double-click [Ok].

 Note: For ATI VGA included system, uninstall the original

VGA Driver and then install the driver.

Step II: Audio Driver Installation

- O Under Win98, click [Start]; select [Setting], [Control Panel], [System]. Open [Device Manager]; select [Other Devices]; press [Remove] to delete [PCI Multimedia Audio Device]. Click [Ok] and restart the notebook.
- O Enter Win98; find [Control Panel] and open [Add New Hardware Wizard]: choose [PCI Multimedia Audio Device], [Next] and click [Browse] to enable the setting of [specify a location]. Open the path of [D:\audio\WIN95], click [Next] and [Finish] to set up the first audio driver.

Step III: PCMCIA Driver Installation

- O Go to Win98. Click [Start], [Control Panel], [System]. Remove PCMCIA and also delete two sub-directories [Generic CardBus Controller].
- O Switch to DOS. Copy the file [PCMCIA.inf] to the directory [C:\windows\inf].
- O Reboot Win98 system.

Step IV: Video-in Driver Installation

Chapter 5: Installing Drivers

O Restarting the notebook, before entering windows, press the keys Ctrl+Alt+S to switch to SCU status. Select [Component] and choose [Enable] for [Video-In Mode].

O Under Win98, click [Start], [Run] and open the path [D:\video-in\setup.exe] to complete the installation.

Drivers for WinNT 4.0

Preparation

O Install [Service Pack3] to the system or see Microsoft for the latest operation system update.

Step I: VGA Drivers

- O Choose [Start], [Setting], [Control Panel]. Open [Display], [Setting], [Display Type], [Change]. Then, Chick [Have Disk] and [Browse] and open the path [D:\VGA\NT4.0]. Click [Ok] to copy all concerned files to the hard disk.
- O Restart WinNT4.0 system.

Step II: Audio Drivers (ESS 1978 M2EM / 1978S M2E)

- O Under WINNT 4.0 system, click [Start], [Setting], [Control Panel], [Multimedia] and [Device]. Click [Add], [Ok] and [Browse] to open the path [D:\audio\NT4.0] and select [Ok]
- O Reboot the system.

Appendix A: Specifications

This appendix describes the features and specifications for the Notebook Computer.

Processor

Mobile Pentium II processors (AGP) at 300/266/233 MHz

■ Memory

- 3.3V power supply
- 64 bit data bus system memory
- Supports EDO/SDRAM
- 8MB expandable up to 256MB
- Two 144-pin SODIMM package

System BIOS

- 256KB flash ROM
- SystemSoft BIOS with Smart Battery
- Plug and Play 1.0a
- ACPI

Display

- 13.3" TFT XGA (1024x768 pixels) LCD panel available
- AGP 2X
- 64 bits Hardware 2D/3D Graphics Engine
- Motion Video acceleration
- Motion Compensation
- Support Video Playback
- High quality TV-out
- High quality dedicated S-Video TV Out
- 4MB display memory SGRAM type
- Vertical Interpolate 720V x 480H pixel wide video source
- CRT resolution up to 1280x1024x16M non-interlaced

Appendix A: Specifications

- Ratiometric LCD expansion
- 230 MHz DAC
- Tri-View for a triple display solution, TV, CRT and LCD
- Support VPM 1.10

■ Mass Storage

- 3.5" floppy diskette drive
- 2.5" hard disk drive (12.7mm high or less)
- 5.25" CD-ROM.
- Support Master mode IDE.
- Support PIO mode 4/ATA-33 (Ultra DMA)

Audio

- Sound Blaster Pro compatible
- Full duplex operation
- 3D stereo sound effects
- Built-in microphone
- Built-in speakers
- Wavetable Downloadable
- IIS interface for external ZV port MPEG audio
- High-quality FM music synthesizer 16 bits stereo sound system, compliant to PC97 Rev. 1.0

■ PC Card Sockets

- One Type III PC card or two Type II PC cards
- One socket ZV-capable
- CardBus support

Input/Output *

- Built-in trackpad (PS/2)
- USB port
- S-video jack for TV output
- External CRT monitor (CRT) port
- Parallel port (LPT1)

User's Manual

- Serial port (COM 1)
- PS/2 type port (External keyboard/Mouse)
- Microphone-in jack
- Headphone jack
- DC-in jack
- Docking connector for Port Replicator (Optional)

■ Infrared Wireless Communication

- IrDA
- FIR
- ASKIR

Keyboard

- Windows 95
- Detachable for various language versions

Power Management

- APM 1.2
- ACPI
- Global standby
- Suspend and resume
- CPU over temperature protection
- Secondary cache power control
- Device power management for all devices
- Battery low suspend

Rechargeable Battery Pack

- Ni-MH battery available
- Li-Ion battery available
- Battery low warning

÷,

Auto-switching with AC power adapter

■ Size & Weight

- -302mm(w)x249mm(d)x46mm(h)
- 3kg

■ Temperature Environment

- Operating 5°C~35°C
- Storage -20°C~60°C

Humidity Environment

- 20%~80%, non-condensing
- OperatingStorage 10%~90%, non-condensing

Appendix B: I/O Port Pin Assignments

Parallel Port

Pin	Signal	Pin	Signal
1	Strobe#	14	Auto Linefeed#
2	Data 0	15	Error#
3	Data 1	16	Initialize#
4	Data 2	17	Select In
5	Data 3	18	Ground
6	Data 4	19	Ground
7	Data 5	20	Ground
8	Data 6	21	Ground
9	Data 7	22	Ground
10	ACK#	23	Ground
11	Busy	24	Ground
12	Paper Empty	25	Ground
13	Select		

Serial Port

Pin	Signal	the second second
1	DCD (Data Carrier Detect)	
2	RXD (Received Data)	
3	TXD (Transmitted Data)	
4	DTR (Data Terminal Ready)	
5	GND (Signal Ground)	
6	DSR (Data Set Ready)	
7	RTS (Request To Send)	
8	CTS (Clear To Send)	
9 •	RI (Ring Indicator)	

Monitor Port

Pin	Signal	Pin	Signal	Pin	Signal
1	RED	6	GND	11	N.C
2	GREEN	7	GND	12	DDCDATA
3_	BLUE	8	GND	13	HSYNC
4	N.C	9	N.C	14	VSYNC
5	GND	10	GND	15	DDCCLK

PS/2 Type Port

Pin	Signal
1	EKDA
2	EMDA
3	GND
4	VCC
5	EKCLK
6	EMCLK

S-video Jack

Pin	Spart
1	GND
2	GND
3	XLUMA
4	XCRMA

USB Port

P	
1	VCC
2	DATA-
3	DATA+
4	GND

PC Card Sockets

Socket A:

Pin	Signal	Pin	Signal
Al	GND	A2	N/A
A3	A CD3	A4	A CD1#
A5	A CD4	A6	A CD11
A7	A CD5	A8	A CD12
A9	GND	A10	A CD6
A11	A CD13	A12	A CD7
A13	A CD14	A14	A CE1#
A15	A_CD15	A16	GND
A17	A_CA10	A18	A CE2#
A19	A_OE#	A20	A VS1
A21	A_CA11	A22	GND
A23	A IORD#	A24	A CA9
A25	A_IOWR#	A26	A CA8
A27	A_CA17	A28	GND
A29	A CA13	A30	A CA18
A31	A_CA14	A32	A CA19
A33	A WE#	A34	A CA20
A35_	A_RDYBY#	A36	A CA21
A37	A VCC C	A38	A VCC C
A39	A_VPP	A40	A VPP
A41	GND	A42	A CA16
A43	GND	A44	A CA22
A45	A CA15	A46	A CA23
A47	A_CA12	A48	A CA24
A49	A CA7	A50	A CA25
A51	GND	A52	A CA6
A53	A_VS2	A54	A CA5
A55	A_RESET	A56	A CA4
A57	A_WAIT#	A58	A CA3
A59	GND	A60	A INPACK
A61	A_CA2	A62	A REG#
A63	A_CA1	A64	A BVD2#
A65	A_CA0	A66	A BVD1#
A67	A_CD0	A68	GND
A69	A CD8	A70	A CD1
A71	A_CD9	A72	A CD2
A73	A_CD10	A74	GND
A75	A_WP#	A76	A_CD2#
A77	GND	A78	GND

Appendix B: I/O Port Pin Assignments

Socket B:

and a supplied the second of t

Pin	Signal	Pin	Signal
B1	GND	B2	N/A
B3	B_CD3	B4	B CD1#
B5	B_CD4	B6	B CD11
B7	B_CD5	B8	B CD12
B9	GND	B10	B CD6
B11	B_CD13	B12	B CD7
B13	B_CD14	B14	B CE1#
B15	B_CD15	B16	GND
B17	B_CA10	B18	B_CE2#
B19	B_OE#	B20	B VS1
B21	B_CA11	B22	GND
B23	B_IORD#	B24	B CA9
B25	B_IOWR#	B26	B CA8
B27	B_CA17	B28	GND
B29	B_CA13	B30	B_CA18
B31	B_CA14	B32	B CA19
B33	B_WE#	B34	B CA20
B35	B_RDYBY#	B36	B CA21
B37	B_VCC_C	B38	B VCC C
B39	B_VPP	B40	B VPP
B41	GND	B42	B CA16
B43	GND	B44	B CA22
B45	B_CA15	B46	B CA23
B47	B_CA12	B48	B_CA24
B49	B_CA7	B50	B CA25
B51	GND	B52	B CA6
B53	B_VS2	B54	B CA5
B55	B_RESET	B56	B_CA4
B57	B_WAIT#	B58	B_CA3
B59	GND	B60	B_INPACK
B61	B_CA2	B62	B REG#
B63	B_CA1	B64	B BVD2#
B65	B_CA0	B66	B_BVD1#
B67	B_CD0	B68	GND
B69	B_CD8	B70	B_CD1
B71 1	B_CD9	B72	B CD2
B73	B_CD10	B74	GND
B75	B_WP#	B76	B_CD2#
B77	GND	B78	GND

User's Manual

Appendix B: I/O Port Pin Assignments