

### 國際電器認證中心有限公司 International Electrical Certification Centre Ltd.

提供電器產品測試國際認證及諮詢服務 Technical Services in Electrical Product Testing, International Certification & Information

FCC ID: L9G47688A



### Exhibit 5 - User's Manual

### RADIO CONTROL VEHICLE

## OWNER'S MANUAL (PLEASE READ CAREFULLY BEFORE OPERATING TOY)

### I. INSTALLING BATTERIES

### IMPORTANT

- DO NOT LEAVE BATTERIES IN THE VEHICLE OR THE TRANSMITTER WHEN THE TOY IS NOT IN USE.
- DO NOT USE OLD AND NEW BATTERIES TOGETHER
- DO NOT MIX DIFFERENT TYPES OF BATTERIES (e.g., ALKALINE, AND MANGANESE, OR OTHER NON-ALKALINE BATTERIES).
- DISPOSE OF OLD BATTERIES IN THE PROPER MANNER; DO NOT BURN OF PLACE NEAR FIRE.

### BATTERY REQUIREMENTS

THIS VEHICLE REQUIRES 8 "AA" BATTERIES AND 3"AA" BATTERIES FOR THE TRANSMITTER.

### INSTALLING THE BATTERIES

TRANSMITTER - REMOVAL OF THE BATTERY COVER REQUIRES
A "PHILLIPS HEAD" SCREWDRIVER. AFTER
REMOVING THIS SCREW, SLIDE THE COVER
DOWNWARD TO REMOVE. PLACE THE "AA"
BATTERIES IN POSITION SO THAT THE + AND ARE IN THE PROPER ALIGNMENT AS NOTED.
REPLACE SCREW TO BATTERY COVER.

VEHICLE
- REMOVAL OF THE BATTERY COVER WILL AGAIN
REQUIRE A "PHILLIPS HEAD" SCREWDRIVER,
TURN THE LOCK TAB AND REMOVE THE COVER.
MAKE SURE THE "AA" BATTERIES ARE NEW AND
WE RECOMMEND ALKALINE BATTERIES (DO NOT

rya tida a sama agan to to

# MIX OLD OR USED BATTERIES WITH NEW BATTERIES). REPLACE THE BATTERY COVER, AND SECURE WITH THE SCREW THAT WAS PREVIOUSLY REMOVED.

### II. OPERATING R/C TRUCK

### IMPORTANT

- DO NOT USE VEHICLE IN MUD, WATER, SNOW, OR SAND.
- DO NOT PLAY WITH VEHICLE IN THE STREET.
- DO NOT CRASH VEHICLE INTO ANY OBJECT AT HIGH SPEEDS WHEN THE VEHICLE SLOWS DOWN INSTALL FRESH BATTERIES.
- CLEAN THE VEHICLE WITH A DAMP PAPER TOWEL AFTER OPERATING (DO NOT USE ANY CHEMICALS TO WIPE OFF VEHICLE)
- DO NOT LEAVE VEHICLE IN DIRECT SUNLIGHT FOR LENGTHY PERIODS.

### **OPERATING TRUCK**

- 1. TURN THE TRUCK SWITCH TO "ON"
- 2. START OPERATING BY MOVING SPEED CONTROL JOYSTICK ON THE LEFT FORWARD OR BACKWARD.
- 3. VEHICLE STEERING IS CONTROL BY JOYSTICK ON RIGHT BY MOVING LEFT OR RIGHT.
- 4. DO NOT LET VEHICLE GET OUT OF TRANSMITTING RANGE AS YOU WILL THEN HAVE NO CONTROL. THIS RANGE VARIES DUE TO SURROUNDINGS.
- 5. WHEN FINISHED, TURN ALL SWITCHES TO OFF POSITION AND REMOVE ALL BATTERIES. VEHICLE OPERATION VARIES FROM

30 TO 40 MINUTES DEPENDING ON HOW THE VEHICLE IS USED, AND THE AGE OF THE BATTERIES.

WHEEL ALIGNMENT - YOUR STEERING CAN BE ADJUSTED WITH THE TRIM SWITCH LOCATED ON THE BOTTOM CHASSIS AREA. TURN EITHER LEFT OR RIGHT UNTIL YOU HAVE MADE THE ADJUSTMENT TO MAINTAIN A STRAIGHT PATH OF MOVEMENT.

### THINGS YOU SHOULD KNOW

- RADIO INTERFERENCE CAN CAUSE YOUR TRUCK TO REACT STRANGELY
- ANOTHER VEHICLE OPERATING ON THE SAME FREQUENCY CAN DISRUPT YOUR CONTROLLING THE VEHICLE
- CB'S CELLULAR TELEPHONES, TWO WAY RADIOS, AND OTHER TRANSMITTING DEVICES, AND HIGH TENSION WIRES MAY CAUSE INTERFERENCE WITH OPERATION.
- YOUR VEHICLE CAN SOMETIMES CAUSE INTERFERENCE WITH TELEVISION OR EVEN RADIO RECEPTION. MOVE TO ANOTHER AREA IF YOU NOTICE THIS OCCURRENCE.

### WARRANTY

ARTIN WARRANTS THIS PRODUCT AGAINST MANUFACTURER'S DEFECTS FOR A PERIOD OF 90DAYS FROM THE DATE OF PURCHASE. PLEASE KEEP YOUR SALES RECEIPT WITH THE PACKAGING FOR THAT PERIOD AS PROOF OF PURCHASE. PLEASE CALL OUR "HOTLINE" 1-800-97-ARTIN(27846). WITHIN THIS PERIOD OF TIME (90DAYS) WE WILL REPAIR OR REPLACE WITHOUT CHARGE FOR ANY MANUFACTURING DEFECTS ONLY. THIS WARRANTY DOES NOT COVER POSTAGE AND TRANSPORTATION COSTS. ACCIDENTAL DAMAGE, MISUSE, ABUSIVE USE, CRASHING, CORROSION FROM DAMPNESS, OR ANY OTHER DAMAGE RELATED TO MISUSE ARE NOT COVERED BY THIS WARRANTY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY.