 


## Pause

A 2-second PAUSE may be inserted into the speed dialing of telephone numbers. Press REDIAL/P button at required point during storage of a number in memory.

## Page / Handset Locator

Send a signal from the base to handset. Press PAGE button on base and a series of rings will sound from handset. The sound will be stopped automatically after about 15 seconds or the PAGE button on base is pressed again.

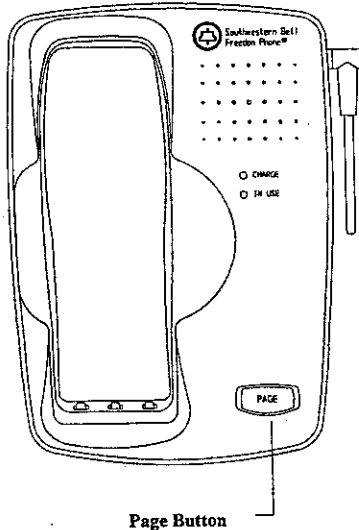

## Memory Feature

Store up to 20 numbers in memory for quick dialing.

### To Program Frequently Called Numbers

1. Pick up handset, with TALK off.
2. Press MEMORY button. The IN USE LED will blink as indication.
3. Dial phone number (up to 16 digits). If a pause is needed during dialing to access a long distance service, press REDIAL/P key.
4. Press MEMORY button again.
5. Press TWO numbers key (01-20) for the memory location where the number is to be stored.
6. TWO quick beeps will confirm the number has been successfully stored.
7. Record numbers to be speed dialed on memory index label, which can be adhered to the base or other desired locations.

Note: If a 17th digit is accidentally pressed or a pause of more than 30 seconds occurs during programming, an error tone(long beep) will sound. Try again. Each TONE(\*) or PAUSE entered uses one of the 16 available memory digits.

### Change a Stored Number

Replace a stored number by programming a new number in its place.

### Dialing a Number Stored in Memory

1. Lift handset. Press TALK.
2. With TALK button lit, press MEMORY.
3. Press memory location (01-20) assigned to number being called.

### Erasing a Number Stored in Memory

1. Pick up handset, with TALK off.
2. Press MEMORY button twice

3. Enter memory location (01-20) to be erased.

## Selecting Ringer Melody

During standby, pressing the FLASH key with 1-4 key on handset will select the ringer melody type 1-4.

## Adjusting Ringer Volume

During standby, pressing the VOL-UP or VOL-DOWN key on handset will change the ringer volume to high level or low level.

## Adjusting Earpiece Volume

During a call, the earpiece volume can be increase by pressing VOL-UP key Or decrease by pressing VOL-DOWN key. There are four level: Low, Medium, Normal & High.

## Battery Low indication

The LOW BAT LED will flash during battery low. If you are talking in battery low, you will also hear a Beep tone from the ear-piece.

## Out of range

If you are talking in out-of-range, you will hear 2-Beep tone from the ear-piece and the LOW BAT LED will flash.

It will go to idle automatically if out of range condition lasts for 30 seconds. Please move closer to the base.

# TROUBLESHOOTING .....

If you experience difficulty operating your cordless phone, try the suggestions below.

If the trouble persists, call the Southwestern Bell Freedom Phone® Retail Sales Toll Free Help Line at 1-800-366-0937, Monday – Friday between the hours of 8:30 a.m. – 4:30 p.m. (EST)

## The unit will not operate / no dial tone:

 
- Make sure IN USE LED is lit.
- Make sure AC adaptor is plugged into base unit and wall outlet.
- Make sure telephone line cord is plugged into wall jack.
- Make sure base antenna is in upright position.
- Make sure handset battery is fully charged.
- Make sure you have selected correct dialing mode, tone (touch) or pulse (rotary).
- Make sure you are within usable range of the base station.
- Reset security code by placing handset in base for 5-10 seconds.

## The phone does not ring when you receive a call:

- Make sure the RINGER switch on handset is turned to ON.
- Make sure AC adaptor is plugged into base unit and wall outlet.
- Make sure telephone line cord is plugged into wall jack.
- Make sure you are within usable range of the base station.
- You might have too many extension phones on your line. Try unplugging a few.

## Noise, static, interference or other calls heard while using handset:

- Make sure base antenna is in upright position.
- Make sure you are within usable range of the base station.
- Make sure AC adaptor is not plugged into wall outlet with other appliances.
- Try relocating base unit to another location.
- Make sure handset battery is fully charged.

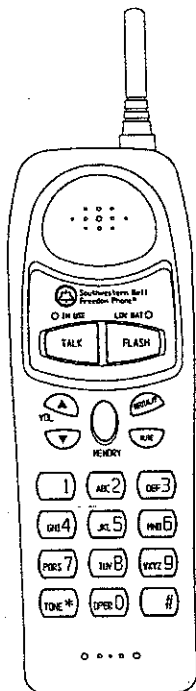

## Phone will not hold charge:

- Make sure charging contacts on the handset and base are free of dust and dirt. Clean contacts with a soft cloth.
- Make sure CHARGE LED on base is lit when handset is in cradle.
- If necessary, replace handset battery.
- (See handset Battery Charging)

 
## Difficulty in placing or receiving calls:

- Move closer to base and try again.
- If moving closer doesn't work, you may have lost security code. Reset code by placing handset back on base for 5-10 seconds. (See Security Code section)
- Make sure you have selected correct dialing mode, tone or pulse.
- Make sure AC adaptor is not plugged into wall outlet with other appliances. Disconnect for 5-10 seconds then reconnect. Place handset back on base and then replug AC adaptor.
- Make sure handset battery is fully charged.

# INSTALLATION .....

## CAUTION

1. Never install a telephone during a lightning storm.
2. Never install a telephone in a wet location.
3. Never touch uninsulated telephone wires or terminals.
4. Use caution when installing a telephone line

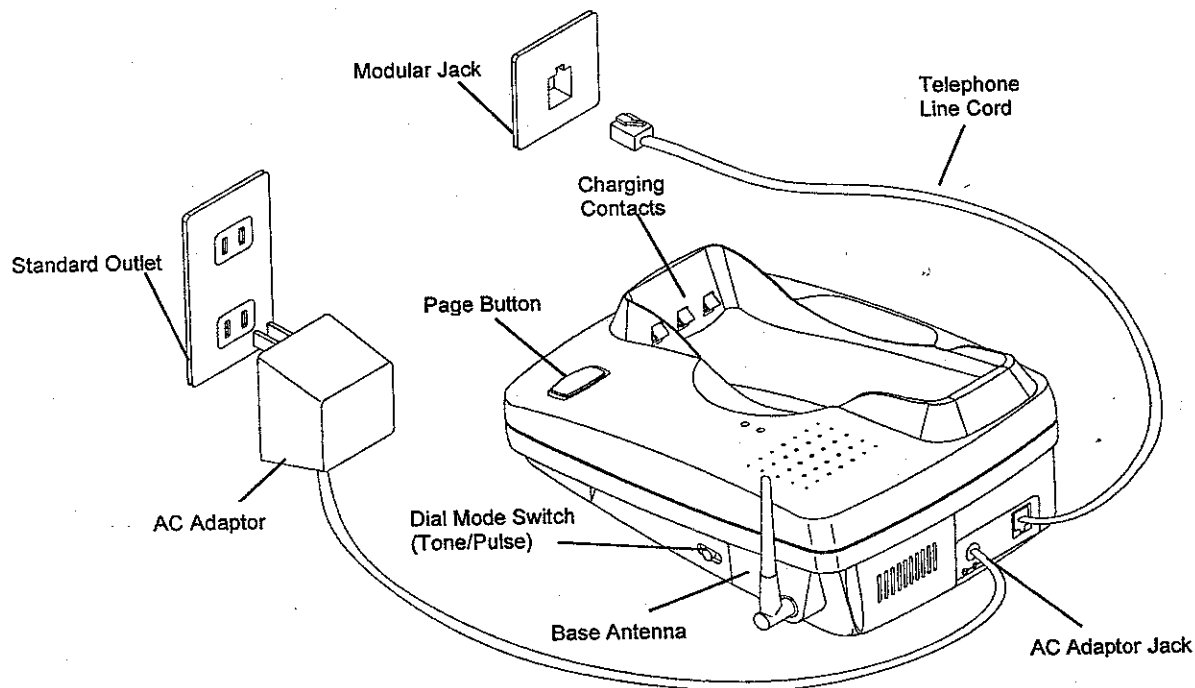

### 120 Volt Outlet / Telephone Jack

1. This phone requires a modular phone jack (RJ11) and a standard 120 volt outlet.
2. Plug phone directly into outlet.
3. Do not plug other appliances into outlet or have outlet controlled by a wall switch.

### Wall Mount Installation

Base unit may be mounted on a standard wall plate.

1. Insert AC adaptor into back of base unit.
2. Insert one end of short line cord into back of base unit, passing line cord through groove.
3. Plug other end of line cord into modular jack.
4. Mount base on wall plate studs and gently press until the unit locks in place.
5. Plug AC adaptor directly into standard 120 volt outlet.

 
### Desk Top Installation

1. Plug one end of line cord into back of base unit.
2. Plug other end of line cord into modular jack.
3. Press until locking lever clicks.
4. Connect AC adaptor into back of unit and plug directly into standard 120 volt outlet.

# INSTALLATION

## Antenna

Adjust base antenna to upright position

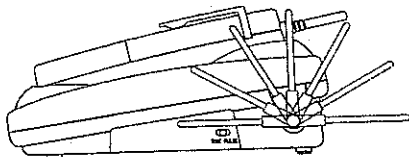

Please check with local phone company if uncertain of type of service.

## Ringer On/Off

Set switch (on handset) to ON or OFF. Ringer switch must be ON for handset to ring during incoming calls.

 
## Handset battery Charging

The battery pack in the handset must be fully charged 10-14 hours before using the telephone for the first time.

1. Place handset in base. The **CHARGE LED** on base will light.
2. After batteries are fully charged, check for dial tone by pressing **TALK** on handset.
3. When the handset battery get low, the **LOW BAT LED** will flash at idle. During Talk, there will also be a beep from the ear-piece every 15 seconds. Return to cradle for charging.

## Set Tone/Pulse Switch

Set switch (side of base) to correct dialing mode **TONE** or **PULSE**.

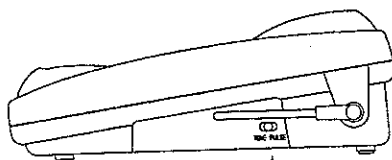

Tone/Pulse Switch

To recharge battery pack, place handset in base and:


1. Make sure contact points are touching and **CHARGE LED** is lit.
2. Be careful not to short battery with conducting materials such as rings, bracelets and keys.

Replace battery every 2 years. Use only a Southwestern Bell Freedom Phone® approved NiCad battery in your cordless phone.


# INSTALLATION .....
 
## To Replace Battery:


1. Remove battery cover.

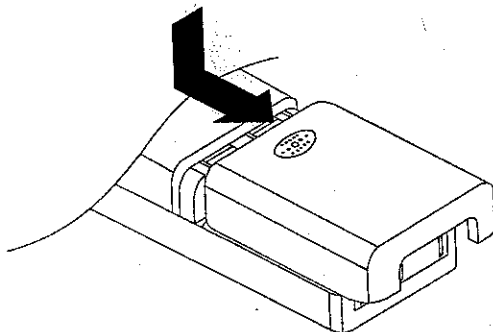

 2. Install new battery.

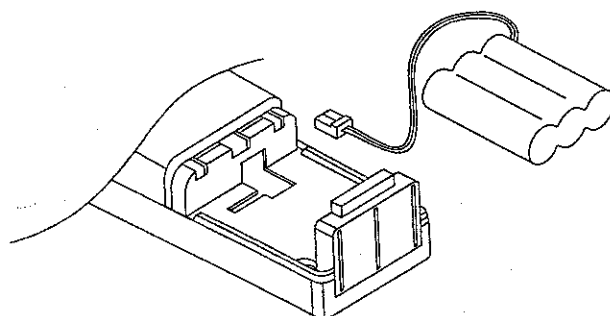

 3. Close battery cover. Charge 10-14 hours before first use.

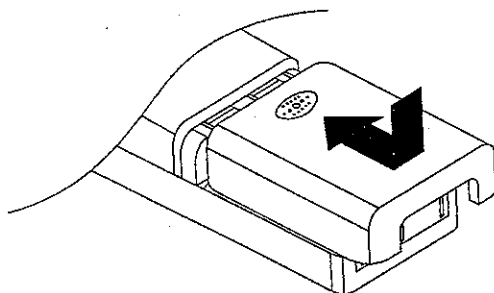

.....