

Inside the CCD housing is a camera and 2.4GHz transmitter channel selection (CH 1: 2412MHz, CH 2: 2442MHz, CH 3: 2472MHz), by Dip switches on the body. You can set-up channel by Dip switches.