



 
► TURNING YOUR PAGER ON

- 1 Press and hold the keybutton.
- 2 Your pager alerts and shows in the left column of the display. The time and date are shown at the bottom of the display.

► TURNING YOUR PAGER OFF

- 1 Press to display the function menu.
- 2 Press to move the cursor to .
- 3 Press twice to turn the pager off.

► DISPLAY SYMBOLS- FUNCTION MENU

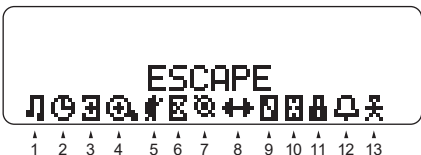

- | | |
|-------------------------------|------------------------------|
| 1. Select Alert Tone | 8. Escape (to status screen) |
| 2. Set Time and Alarm | 9. Delete Message |
| 3. Set Private Time | 10. Delete All Message |
| 4. Zoom In / Out | 11. Lock / Unlock Message |
| 5. Set Audible / Silent Alert | 12. Set Message Alarm |
| 6. Set On / Off Duty | 13. Add to Note Book |
| 7. Turn Pager Off | |

► Frequency Range (MHz)

VHF (136 - 174MHz)

► DISPLAY SYMBOLS - MESSAGE READ FUNCTIONS

I. Pager Status Symbols: (Left column of the screen)

Symbol	Function
	Private Time
	Power On
	Audible Alert Mode
	Alarm

II. Message Status Symbols: (Top three rows of display)

Symbol	Function
	Locked Message
	Message stored
	Memory Full
	Alarmed Message

► PAGER SYMBOLS

I. Function Menu Symbols: (Bottom row of display)

Symbol	Function
	Select Alert Tone
	Set Time & Alarm
	Set Private Time
	Display Zoom In
	Display Zoom Out
	Set Audible Alert
	Status: Off Duty
	Status: On Duty
	Turn Pager Off
	Escape
	Delete Message
	Delete All Message
	Lock Message
	Unlock Message
	Set Message Alarm
	Maildrop Alert On
	Maildrop Alert Off
	Add to Notebook
	Choose Profile

II. Choose Alert Symbols: (On Choose Alert Menu)

Symbol	Function
	No Message Alert
	Chirping Alert
	Time Format: 24 Hour
	A.M.
	P.M.
	Disable Alarm
	Enable Alarm
	Set Reminder Alert
	Set Alert Mode
	Set Alert And Vibrate Mode
	Set Vibrate Then Alert Mode
	Set Vibrate Mode
	Set Chirp Mode
	Set Silent Mode
	Set Continuous Vibrate
	Set Interrupted Vibrate
	Set General Tone
	Set Escalating Tone


III. Other symbols

Symbol	Function
	Private Time Enabled
	Private Time Disabled
	Time Format: 24 Hour
	A.M.
	P.M.
	Disable Alarm
	Enable Alarm
	Full Battery Gauge
	Low Battery Gauge
	Error Data Indicator
	Message Continuation
	Truncated Message
	Out of Range

► RECEIVING AND READING YOUR MESSAGES

When a message is received, your pager alerts and displays a flashing symbol.

 - 1 Press any button to stop the alert.
- 2 Press to display your message.

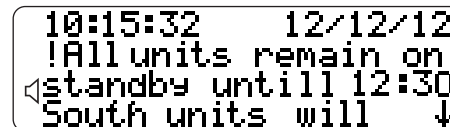

Example of New Message

► READ STORED MESSAGE

The pager automatically stores the message and the time and date it is received. A flash arrow at the bottom right corner of the screen indicates the message you are reading continues beyond the four lines of the display.

- 1 Press to advance to the next screen of the message.
- 2 Press to read your message line by line.
- 3 Press and hold to rapidly scroll through your message, screen by screen.

► USING THE FUNCTION MENU

Press to display the function menu The function menu gives you access to the many features of your pager through a series of symbols and prompts.

For example, when the function menu screen is first displayed, the symbol flashes, indicating the present position of the cursor. You can now press to move the cursor within function menu.

Note: To exit from any menu without making changes, press .

► DISPLAY ZOOM

The standard 4-line display is converted to a 2-line display. The characters are enlarged vertically, increasing message readability.

 
To ENABLE DISPLAY ZOOM :

- 1 From the Function menu, press to move the cursor to .
- 2 Press Display zoom is now active. All new and stored messages are displayed in a two line format.
- 3 Pager prompts are not enlarged in the zoom mode. To exit from zoom use function menu to select the icon.

► CHOOSING PROFILE


Only when there are more than 2 profile set in the PPS, you can select "Choose Profile" from the menu.

- 1 Press to display the status.
- 2 Press to display the function menu and press to move the cursor to as follows:

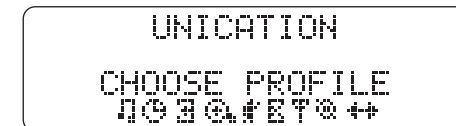

Example of Function Menu Choose Profile Screen

 - 3 Press to display the choose profile screen.

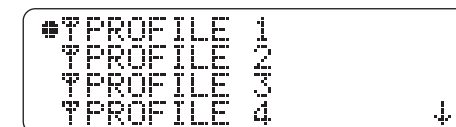

Example of Choose Profile Screen

- 4 Press to select profile.
- 5 Press to enable the selected profile and the selected profile is activated.

► **SETTING PRIVATE TIME**

To set your pager's Private Time feature, proceed as follows:

 
You can select a time period during which your pager is completely silent.

Your pager still receives message but is does not alert.

The pager alerts only if an alarm expires or a priority message is received.

- 1 Press ● to display the function menu.
- 2 Press ◀ to move the cursor to 3 .
- 3 Press ● to display the Private Time screen.

When the screen is first displayed, the cursor is at the farthest left position. The enabled (3) or disabled (3) symbol indicates the current status.

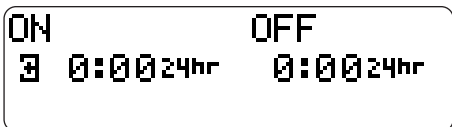


Example of Private Time Screen

- 4 Press ▲ or ▼ to select 3 or 3 .
- 5 Press ▶ to move the cursor to the hour digit. The auto off time is displayed on the left and the auto on time is displayed on the right.
- 6 Press ▲ or ▼ to adjust the hour.
- 7 Repeat the process for each set of digits for both the on time and the off time (hour, minute, AM/PM if your pager is set to display time in the 12 hour mode).
- 8 Press ● to activate Private Time. The 3 symbol is displayed if the Private Time function is enabled. If the on time is equal to the off time, the pager does not enable the PrivateTime function.

► **SETTING THE TIME AND DATE**

 - 1 Press ● to display the function menu.
- 2 Press ▶ to move the cursor to 6 .
- 3 Press ● to display the set-time-and-alarm screen.
- 4 Press ▶ to move the cursor to the hour digit.
- 5 Press ▲ or ▼ to adjust the hour.
- 6 Press ▶ to move the cursor to the minute digit.
- 7 Press ▲ or ▼ to adjust the minute.
- 8 Repeat the process for each set of digits: AM/PM/ 24 hr., month/day/year.
- 9 Press ● to activate the time and date change.

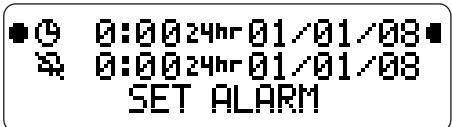

Example of Set Time and Alarm Screen

 
If you move the cursor past the last symbol in the row (far right), it automatically wraps around and displays at the first symbol in the beginning of the same row (far left).

Note: To exit from any menu without making changes, press ■ .

► **SETTING THE ALERT MODE**

The alert can be set as either audible or silent.

- 1 Press ● to display the function menu.
- 2 Press ◀ to move the cursor to 4 or 4 .

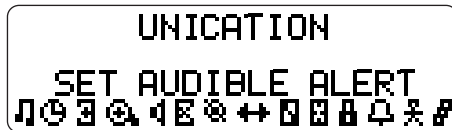

Example of Setting the Alert Mode Screen

The 4 symbol is displayed if the pager is in the silent alert mode (prompting you to enter the audible mode, if desired).



The 4 symbol is displayed if the pager is in the audible alert mode (prompting you to enter the silent mode, if desired).

- 3 Press ● to select the desired alert mode.

If the selected mode is audible (4), your pager emits a short chirp.

 
If the selected mode is silent (4) and your pager is equipped with a vibrator, your pager vibrates.

► **SETTING THE ALARM**

The alarm on your pager can be set two daily alarms for a specific time and date, or it can be used as a daily alarm.

To set the alarm for a specific time and date:

- 1 Press ● to display the function menu.
- 2 Press ◀ to move the cursor to 6 .
- 3 Press ● to display the set-time-and-alarm screen.
- 4 Press ▼ to move the cursor to 6 .

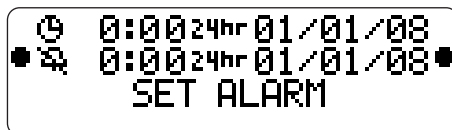

Example of Set Alarm Screen

The alarm symbol defines the alarm status—either alarm enabled (6) or alarm disabled (6) .

- 5 Press ▶ to move the cursor to 6 .
- 6 Press ▼ or ▲ to enable (6) or disable (6) the alarm.
- 7 Press ▶ to move the cursor to the hour digit.
- 8 Repeat the process for each entry (minute, AM/PM, and date).
- 9 Press ● to activate your selection. The 6 symbol is shown on the display.

At the selected time, your pager emits a 12-second audible alert even if the pager is in the silent mode.

► **SETTING THE ALERT PATTERN**

Note: The pager must be in the audible alert mode to select the alert pattern. Your pager has six alert modes (alert mode, alert and vibrate mode, vibrate then alert mode, vibrate mode, chirping mode, silent mode), sixteen alert patterns (one standard alert, eight different pleasing alerts, seven different urgent alert), two vibrate modes (continuous vibrate, interrupted vibrate) and two tone modes (general tone, escalating tone), allowing you to select and change the alert.

 
► **TO CHANGE YOUR MESSAGE ALERT:**

- 1 Press ● to display the function menu.
- 2 Press ◀ to move the cursor to 7 (choose alert) , then press ● .




Example of Setting the Message Alert Pattern Screen

- 3 Press ▶ to move the cursor to the source digit (23 in this example).

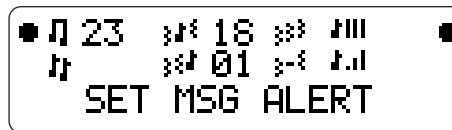

Example of Setting the Message Alert Pattern Screen

 - 4 Press ▲ or ▼ to adjust the source.

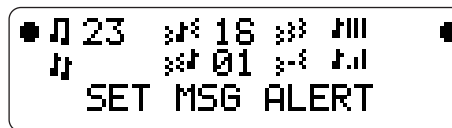


- 5 Press ▶ to move the cursor to the alert mode.
- 6 Press ▲ or ▼ to adjust the alert mode.
- 7 Repeat the process for the alert mode, alert pattern, vibrate mode and tone mode settings.
- 8 Press ● to activate the alert change.

► **BATTERY INFORMATION**


The Alpha Legend II pager is designed to operate with a single AA-size good quality alkaline rechargeable battery (carbon zinc batteries are not to be used).

To install or replace the battery, turn the pager to its right side and proceed as follows:

 - 1 Twist the circle battery door anticlockwise and lift it away from the housing.
- 2 Remove the battery away from the housing by sliding it out of the battery compartment, taking note of the positive (+) and negative (-) markings on the battery and the pager housing.
- 3 Insert the rechargeable battery by sliding it into the battery compartment, taking note of the positive (+) and negative (-) markings on the battery.
- 4 Replace the battery door.

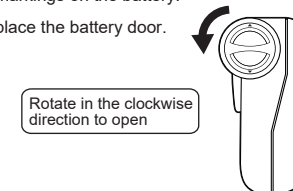

 Rotate in the clockwise direction to open

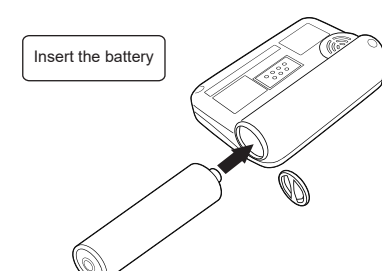

Insert the battery

CAUTION: Only use the batteries provided by the original manufacturer.

CARE OF YOUR PAGER

To maintain the quality of the pagers display, do not expose it to direct heat and moisture e.g., on the dashboard in vehicle etc.

CLEANING YOUR PAGER

To clean smudges and grime from the exterior of the housing, use a soft, nonabrasive cloth moistened in a mild soap and water solution. Rinse the surface using a second cloth moistened in clean water. Do not immerse the pager in water. **Do not use any other cleaning solutions.**

REPAIR AND MAINTENANCE

If your pager is not functioning or needs to be serviced, it should be returned to your authorised contact centre.

Note : Bluetooth function will be enabled automatically after the device is turned on.

Unication Co., Ltd.
 Address: 5F, No.6, Wu-Kung 5Rd.,
 Hsinchuang City., New Taipei, Taiwan.
 +886-2-22999678
 salesenquiry@uni.com.tw
 www.uni.com.tw

Federal Communications Commission Statement

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by doing one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.