

ITM. / ART. 2006134 ITM. / ART. 1487544 ITM. / ART. 1487019 ITM. / ART. 1486906 Ready-to-Play® Series

Lionel Ready-to-Play® Train Set Owner's Manual

Assembly required Batteries not included



CHOKING HAZARD-Small parts. Not for children under 3 years.

FCC and RSS Statements

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Model Numbers: Berkshire: 7-12100 General: 7-12102 4-6-0: 7-12103 Remote: 7-12105


This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- · Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/ or follow local government regulations.


Joining the track sections



Layouts

 


Additional track is now available to create new layouts. SOLD SEPARATELY.

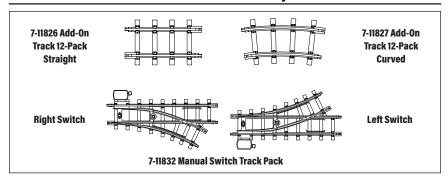

Installing AAA batteries into the Wireless Controller

Important!

3 AAA batteries required (not included).

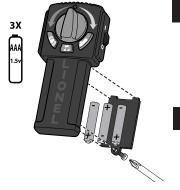

Important!

REMOVE ALL BATTERIES WHEN THE TRAIN WILL NOT BE USED FOR AN EXTENDED PERIOD OF TIME. LIONEL'S LIMITED WARRANTY DOES NOT COVER DAMAGE TO YOUR WIRELESS CONTROLLER CAUSED FROM LEAKING BATTERIES.

Important!

When you are not operating the train, slide the On/Off switch to the OFF position to conserve the battery life.

Important!

6 C batteries required (not included).


Important!

Remove all batteries when the train will not be used for an extended period of time. Lionel's Limited Warranty does not cover damage to the locomotive caused from leaking batteries.


Important!

Use Alkaline 'C' batteries. Use only new batteries. Never mix new and used batteries or use different types of batteries together.

Installing 'C' batteries into the Berkshire Locomotive (The Polar Express)

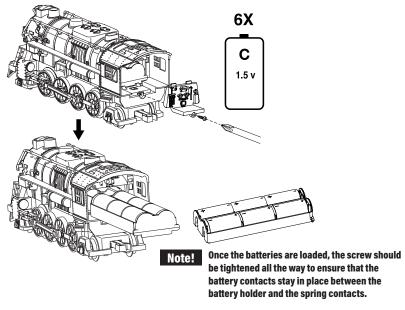

Installing 'C' batteries into the 4-6-0 Locomotive (Hogwarts Express)

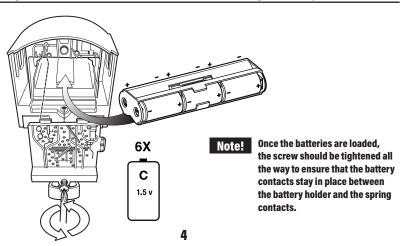


Important! 6 C batteries required (not included).

Remove all batteries when the train will not be used for an extended period of time. Lionel's Limited Warranty does not cover damage to the


locomotive caused from leaking batteries.


Important! Use Alkaline 'C' batteries. Use only new batteries. Never mix new and used batteries or use different types of batteries together.

Installing 'C' batteries into the General Locomotive (Mickey Mouse & Toy Story)

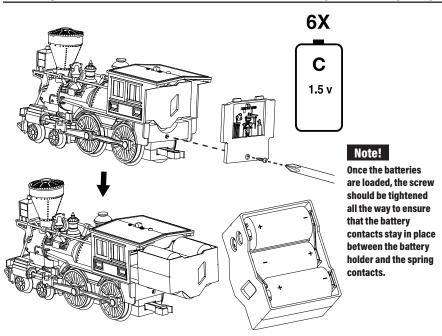

  
Connecting the locomotive and train cars together






Attaching the included coupler extenders (System B ONLY)

 
If you are experiencing difficulty keeping the train cars connected to one another, snap the coupler extenders onto each coupler arm as depicted in the image to the right. This should help prevent the train cars from becoming un-coupled.




Power activation button on the locomotive


Note! The engine will beep until the remote turns on.

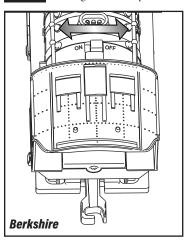

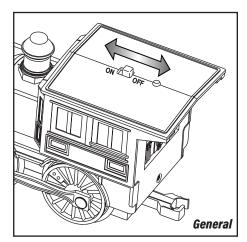

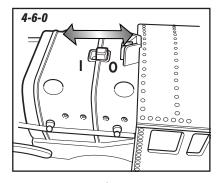

Note! LEAVING THE WIRELESS CONTROLLER POWER ON WHEN NOT IN USE WILL DRAIN THE CONTROLLER'S BATTERY.

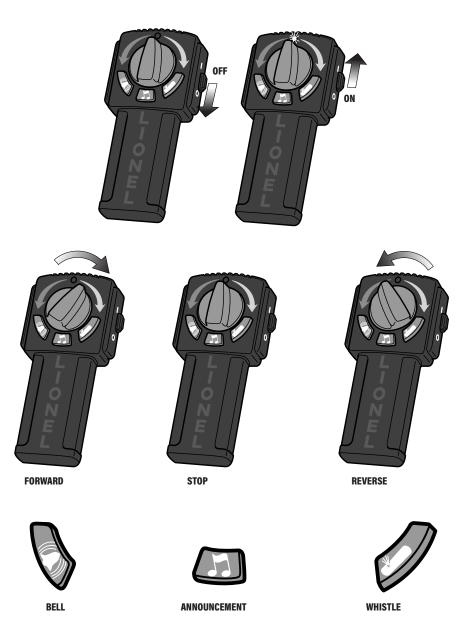





DO NOT RETURN TO STORE

For help with assembly or warranty service call our toll free number:

1-800-4-LIONEL (454-6635)

Monday through Friday 9AM to 6PM EDT Language Spoken: English

This product is covered by a ONE year limited warranty effective from the date of purchase against defects in materials and workmanship.

AUSTRALIA: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Distributed by: Costco Wholesale Corporation P.O. Box 34535 Seattle, WA 98124-1535 USA 1-800-774-2678 www.costco.com

415 W. Hunt Club Road Ottawa, Ontario K2E 1C5, Canada 1-800-463-3783 www.costco.ca * faisant affaire au Québec sous le nom les Entrepôts Costco

Costco Wholesale Canada Ltd.*

Importado por: Importadora Primex S.A. de C.V. Blvd. Magnocentro No. 4 San Fernando La Herradura Huixquilucan, Estado de México C.P. 52765 RFC: IPR-930907-S70

> (55)-5246-5500 www.costco.com.mx

Costco Wholesale Australia Ptv Ltd 17-21 Parramatta Road Lidcombe NSW 2141 Australia www.costco.com.au

Costco Wholesale UK Ltd / Costco Online UK Ltd Hartspring Lane Watford, Herts WD25 8JS United Kingdom 01923 213113

www.costco.co.uk

Costco Wholesale Spain S.L.U. Polígono Empresarial Los Gavilanes C/ Agustín de Betancourt, 17 28906 Getafe (Madrid) España NIF: B86509460 900 111 155 www.costco.es

Costco Wholesale Iceland ehf. Kauptún 3-7, 210 Gardabaer Iceland www.costco.is

Costco France Lavenue de Bréhat 91140 Villebon-sur-Yvette France 01 80 45 01 10 www.costco.fr

Costco Wholesale Japan Ltd. 3-1-4 Ikegami-Shincho Kawasaki-ku, Kawasaki-shi, Kanagawa 210-0832 Japan 0570-200-800 www.costco.co.ip

Costco Wholesale Korea, Ltd. 40. Iliik-ro Gwangmyeong-si Gyeonggi-do, 14347, Korea 1899-9900 www.costco.co.kr

Costco Wholesale New Zealand Limited 2 Gunton Drive Westgate Auckland 0814 New Zealand

Costco (China) Investment Co., LTD. Room 1003, Block 2, 2388 Xiupu Road, Pudong New Area, Shanghai China 201315 +86-21-6257-7065



©2021 LIONEL L.L.C., CONCORD, NC 28027 UNITED STATES OF AMERICA PRINTED IN CHINA







BOM #: 05-MAN-L-FCC-21

Date: 2021-05-04 Size: (L)5.5" x (H)8.5"

FCC Statements

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Model Numbers: Berkshire: 712100 General: 712102 Thomas: 712104 Diesel: 712101 4-6-0: 712103 Remote: 712105

RSS Statements

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil comprend des émetteurs/récepteurs exemptés de licence conformes aux normes CNR d'Innovation, Sciences et Développement économique Canada. Son fonctionnement est assujetti aux deux conditions suivantes:

- Cet appareil ne doit pas causer de brouillage.
- Cet appareil doit accepter tout brouillage reçu, y compris le brouillage pouvant entraîner un mauvais fonctionnement de l'appareil.
- · Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickle-cadmium) hatteries
- Different types of batteries or new and used batteries are not to be mixed.
- · Only batteries of the same or equivalent type as recommended are to be used.
- · Batteries are to be inserted with correct
- . Exhausted batteries are to be removed from the toy.
- · The supply terminals are not to be short-
- . Dispose of battery(ies) safely
- . Do not dispose of this product in a fire. The batteries inside may explode or leak
- · Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be re from the toy before being charged.
- · Rechargeable batteries are only to be used under adult supervision.

- Ne pas combiner des piles alcalines, standard (carbone-zinc) ou rechargeables (nickel-cadmium).
- · Ne jamais combiner des niles neuves et usagées, ni utiliser différents types de piles.
- · Utiliser uniquement des piles du même type ou de type équivalent à celles qui sont recommandées.
- · Les pôles de pile doivent être insérés dans le bon sens, en respectant la polarité.
- Les piles déchargées doivent être enlevées du jouet.
- · Les bornes d'alimentation ne doivent pas être court-circuitées.
- Mettre les piles au rebut de facon sécuritaire.
- · Ne pas jeter ce produit au feu. Les piles à
- l'intérieur pourraient exploser ou fuir.
- Ne pas recharger les piles non rechargeables. Les piles rechargeables doivent être enlevées du jouet avant d'être rechargées
- Les piles rechargeables doivent être chargées seulement sous la surveillance d'un adulte

- · No mezcle baterías alcalinas, estándar (de zinc-carbón) o recargables (níquel-cad
- No se deben mezclar baterías de distinto tipo o baterías nuevas y usadas.
- Sólo deben utilizarse baterías del mismo tipo o del tipo equivalente recomendad
- · Las baterías deben insertarse con la
- polaridad correcta. • Las baterías gastadas deben extraerse del iuquete.
- Los terminales de alimentación no deben ponerse en cortocircuito.
- Deseche las baterías de forma segura
- No incinere este producto. Las baterías que contiene pueden explotar o sufrir derram
- Las haterías no recargables no se deben recargar.
- · Las baterías recargables deben extraerse del juguete antes de recargarse.
- Las baterías recargables solo deben utilizarse bajo la supervisión de una persona adulta.



CHOKING HAZARD-Small parts. Not for children under 3 years.

AVERTISSEMENT :

RISQUE D'ÉTOUFFEMENT - Petites pièces. Ne convient pas aux enfants de moins de 3 ans

ADVERTENCIA:

PELIGRO DE ASFIXIA - Piezas pequeñas. No apto para niños menores de 3 años.



DO NOT RETURN TO STORE **NE PAS RETOURNER AU MAGASIN NO DEVOLVER A LA TIENDA**

For help with assembly or warranty service call our toll free number:

Pour obtenir de l'aide pour l'assemblage ou le service sous garantie, appelez notre numéro sans frais:

Para obtener ayuda respecto al ensamblaje o el servicio de garantía, llame sin costo al:

1-800-4-LIONEL (454-6635)

Monday through Friday 9AM to 6PM Language Spoken: English

This product is covered by a ONE year limited warranty effective from the date of purchase against defects in materials and workmanship.

AUSTRALIA: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



©2021 LIONEL L.L.C., CONCORD, NC 28027 UNITED STATES OF AMERICA

PRINTED IN CHINA







MADE IN CHINA

The following Lionel marks are used throughout this Owner's Manual and are protected under law. All rights reserved. Lionel®. Ready-to-Play®




IMPORTANT

READ THIS MANUAL before attempting to operate the device.

SAVE THIS MANUAL. This manual contains important operating instructions for this device.

PARTS DETAIL

LOCOMOTIVE

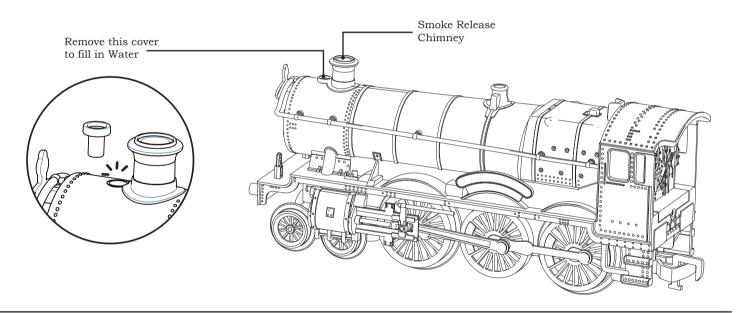

INSTRUCTIONS

- 1. Turn the Switch on Locomotive to ON position, and turn the Switch on Remote Controller to ON position. Then the train is ready to go.
- 2. Please use the dropper that comes with this set to add Water to the Locomotive. Please only add around 6 drops in an empty water container. DO NOT over fill the water container.
- 3. Only use this product with clean, room temperature water.
- 4. Do not use salt water or soapy water.
- 5. After playing, remove the water cover and put the Locomotive upside-down to remove any remaining water.
- 6. For better Battery life, turn the Switch on Locomotive to OFF position, and turn the Switch on Remote Controller to OFF position after play.