

Figure 5
Removed the Top Cover, Internal Frame



Figure 6
Main Board (Component Side) & LED Display Board

ATM-G97670

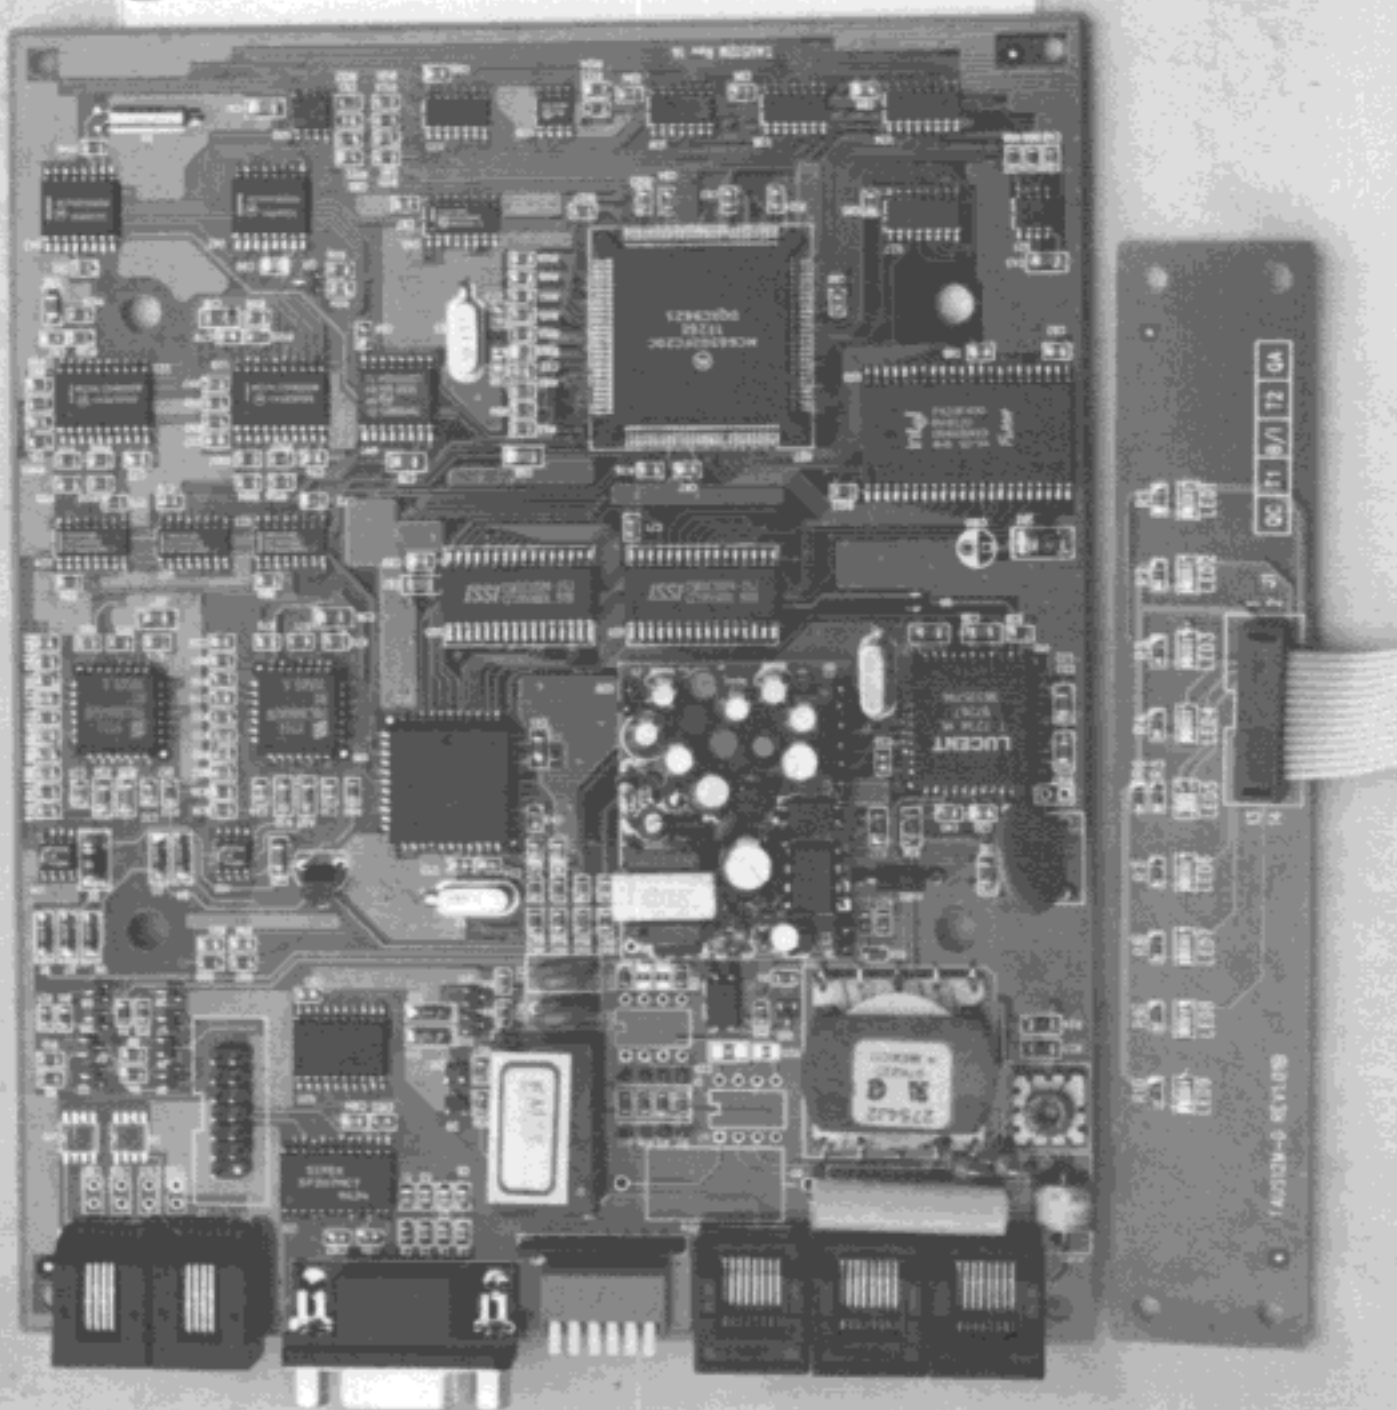


Figure 7
Main Board (Foil Side) & LED Display Board

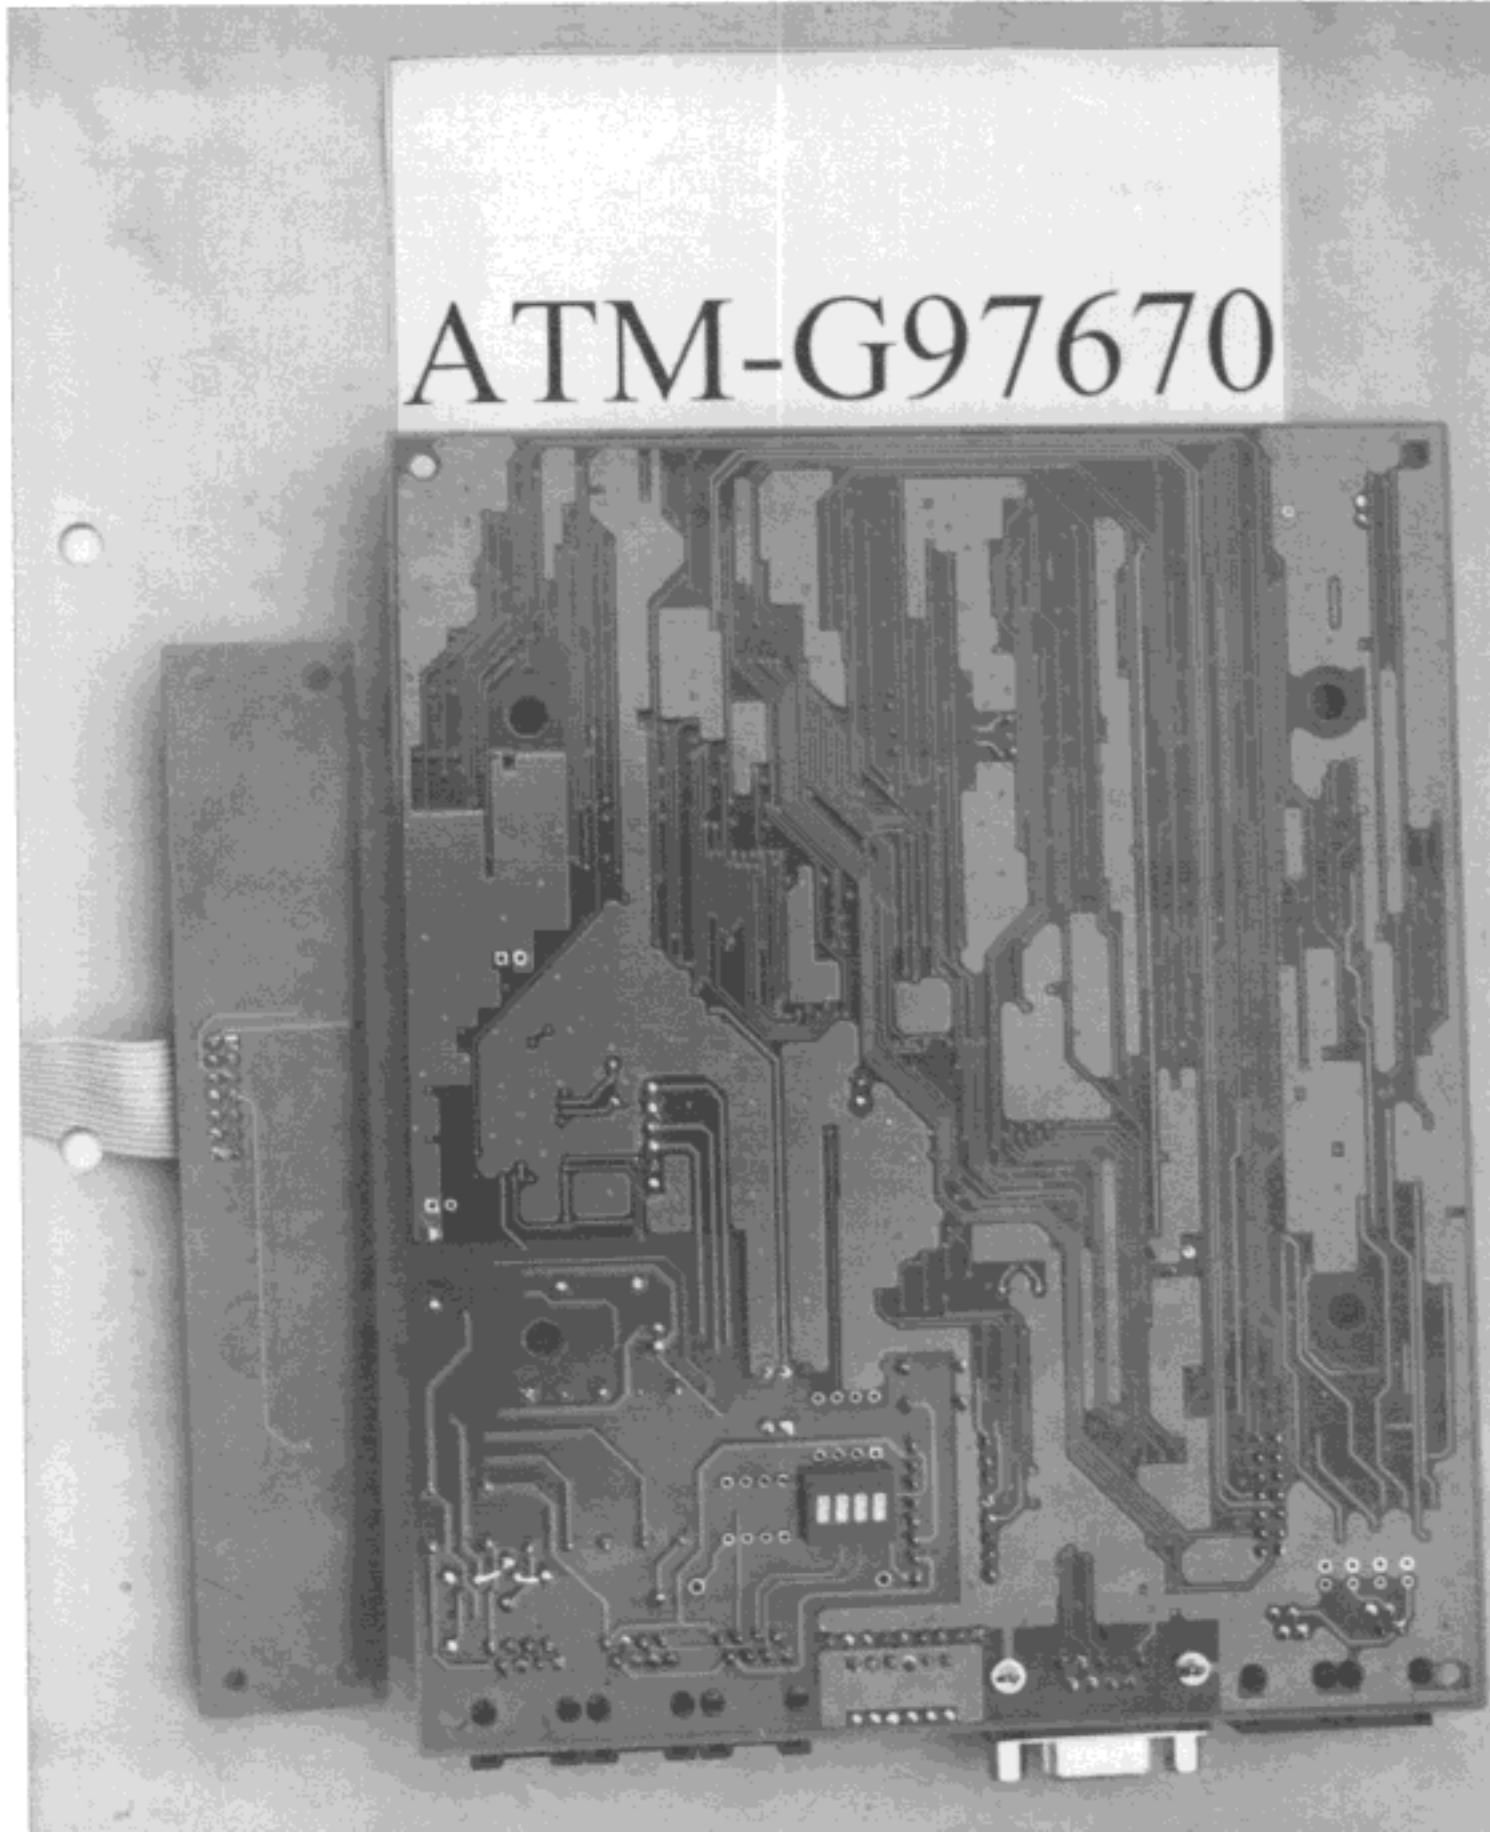


Figure 8
Empty Case

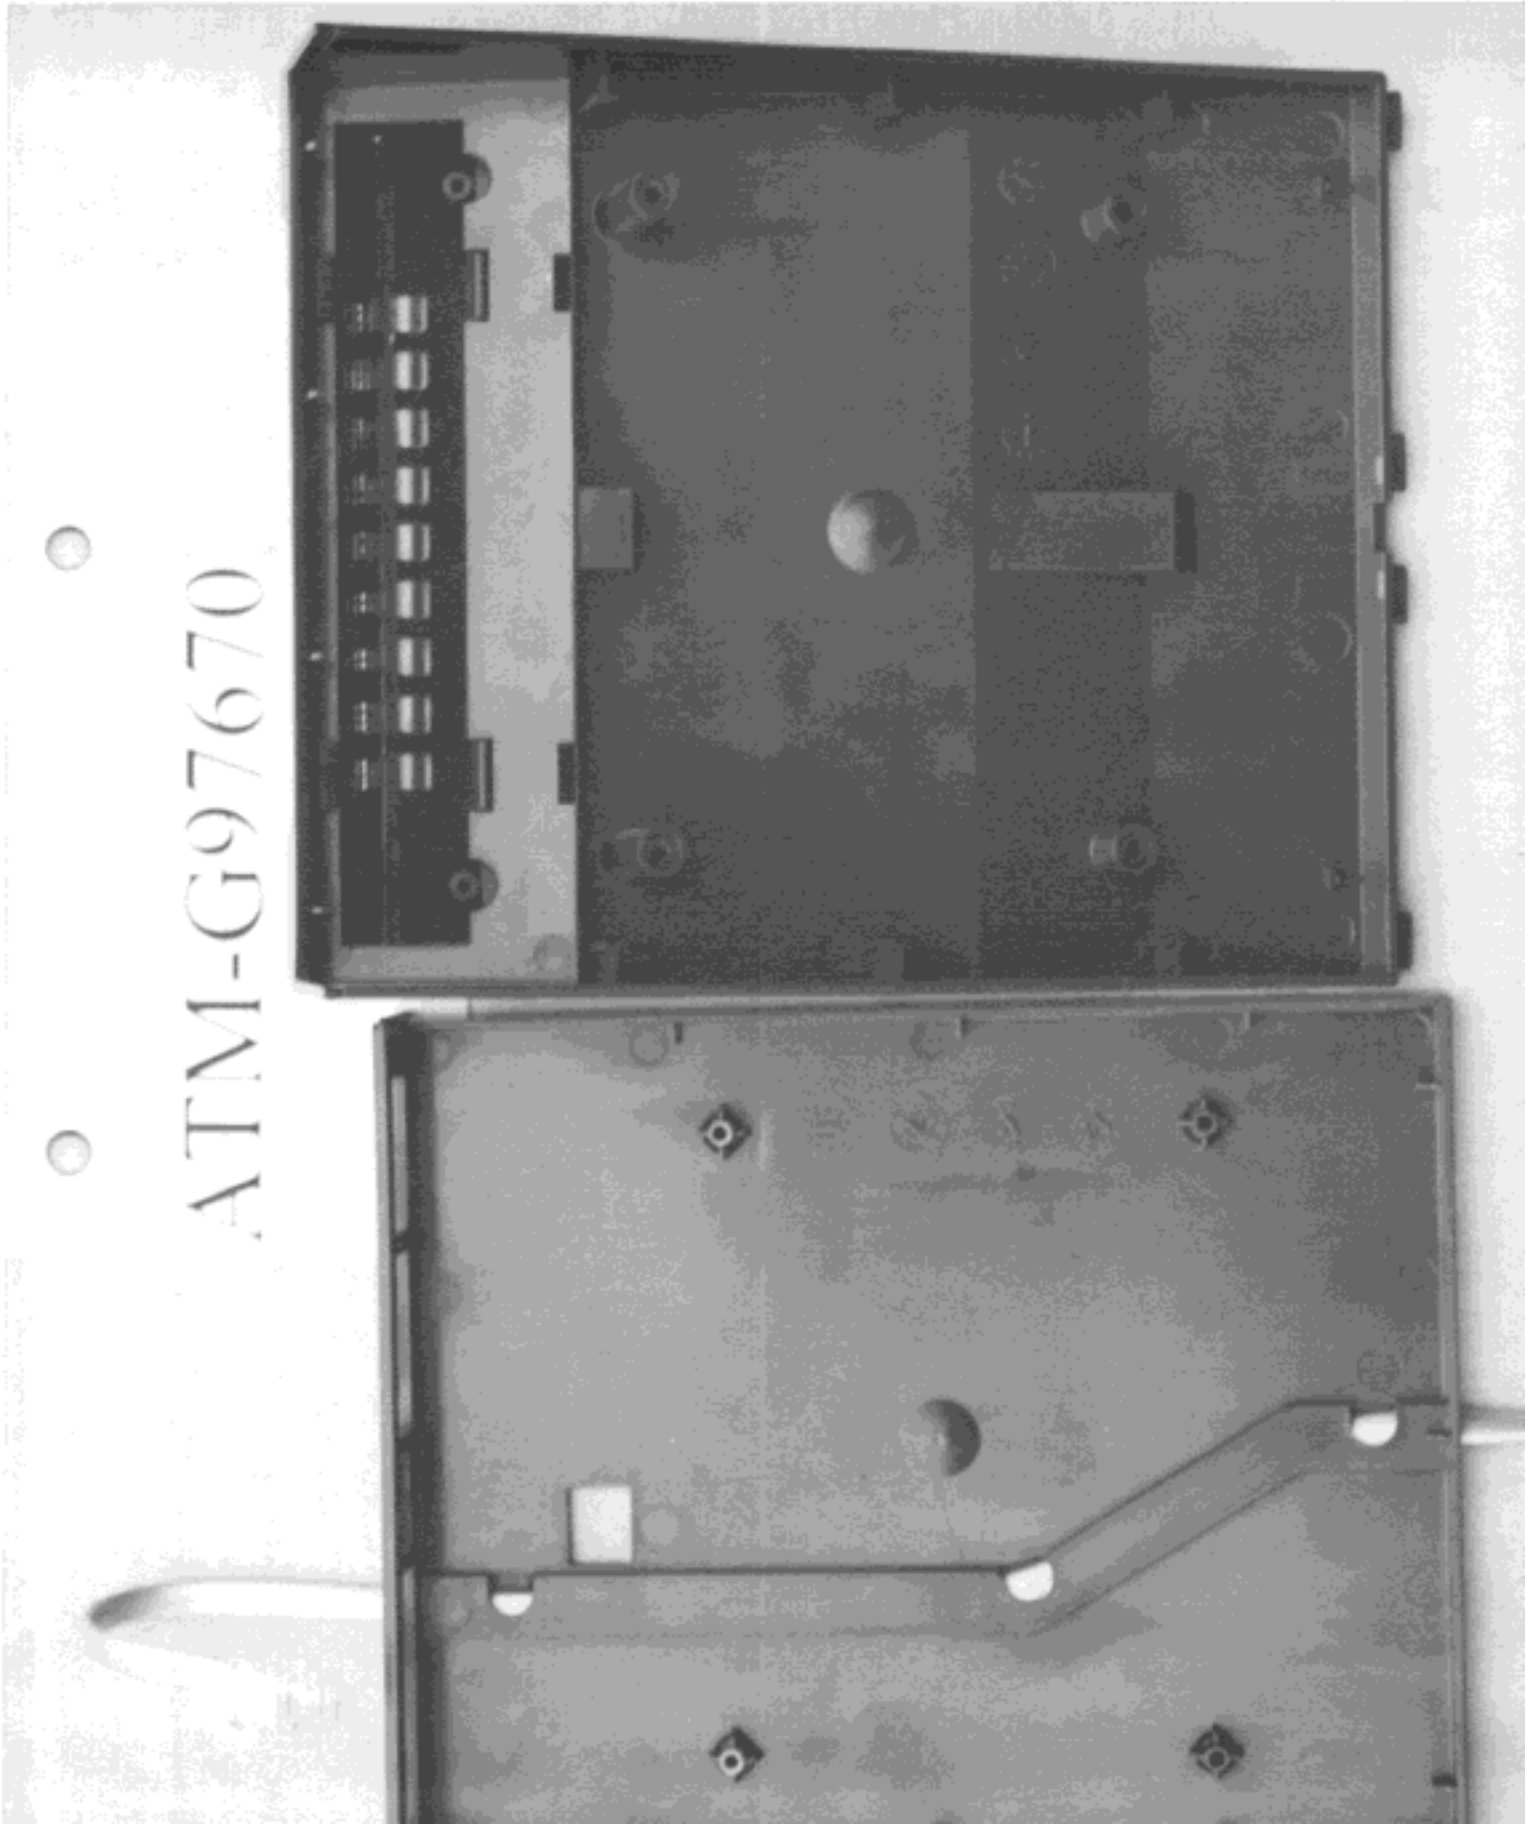


Figure 11
Removed Case Cover, PCB View of Power Adapter



Figure 12
Removed Case Cover, PCB View of Power Adapter

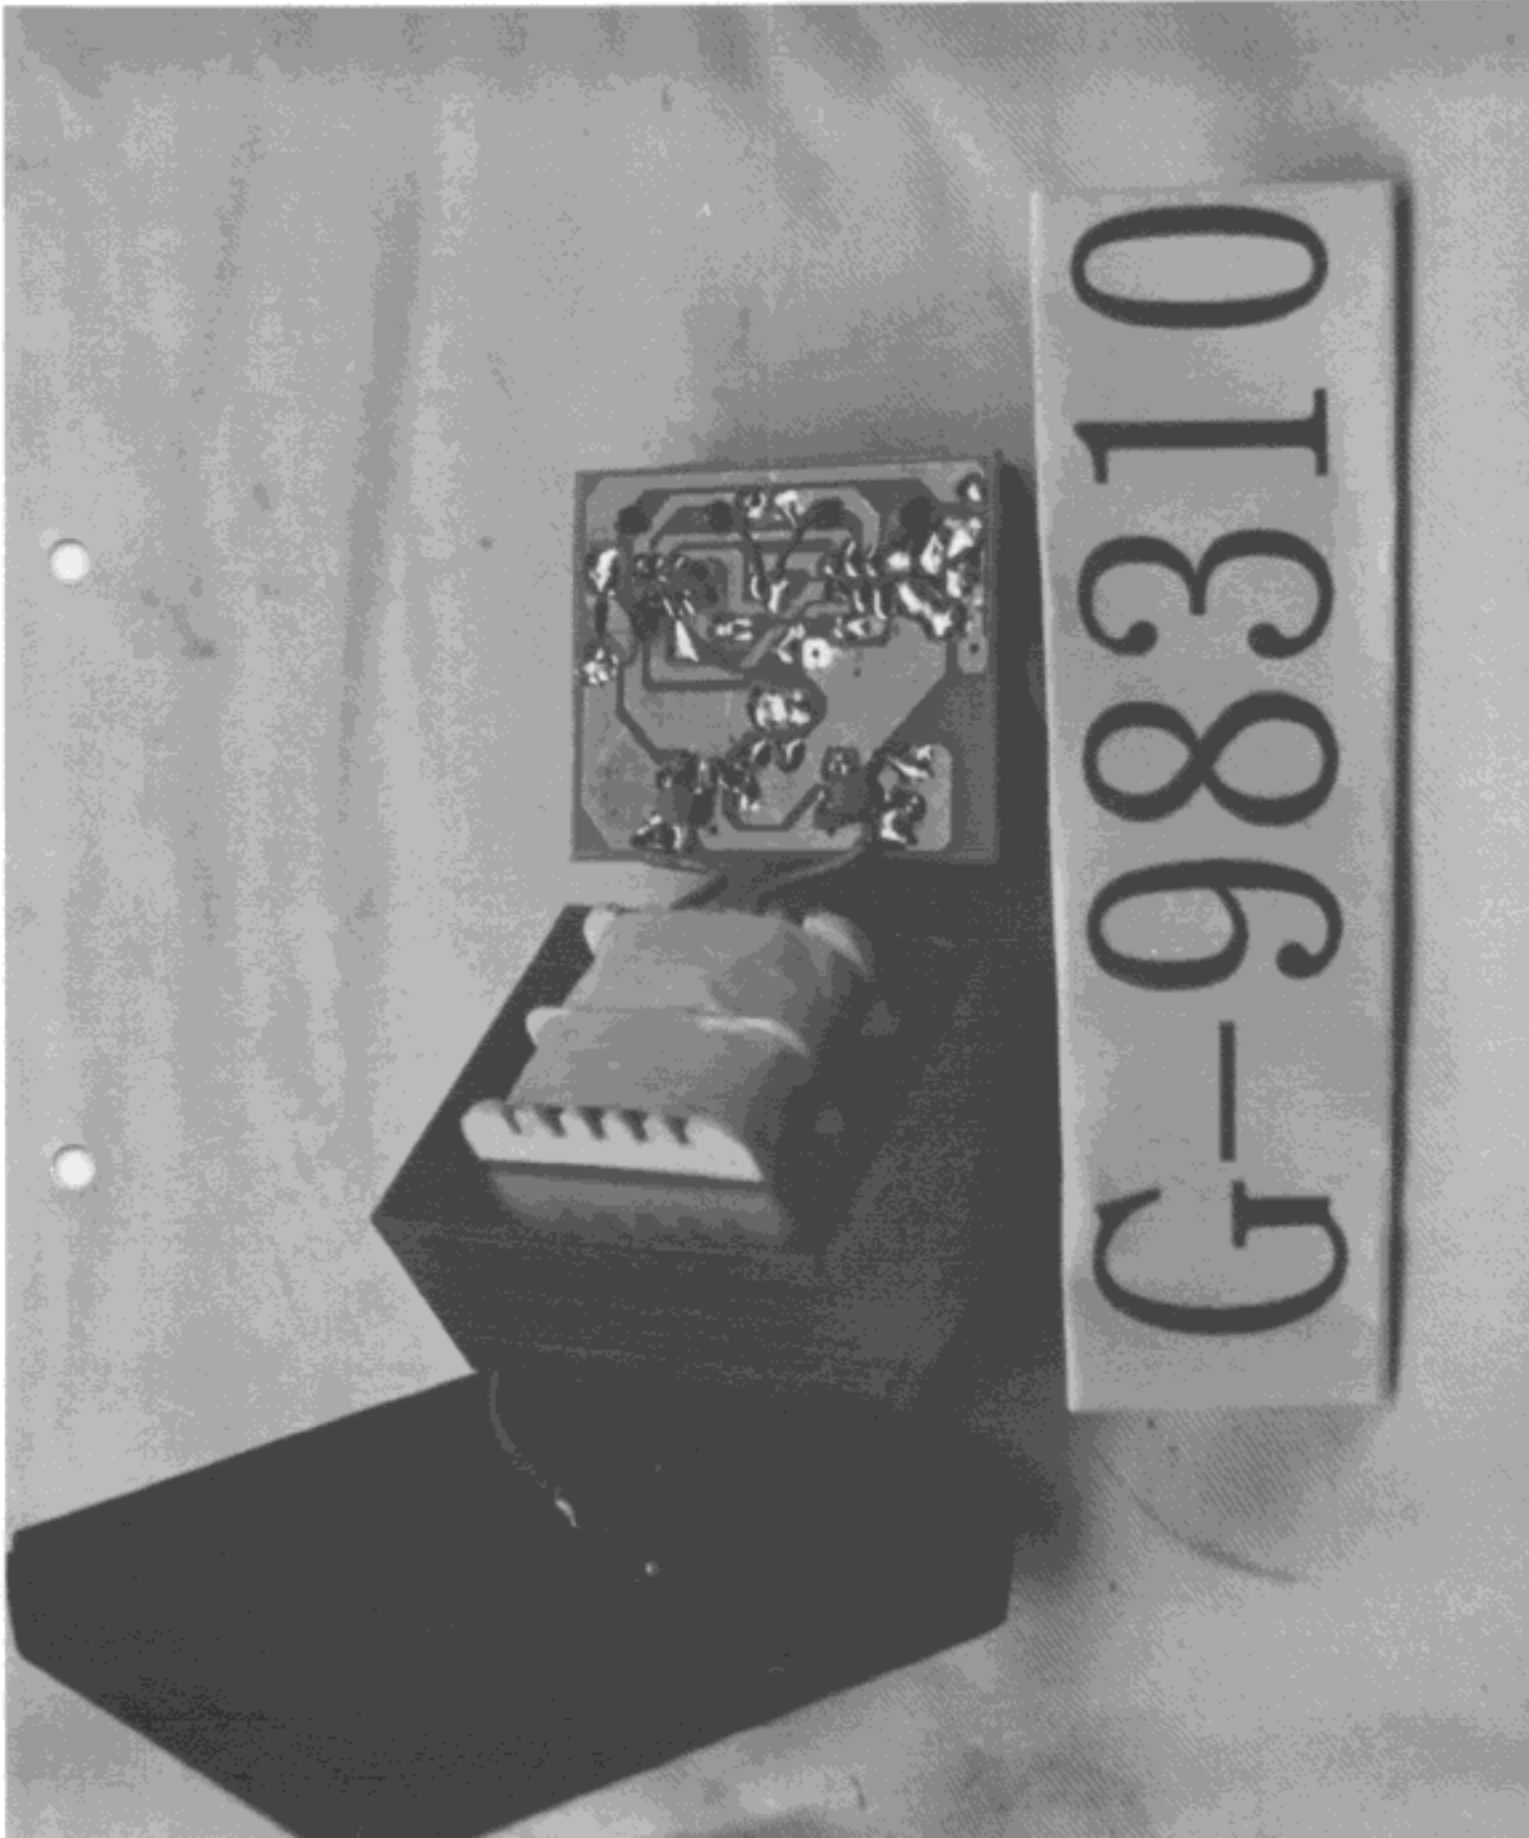


Figure 13
Removed Case Cover, PCB View of Power Adapter

