 



802.11be-EHT160 – Ant 0

Channel 15 (6025MHz)

The Reference Level

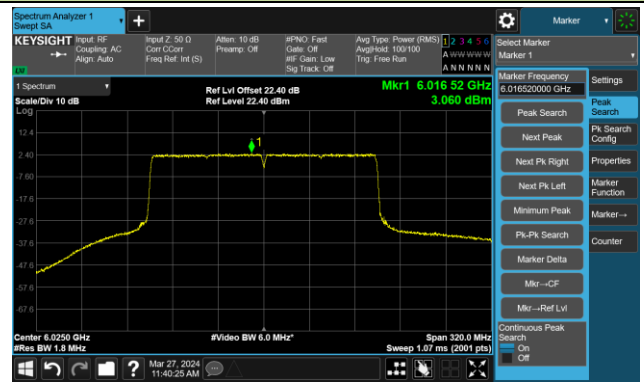


 The Mask Data

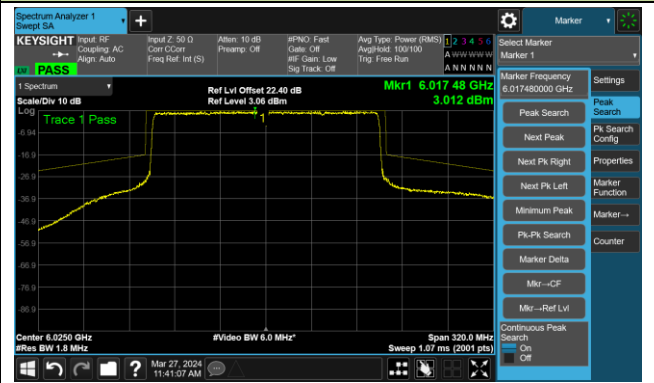


Channel 47 (6185MHz)

 The Reference Level

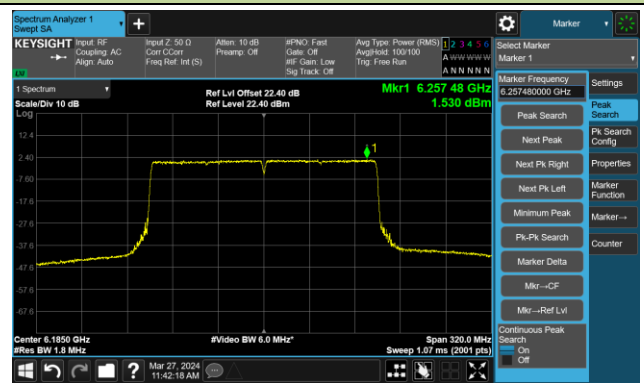


The Mask Data

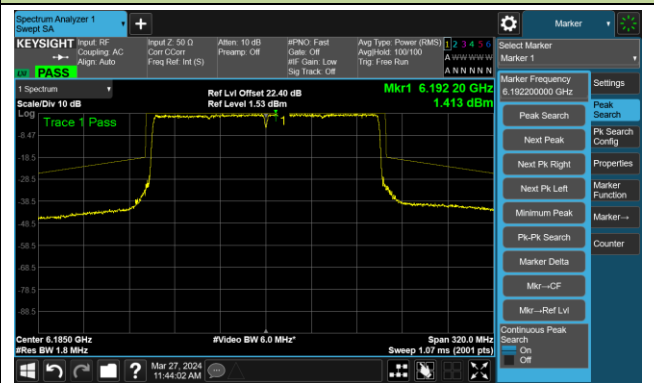 


Channel 79 (6345MHz)

 The Reference Level

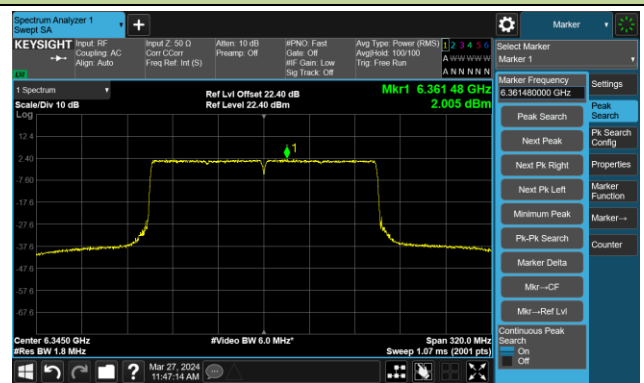


The Mask Data

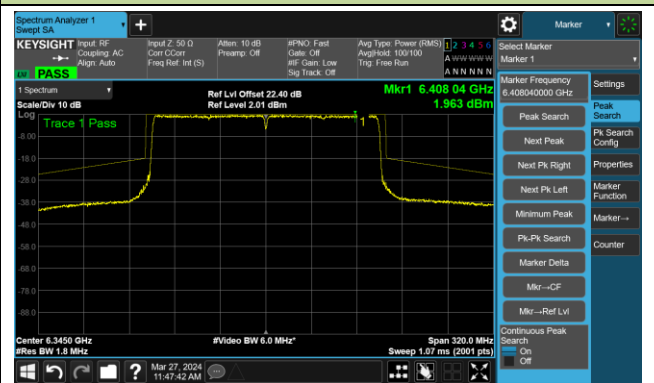 

802.11be-EHT160 – Ant 0

Channel 111 (6505MHz)

 The Reference Level

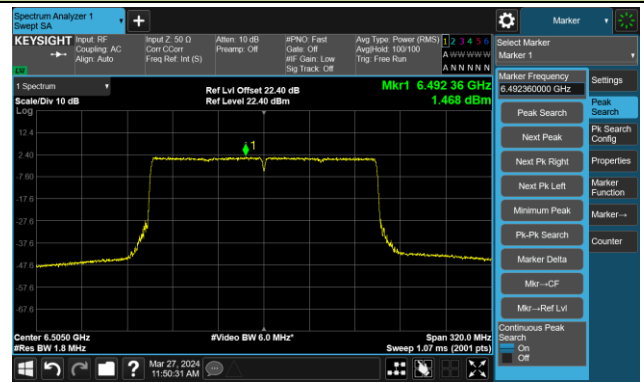


The Mask Data




Channel 143 (6665MHz)

 The Reference Level

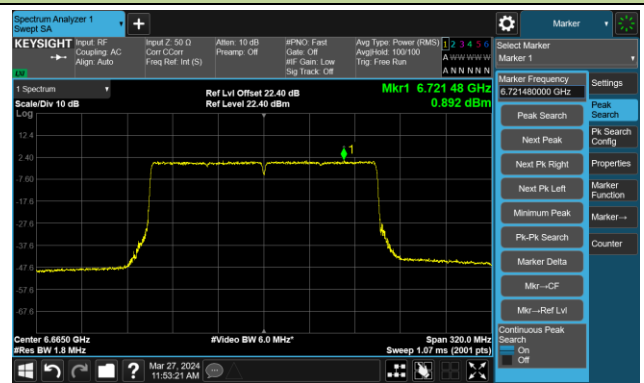


The Mask Data

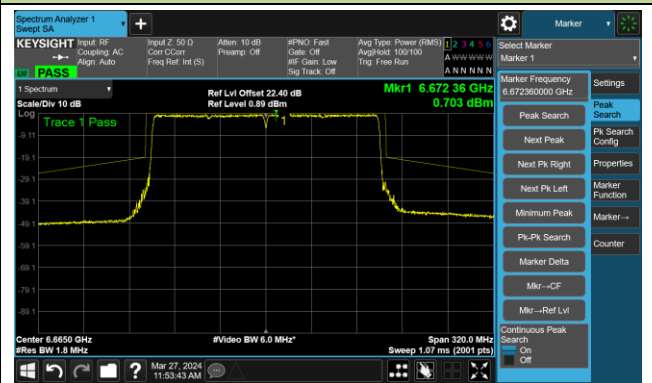 


Channel 175 (6825MHz)

 The Reference Level

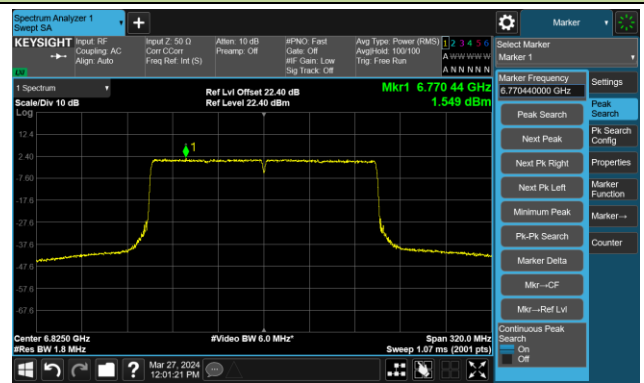


The Mask Data

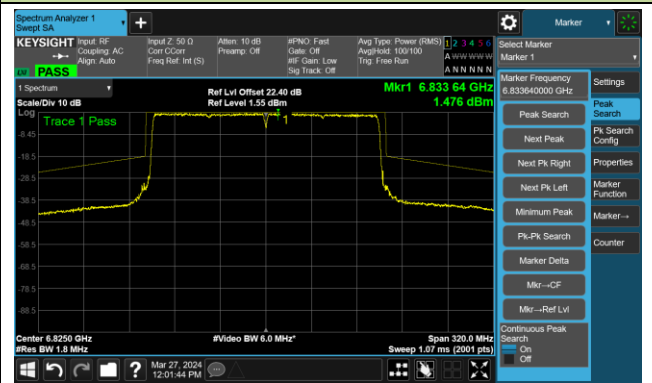 


802.11be-EHT160 – Ant 0

Channel 207 (6985MHz)

 The Reference Level

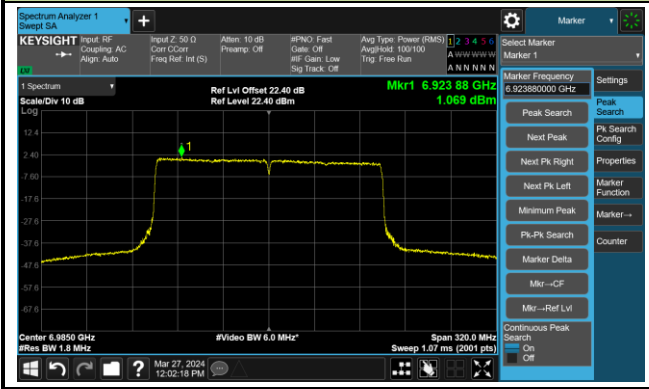

The Mask Data

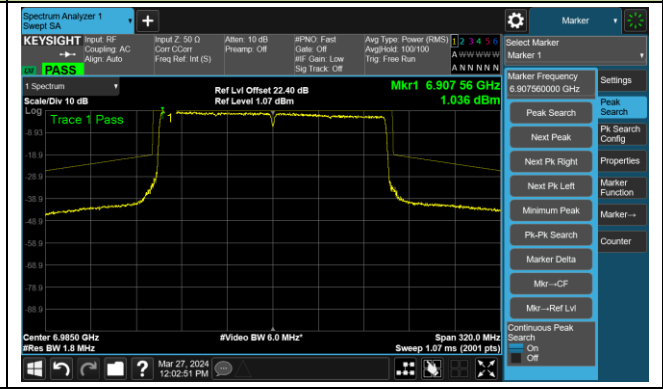 


802.11be-EHT320-1 – Ant 0

Channel 31 (6105MHz)

The Reference Level



 The Mask Data

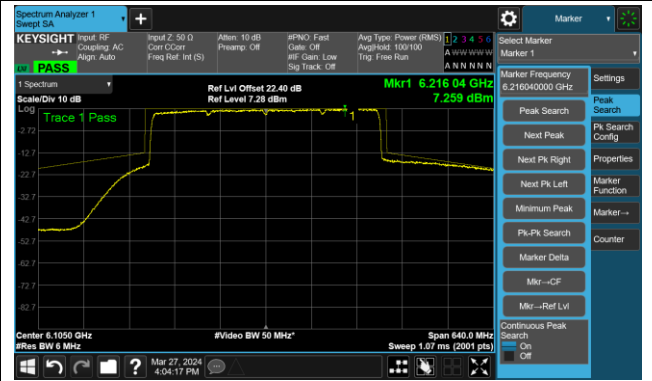

Channel 95 (6425MHz)

The Reference Level

 


The Mask Data




Channel 159 (6745MHz)

The Reference Level

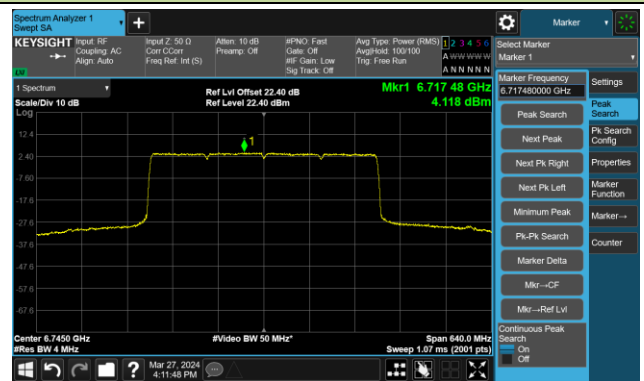

The Mask Data

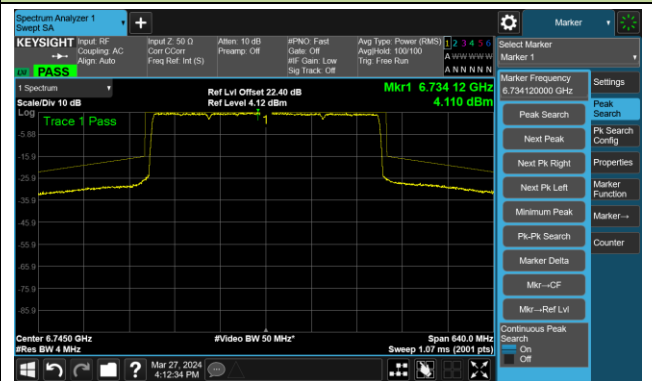 


802.11be-EHT320-2 – Ant 0

Channel 63 (6265MHz)

The Reference Level




 The Mask Data

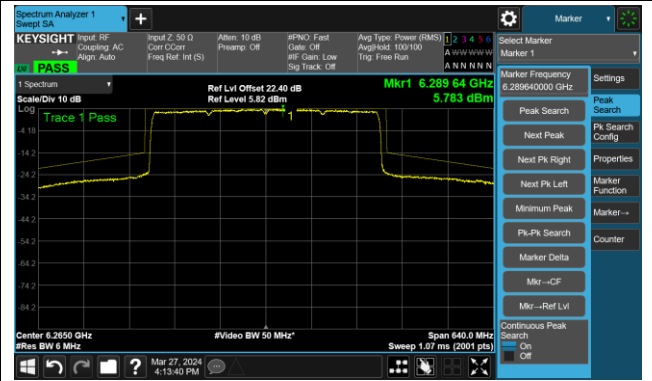


Channel 127 (6585MHz)

 The Reference Level

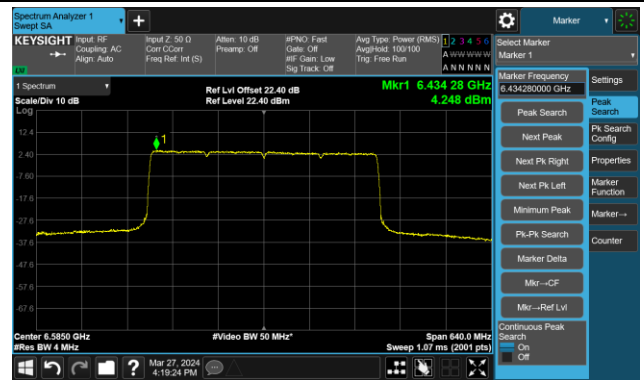


The Mask Data

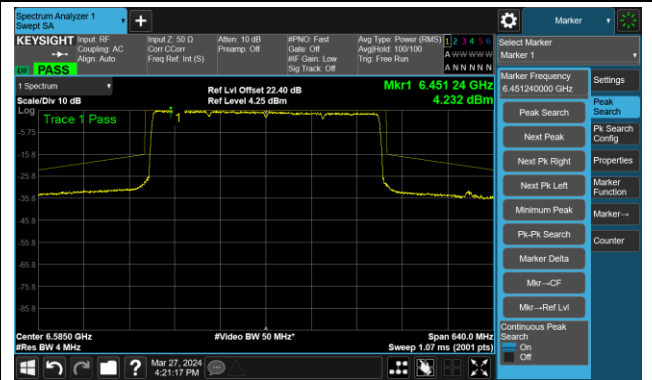 


Channel 191 (6905MHz)

 The Reference Level

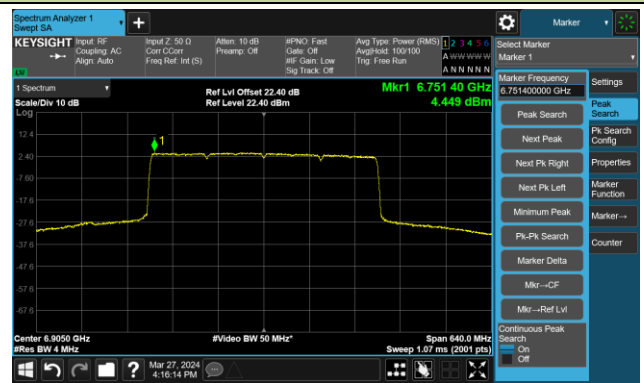


The Mask Data

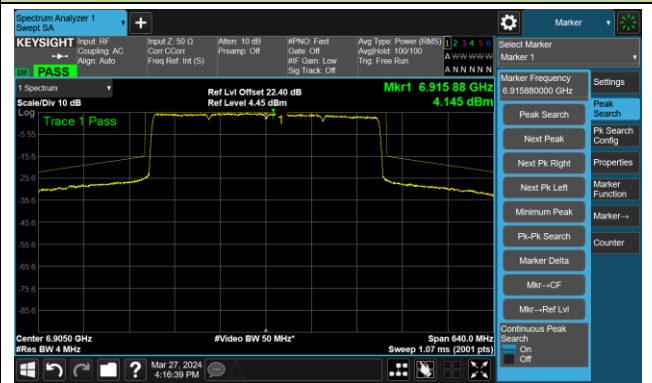 

## 802.11ax-HE20 – Ant 1

## Channel 1 (5955MHz)
 
## The Reference Level

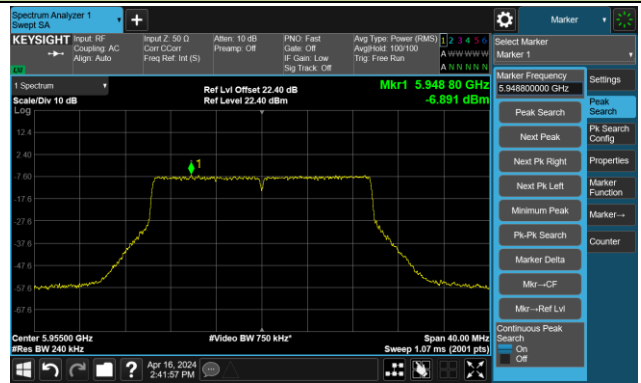


## The Mask Data




## Channel 49 (6195MHz)
 
## The Reference Level

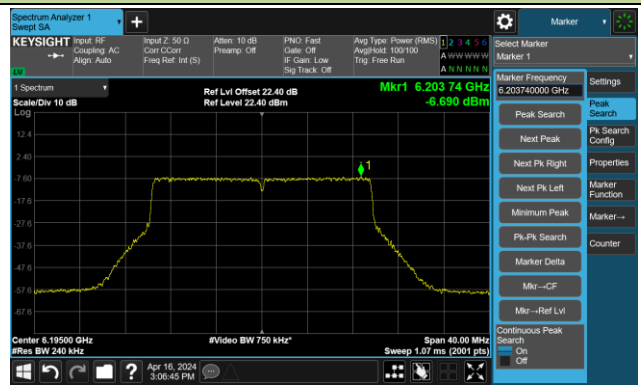


## The Mask Data

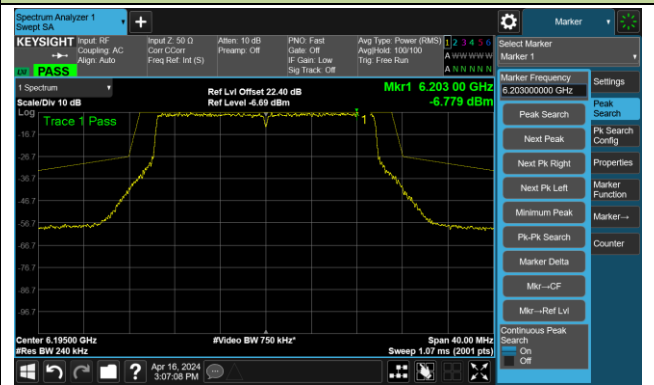 


## Channel 93 (6415MHz)
 
## The Reference Level

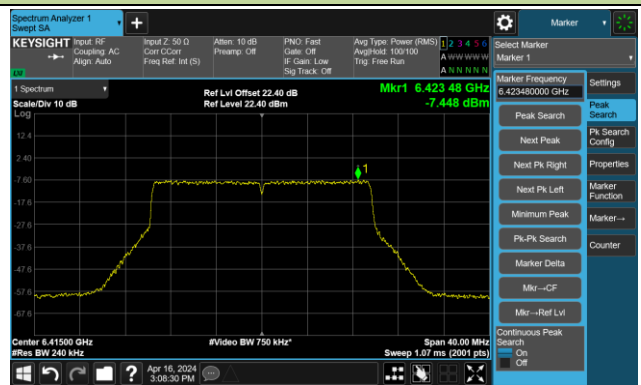


## The Mask Data

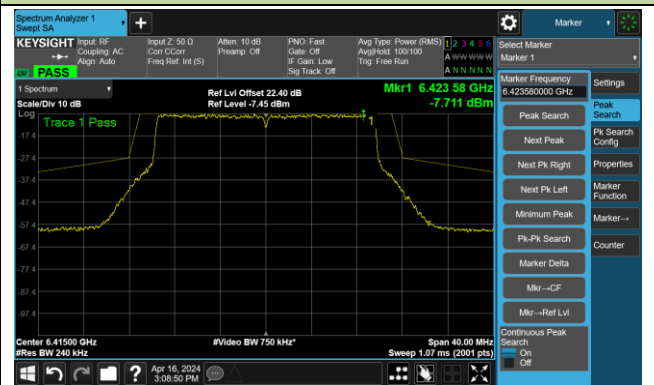 

802.11ax-HE20 – Ant 1

Channel 97 (6435MHz)

 The Reference Level

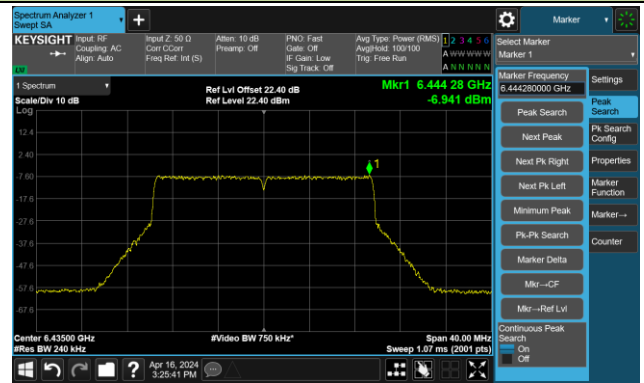


The Mask Data



Channel 105 (6475MHz)

 The Reference Level

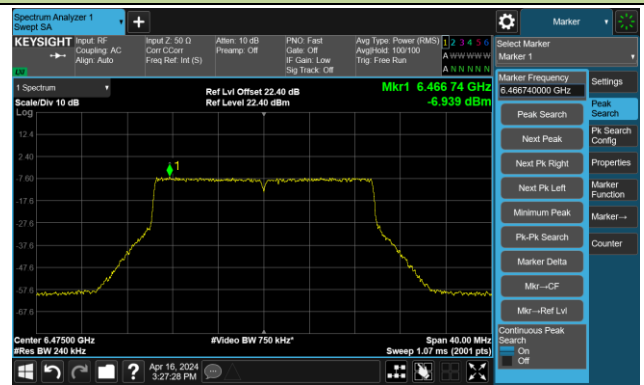


The Mask Data




Channel 113 (6515MHz)

 The Reference Level

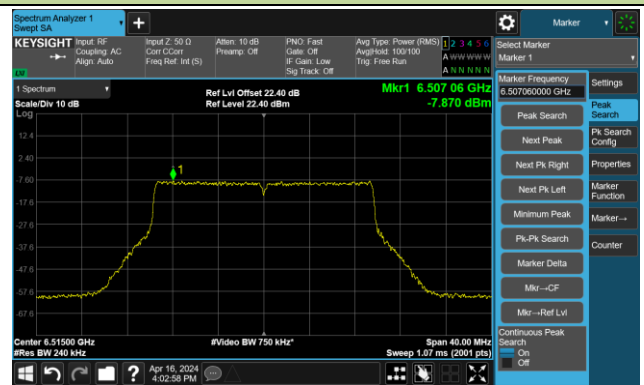


The Mask Data

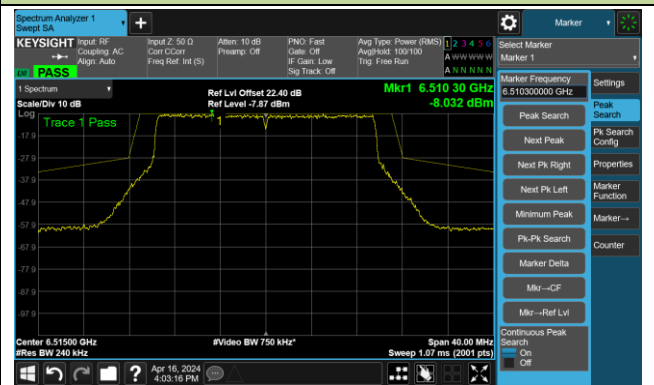 

802.11ax-HE20 – Ant 1

Channel 117 (6535MHz)

 The Reference Level

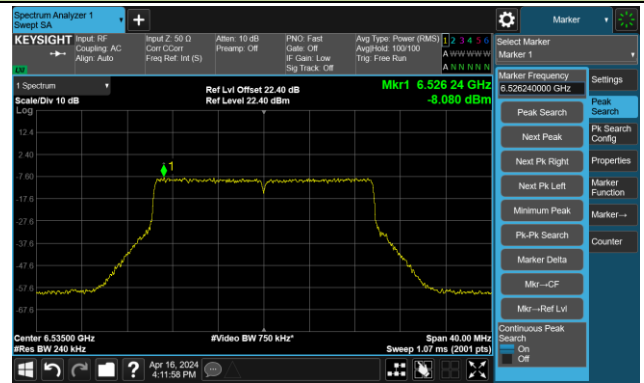


The Mask Data



Channel 149 (695MHz)

 The Reference Level

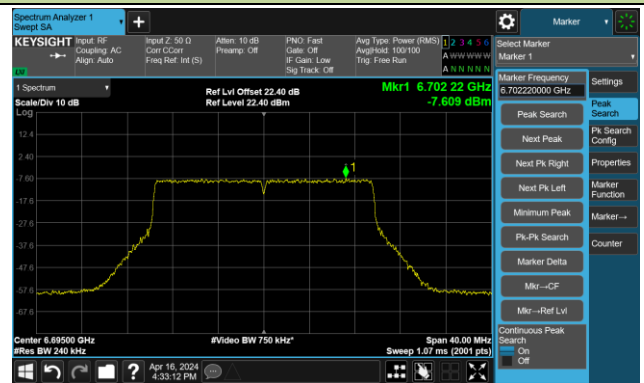


The Mask Data



Channel 181 (685MHz)

 The Reference Level

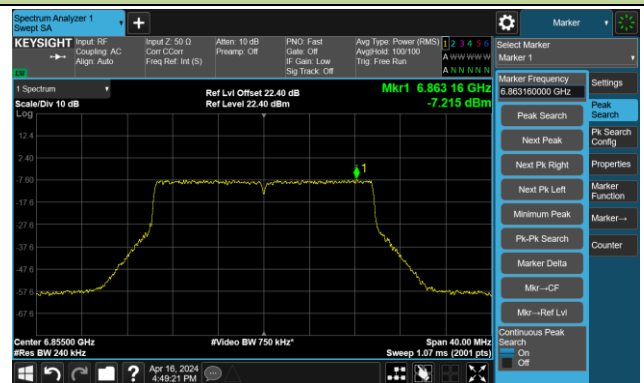

The Mask Data

 




802.11ax-HE20 – Ant 1

Channel 185 (6875MHz)

The Reference Level

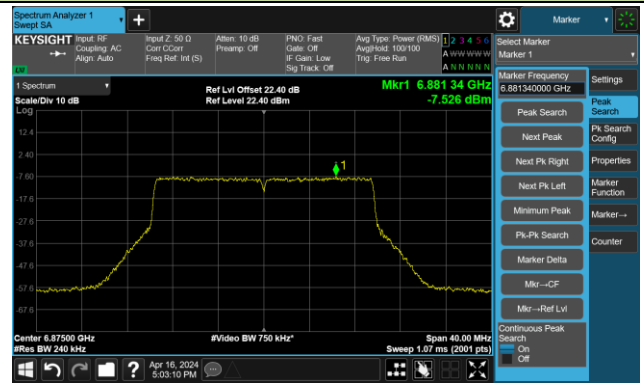


The Mask Data



Channel 189 (6895MHz)

 The Reference Level

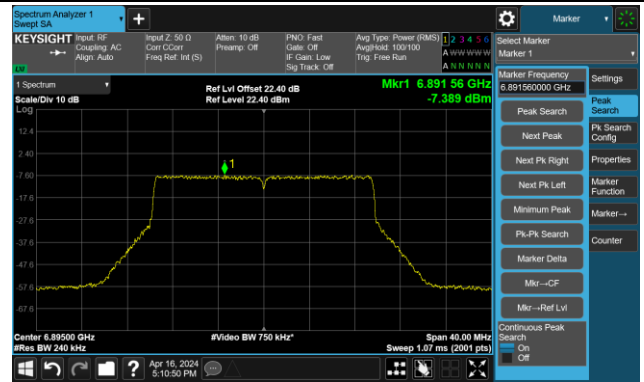


The Mask Data



Channel 209 (6995MHz)

 The Reference Level

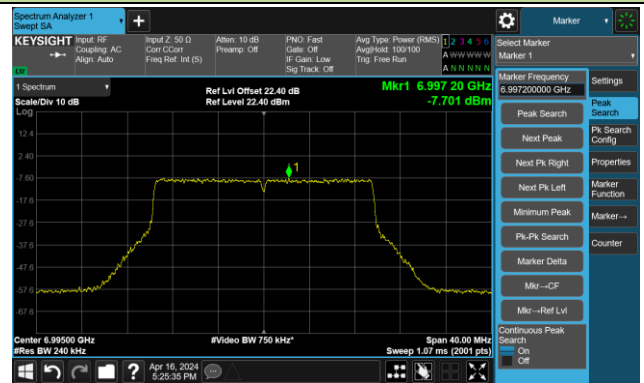


The Mask Data




802.11ax-HE20 – Ant 1

Channel 229 (7095MHz)

 The Reference Level

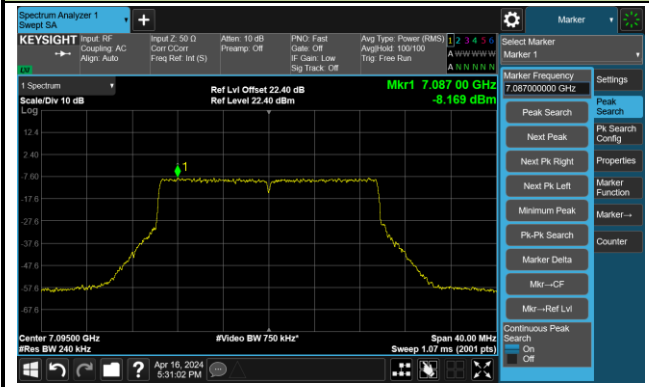


The Mask Data

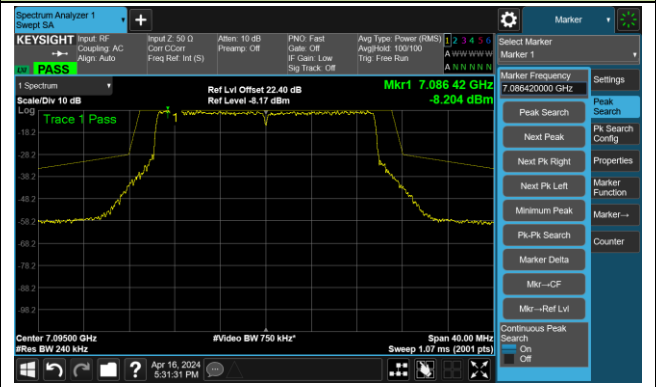 


802.11ax-HE40 – Ant 1

Channel 3 (5965MHz)

 The Reference Level

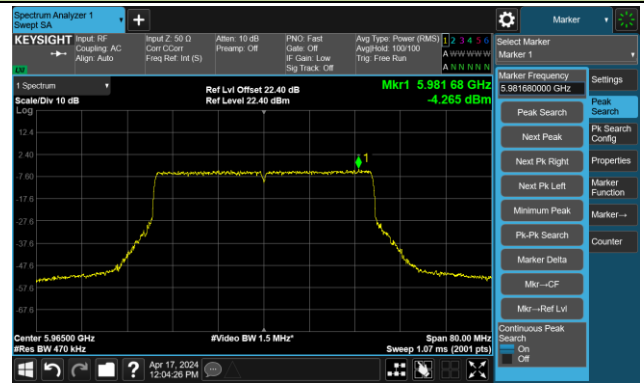


The Mask Data

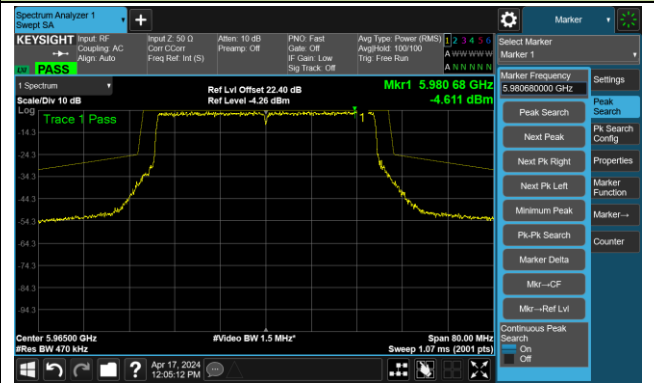 


Channel 51 (6205MHz)

 The Reference Level

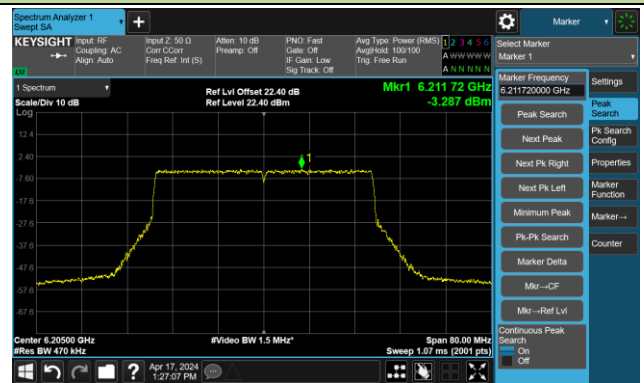


The Mask Data

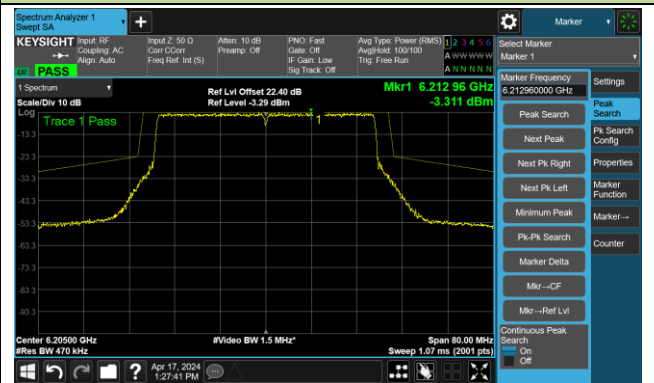 

Channel 91 (6405MHz)

 The Reference Level

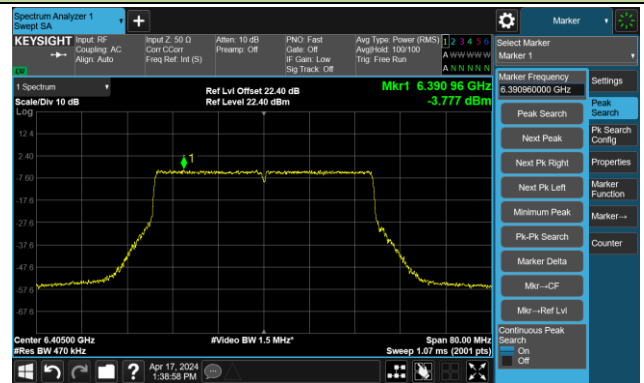


The Mask Data




802.11ax-HE40 – Ant 1

Channel 99 (6445MHz)

 The Reference Level

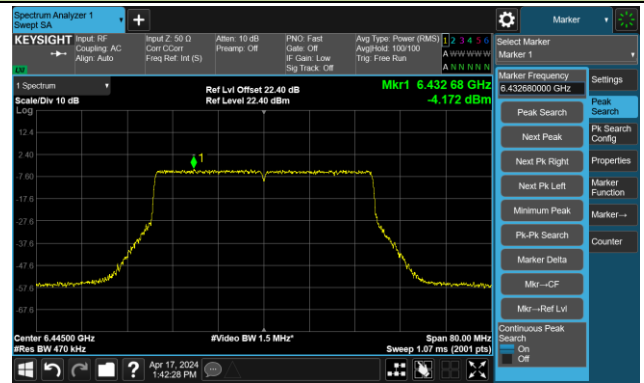


The Mask Data

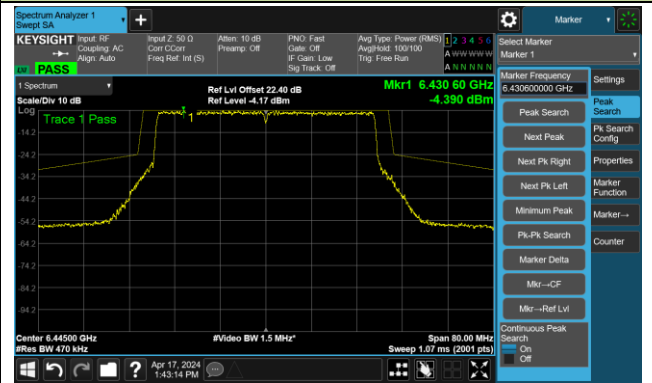 


Channel 107 (6485MHz)

 The Reference Level

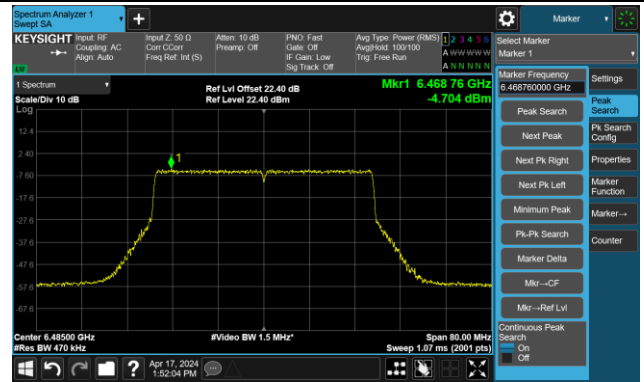


The Mask Data

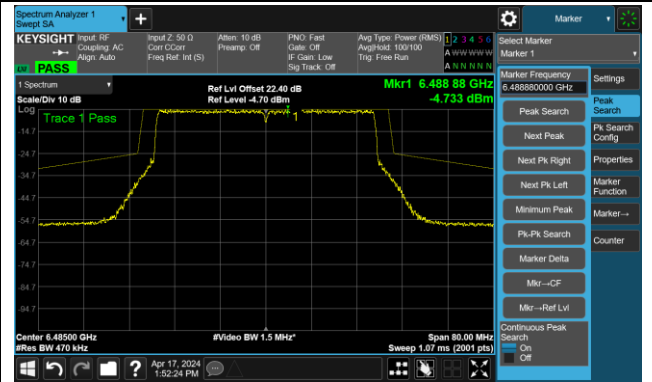 


Channel 115 (6525MHz)

 The Reference Level

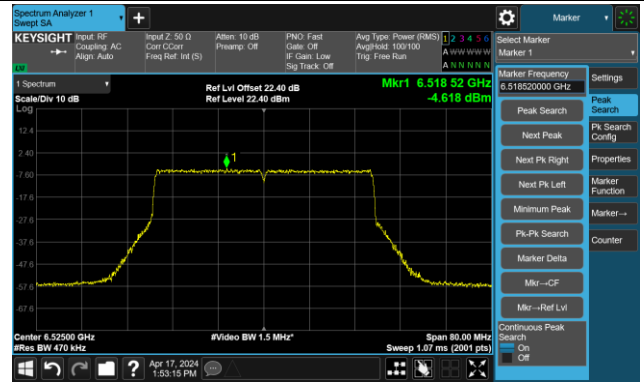


The Mask Data

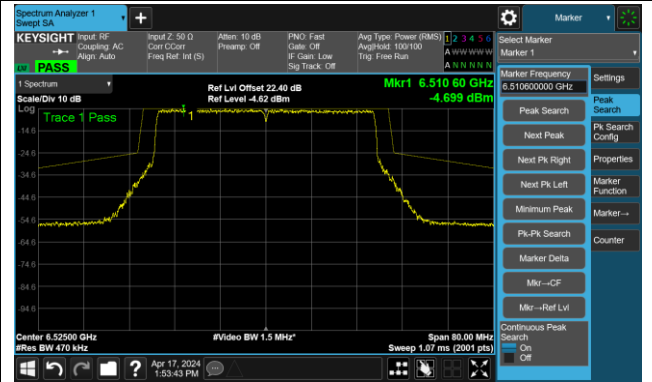 

802.11ax-HE40 – Ant 1

Channel 123 (6565MHz)

 The Reference Level

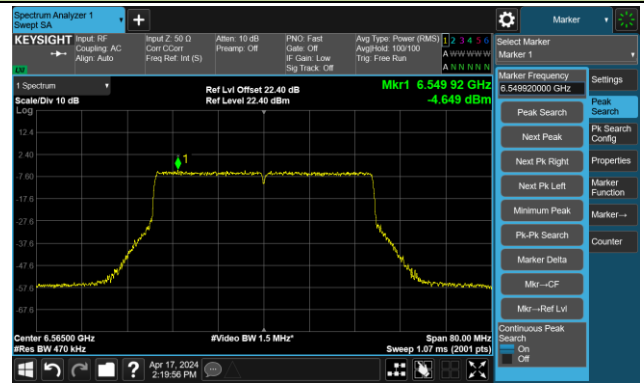


The Mask Data




Channel 147 (685MHz)

 The Reference Level

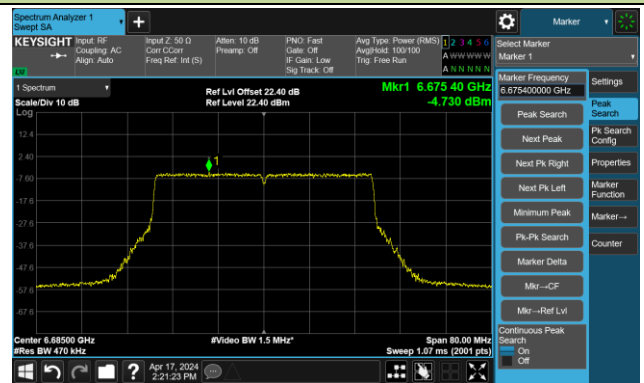


The Mask Data

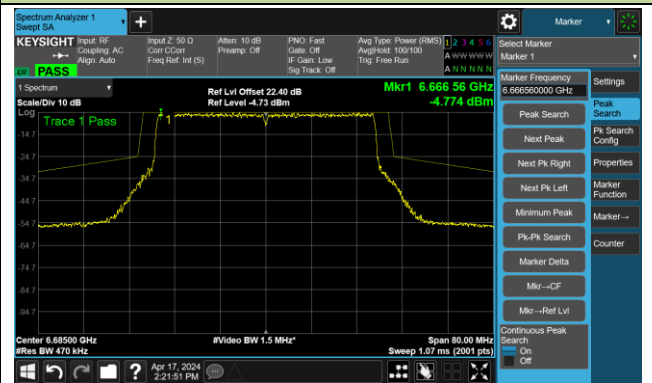 

Channel 179 (6845MHz)

 The Reference Level

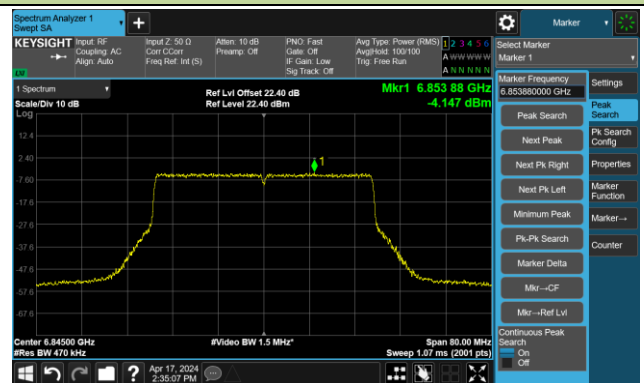


The Mask Data




802.11ax-HE40 – Ant 1

Channel 187 (6885MHz)

 The Reference Level

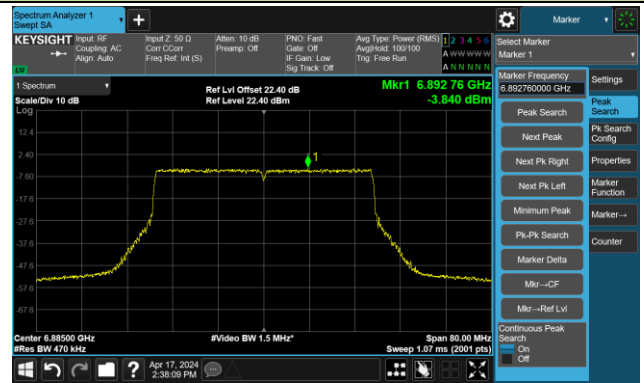


The Mask Data

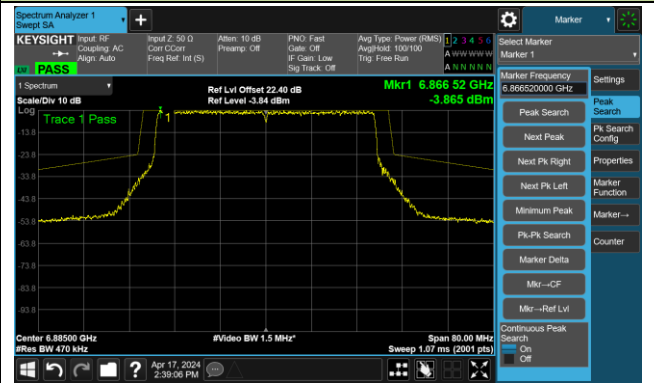 


Channel 195 (6925MHz)

 The Reference Level

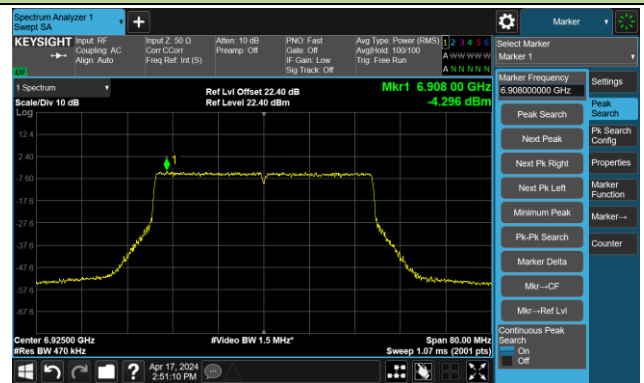


The Mask Data

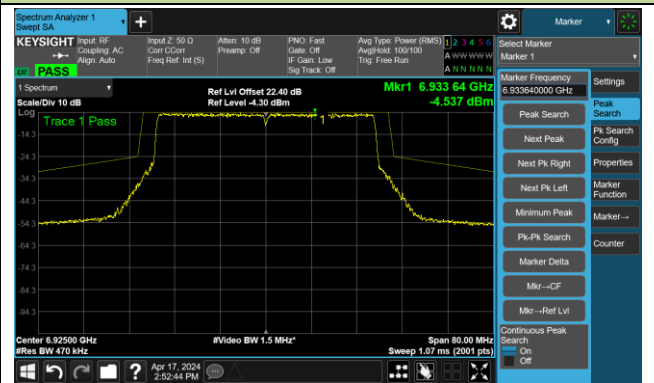 


Channel 211 (7005MHz)

 The Reference Level

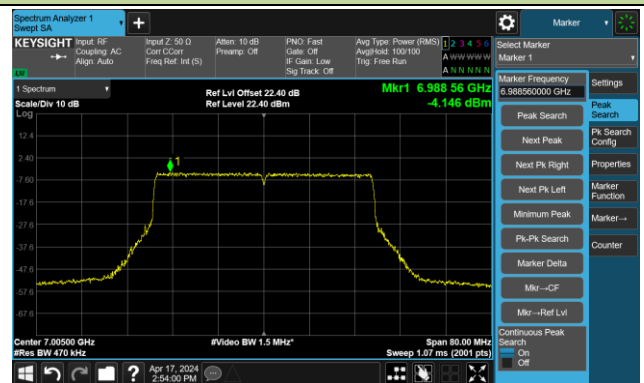


The Mask Data

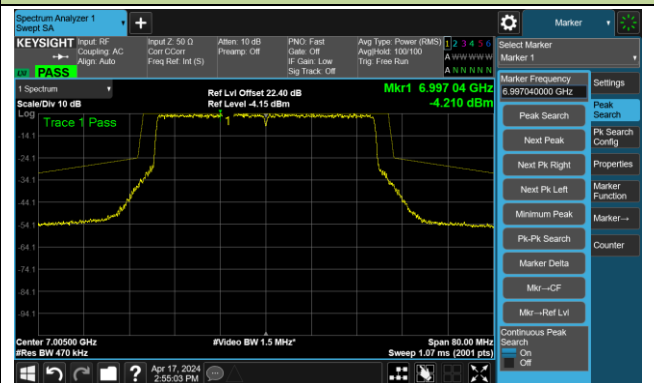 

802.11ax-HE40 – Ant 1

Channel 227 (7085MHz)

 The Reference Level

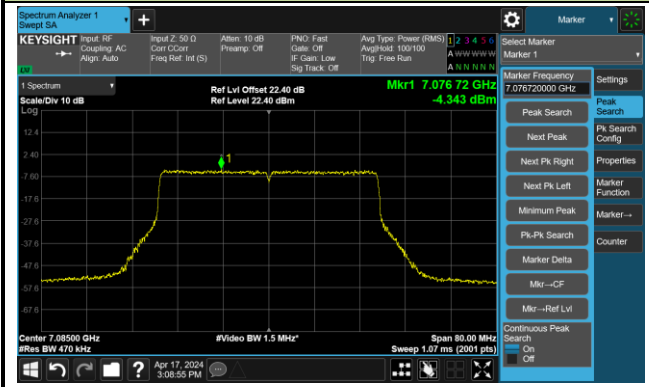

The Mask Data

