

TROUBLESHOOTING GUIDE

SYMPTOM	CAUSE	SOLUTION
No sound	Headphone is not turned on.	Turn on the headphone.
	Batteries are exhausted.	Change batteries.
	Transmitter's power is off.	Turn on the transmitter's power.
	Headphones' volume is completely turned down.	Turn the volume up.
	Automatic "muting" at headphone.	Move closer to transmitter.
Poor sound quality	Headphones' batteries are weak.	Change batteries.
	Out of range	Move closer to transmitter or adjust the transmitter antenna


SPECIFICATIONS

Communication level mode	Radio Frequency(49.86MHz)
Communication level	Stereo
Power requirement:	
Transmitter	12V 100mA AC/DC adapter
Headphone(receiver)	3V (2x1.5V AAA carbon, alkaline, Ni-Cd batteries)
Frequency Response	30-10000Hz
S/N Ratio	42 dB
Distortion	1%
Max operating distance	Maximum 25 meters
Weight:	
Transmitter (without adapter)	105g
Headphone (without batteries)	122g
Standard Accessories	AC/DC power adapter(for transmitter) 3.5mm to 6.3mm Plug Adapter 3.5mm to RCA (stereo) Patch cord

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1. This device may not cause harmful interference, and
 2. This device must accept any interference received. Including interference that may cause undesired operation.


INSTRUCTION MANUAL

SPF-2010

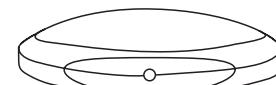


Stereo
**RADIO FREQUENCY
CORDLESS HEADPHONE SYSTEM**


SYSTEM COMPONENTS

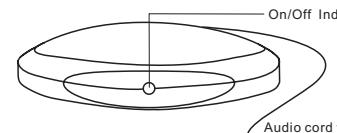

TRANSMITTER

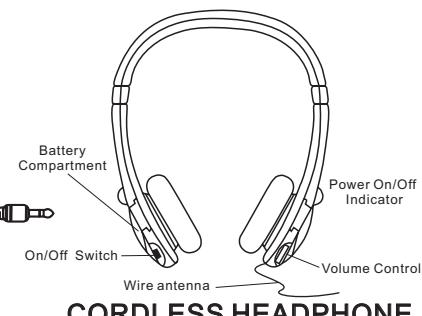

CORDLESS HEADPHONE

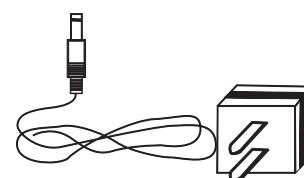

3.5mm to 6.3mm PLUG ADAPTER

12V 100mA AC/DC ADAPTER




3.5mm to RCA (STEREO) PATCH CORD

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INSTALLATION

For the following illustration, we use television as the audio source equipment.
For actual usage, you may select any type of audio source equipment for connection.


I. Equipment with 3.5mm phone jack

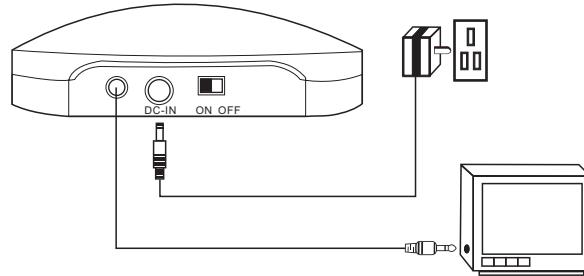

If the audio-out jack of your equipment is a **3.5mm** type, connect the audio out jack with the audio cord attached at the back of the transmitter.


II. Equipment with 6.3mm phone jack

If the audio-out jack of your equipment is a **6.3mm** type, plug in the supplied **"3.5mm to 6.3mm plug adapter"** to the audio-out jack of your equipment, then connect it with the audio cord attached at the back of the transmitter.

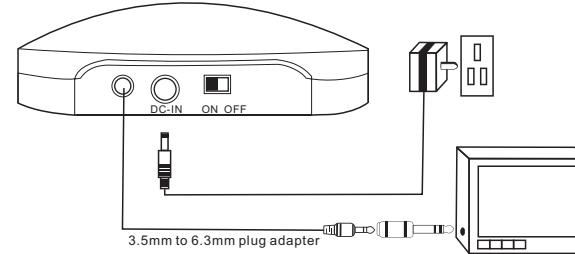

3.5mm to 6.3mm plug adapter


III. Equipment with RCA jack

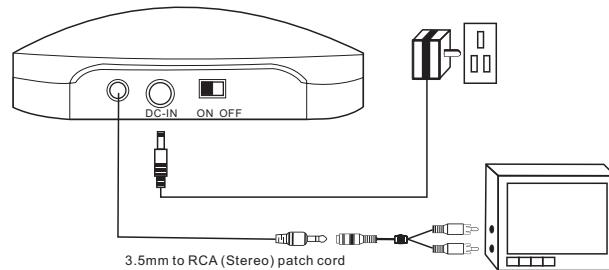

If the audio-out jack of your equipment is a **RCA** type, plug in the supplied **"3.5 mm to RCA (stereo) patch cord"** to the audio - out of your equipment, then connect it with the audio cord attached at the back of the transmitter.

3.5mm to RCA (Stereo) patch cord

IMPORTANT: CONNECTION TO MONO EQUIPMENT

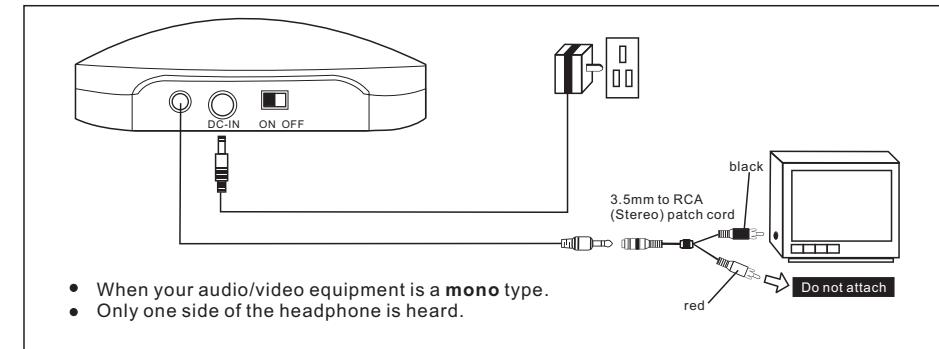

- When your audio/video equipment is a **mono** type.
- Only one side of the headphone is heard.

POSITION OF THE TRANSMITTER

This cordless headphone system is designed for indoor use within a distance of 25 meters between the transmitter and the receiver.

Note: Do not place the transmitter in a location near sources such as radiators, heater, or any place subject to direct sunlight or vibration.

OPERATION

1. Turn on your audio equipment and the transmitter. You will be able to see the LED power indicator light go on.
2. Set the volume of your audio equipment at medium level.
3. Turn on the headphone receiver, the LED power indicator should go on. Adjust the size of the headphone by pulling up or down on each side until it fits on your head comfortably. Adjust the audio volume as desired.

BATTERY CHANGE

1. Make sure headphone receiver is off.
2. Slide open battery compartment cover.
3. Insert two AAA (1.5V) batteries with the (+) and (-) poles correctly aligned into the battery compartment. Alkaline type or Ni-Cd rechargeable type batteries are recommended.
4. Close the battery compartment.

