

EXHIBIT A

(FCC Ref. 2.1033(b)(3)/
IC RSS-210 Cl. 5.10)

"Installation and Operating Instructions
Furnished to the User"

Model 811P/812P Wireless Chime Plug-in Receiver *Instruction Manual*

Thank you for your purchase of a *Chimeplus* wireless chime product.

Features of your WC811P/812P Wireless Chime

- **NO installation – easy plug and play.** Just simply plug-in your receiver into any standard wall outlet, indoor or outdoor (use in dry areas only). The plug-in receiver can be used in various locations so you have the freedom to move about your home and never miss an important visitor.
- **Up to 100 feet working range.** Your receiver and transmitter will function within a 100 feet range of each other (may vary depending on materials and structures located between receiver and transmitter).
- **64 selectable house code.** Reduces the possibility of interference. This also to allow you to install up to 64 chime systems within the same location, i.e. in one apartment or small office building.
- **Built-in three tunes.** 8 notes “Westminster”, 2 notes “Ding Dong” and 1 note “Ding” for one or two door applications
- **User selectable Melody sound or Bell sound.** 2 ways switch for easy access desired sounds.

How the Chimeplus wireless chime system works

A basic wireless chime system includes one transmitter and one receiver. The transmitter is to install nearby your front door outside the house. The receiver can be installed some where you spending most of your time i.e. family room, kitchen etc.

Every *Chimeplus* wireless chime can be set to work with all *Chimeplus* wireless transmitters. The *Chimeplus* wireless chime system lets you place multiple chimes through your home or yard.

House Code (channel)

All *Chimeplus* wireless chime system units use a digital encoding system for reliability and interference-free. By setting the units to the same digital code (channel), a transmitter can control several receivers at the same time, and several transmitters can activate each receiver. **Your receiver and transmitter must be set on the same house code (channel) to function properly.**

When the transmitter button is pressed. The transmitter transmit a digital coded radio (RF) signal and sensed by the receiver. Receiver read the signal and if the signal conform to the *Chimeplus* coding system the circuit will be triggered and chime. There are 64 selectable codes (channels) and can be set by the user.

All *Chimeplus* wireless chime systems are factory pre-set to the same house code (channel). When a new wireless chime is purchased. Normally you just need to install as per instruction manual and can start using it right away. However, if the chime receiver chime by it-self without having your transmitter button pressed. There may be interference from other door chimes or wireless products in close proximity. In this case, you will need to reset the house code (channel) for a new channel on both the transmitter and receiver, or you may need to change if you want to re-set the receiver to match with other *Chimeplus* wireless chime system.

Tunes and Melody/Bell sounds

Your *Chimeplus* chime receiver has built-in three tunes option, the 8 notes "Westminster", 2 notes "Ding Dong" and 1 note "Ding". The tunes are obtainable by changing the tune setting configuration of the "tune option" jumper(s) from the transmitter. (All transmitters are factory pre-set to 8 notes "Westminster").

In additional to the built-in selectable three tunes. The plug-in receiver also provide two different sounds, the Melody sound and Bell sound. You can select your desired sounds simply by changing a two ways slide switch on the back of the plug-in receiver.

Using the Chime as a Pager

Other than to use as a visitor door chime. Your wireless chime can also act as a personal paging receiver. The portable transmitter can be removed from its mount and given to those in need of assistance, such as the sick, elderly, or an unattended child. The plug-in chime receiver can move around your house as long as a wall outlet is available. So you are informed when assistance is needed or calls for help.

Plug-in Receiver INSTALLATION

- Plug the chime into standard outlet only.
- If this is you're new purchased chime system. Follow the instruction manual of the transmitter and insert the battery.
- Press the button of the transmitter to make the chime sound.
- If it does not sound, follow the transmitter instruction manual to verify the transmitter is working properly.
- Set the chime volume on the back of the plug-in chime if desired.
- Change the slide switch setting to change the Melody or Bell sounds if desired.
- If you want tunes change. Please re-set the tune setting jumper(s) on the transmitter.
- The house code (channel) setting DIP switch is located on the back of the plug-in chime receiver, the setting are 1,2,3,4,5 & 6 in line from the top to bottom and are corresponds to the setting jumper(s) 1,2,3,4,5 & 6 from the top to bottom on the transmitter. You can change the coding (channel) by simply moving one or more switches to the numbered (ON) position. There are 64 variations of switch combinations.

Note 1: Your receiver and transmitter must be set on the same house code (channel) to function properly.

Note 2: If the receiver sounds when your transmitter is not pressed, there may be another chimes or interference from other wireless products in close proximity. In this case, please reset the house code (channel) on both the receiver and transmitter.

Troubles shooting

Chime doesn't sound or not work when installed:

- Make sure the house code (channel) setting on both the receiver and transmitter are same.
- Make sure the plug-in chime has power going to it.
- Don't mount the transmitter on metal or near metal doorframe or studs. This reduces the transmitter range.
- Try different locations for the chime receiver closer to the transmitter.
- As with any electronic product, the chime unit may not function properly when exposed to extreme temperatures. It is recommended to mount the transmitter or receiver in an area where extreme temperatures are avoided.

Maintenance

- The chime receiver should not be used near water and should be kept dry. If the chime receiver get wet, wipe it dry immediately. Liquids may contain materials that can corrode the circuit.
- The chime receiver should be connected to a power supply only of the type described in the operation manual.
- Handle the chime receiver carefully. Dropping it can damage the circuit boards and may cause the chime to work improperly.
- The chime receiver should be unplugged from the outlet when not in use for long periods of time.
- If product appears to be working improperly, remove from the wall outlet.

