

INSTRUCTION GUIDE

Portable Alert Chime RC3800S

ENCLOSED YOU WILL FIND:

- Chime receiver
- Chime button
- One 12-volt alkaline battery (included)
- Screws
- Wall anchors

TOOLS/SUPPLIES NEEDED:

- Small flat head screwdriver
- Small Phillips head screwdriver
- 7/32" drill bit
- Drill

BATTERIES NEEDED (not included):

 
- Three alkaline "C" batteries

MOUNTING BACK COVER OF CHIME BUTTON

Note: Mounting the button directly on metal, concrete or near metal studs reduces the range.

1. Remove cover from back of chime button by inserting flat head screwdriver into the larger rectangular slot on bottom of chime button and gently twist on tab. Lift chime button away from the back cover.
2. Place chime button back cover where desired and mark screw locations.
3. Place chime button back cover against mounting surface and screw into marked locations using screws enclosed (may require drilling pilot holes on hardwoods).
4. Insert the 12-volt alkaline battery in chime button according to the (+, -) placement guides shown. Use of another battery may cause failure of the chime button and will void manufacturer's warranty and liability.

5. Adjust the black, rectangular jumpers as shown for tune selection.
6. Place top of chime button on back cover and push on bottom of chime button to snap in place.

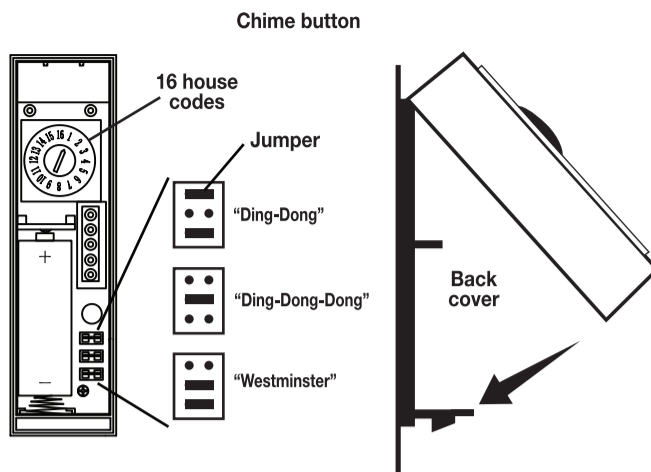

RECEIVER BATTERY INSTALLATION

1. Remove back cover by pushing lever on cover to the side and lift forward. This will release the back cover and expose the battery compartment.
2. Insert 3 "C" alkaline batteries according to the (+, -) placement guides shown.
3. Slide cover in place and push to close.

TEST

Press chime button. Chime receiver should play a tune and LED will flash.

VOLUME AND PITCH CONTROLS

 
Push button(s) on back of chime receiver to desired position(s). There are four different levels of volume and pitch for selection.

MOUNTING DOOR CHIME RECEIVER

Before mounting receiver test desired location for operation. Receiver can be mounted vertically or horizontally.

Note: Mounting the chime directly on metal, concrete or near metal studs reduces the range.

1. Mark screw locations onto wall for position.
2. Drill 7/32" holes into wall for plastic anchors. Place anchors into holes and install screws.
3. Leave screw heads extending about 1/4" from wall.
4. Slide receiver onto screws and lock into slots.

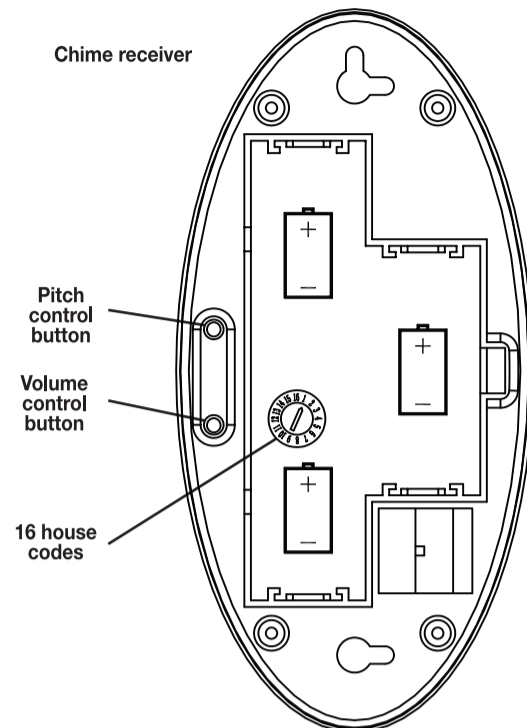

GUIDE D'INSTALLATION

Portable Alert Chime RC3800S

ENCLOSED YOU WILL FIND:

- Chime receiver
- Chime button
- One 12-volt alkaline battery (included)
- Screws
- Wall anchors

TOOLS/SUPPLIES NEEDED:

- Small flat head screwdriver
- Small Phillips head screwdriver
- 7/32" drill bit
- Drill

BATTERIES NEEDED (not included):

 
- Three alkaline "C" batteries

MOUNTING BACK COVER OF CHIME BUTTON

Note: Mounting the button directly on metal, concrete or near metal studs reduces the range.

1. Remove cover from back of chime button by inserting flat head screwdriver into the larger rectangular slot on bottom of chime button and gently twist on tab. Lift chime button away from the back cover.
2. Place chime button back cover where desired and mark screw locations.
3. Place chime button back cover against mounting surface and screw into marked locations using screws enclosed (may require drilling pilot holes on hardwoods).
4. Insert the 12-volt alkaline battery in chime button according to the (+, -) placement guides shown. Use of another battery may cause failure of the chime button and will void manufacturer's warranty and liability.

5. Adjust the black, rectangular jumpers as shown for tune selection.
6. Place top of chime button on back cover and push on bottom of chime button to snap in place.

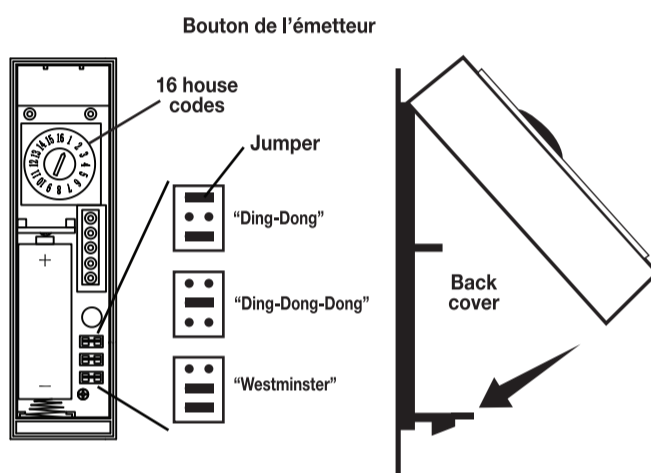

RECEIVER BATTERY INSTALLATION

1. Remove back cover by pushing lever on cover to the side and lift forward. This will release the back cover and expose the battery compartment.
2. Insert 3 "C" alkaline batteries according to the (+, -) placement guides shown.
3. Slide cover in place and push to close.

TEST

Press chime button. Chime receiver should play a tune and LED will flash.

VOLUME AND PITCH CONTROLS

 
Push button(s) on back of chime receiver to desired position(s). There are four different levels of volume and pitch for selection.

MOUNTING DOOR CHIME RECEIVER

Before mounting receiver test desired location for operation. Receiver can be mounted vertically or horizontally.

Note: Mounting the chime directly on metal, concrete or near metal studs reduces the range.

1. Mark screw locations onto wall for position.
2. Drill 7/32" holes into wall for plastic anchors. Place anchors into holes and install screws.
3. Leave screw heads extending about 1/4" from wall.
4. Slide receiver onto screws and lock into slots.

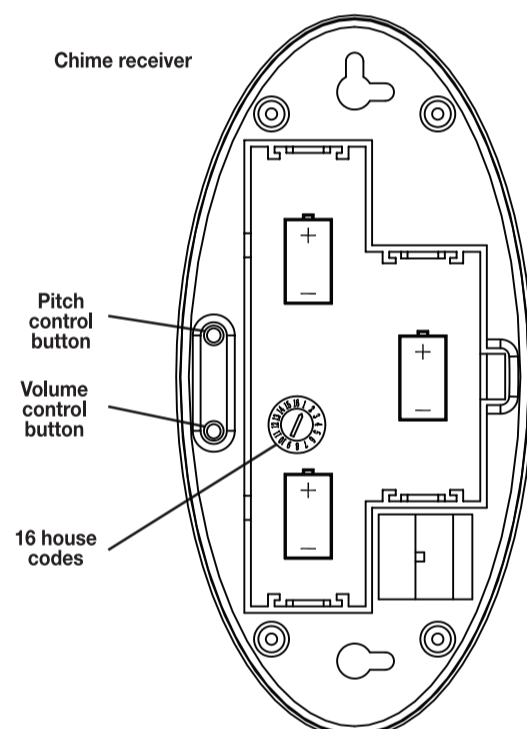

GUÍA DE INSTRUCCIONES

Portable Alert Chime RC3800S

ENCLOSED YOU WILL FIND:

- Chime receiver
- Chime button
- One 12-volt alkaline battery (included)
- Screws
- Wall anchors

TOOLS/SUPPLIES NEEDED:

- Small flat head screwdriver
- Small Phillips head screwdriver
- 7/32" drill bit
- Drill

BATTERIES NEEDED (not included):

 
- Three alkaline "C" batteries

MOUNTING BACK COVER OF CHIME BUTTON

Note: Mounting the button directly on metal, concrete or near metal studs reduces the range.

1. Remove cover from back of chime button by inserting flat head screwdriver into the larger rectangular slot on bottom of chime button and gently twist on tab. Lift chime button away from the back cover.
2. Place chime button back cover where desired and mark screw locations.
3. Place chime button back cover against mounting surface and screw into marked locations using screws enclosed (may require drilling pilot holes on hardwoods).
4. Insert the 12-volt alkaline battery in chime button according to the (+, -) placement guides shown. Use of another battery may cause failure of the chime button and will void manufacturer's warranty and liability.

5. Adjust the black, rectangular jumpers as shown for tune selection.
6. Place top of chime button on back cover and push on bottom of chime button to snap in place.

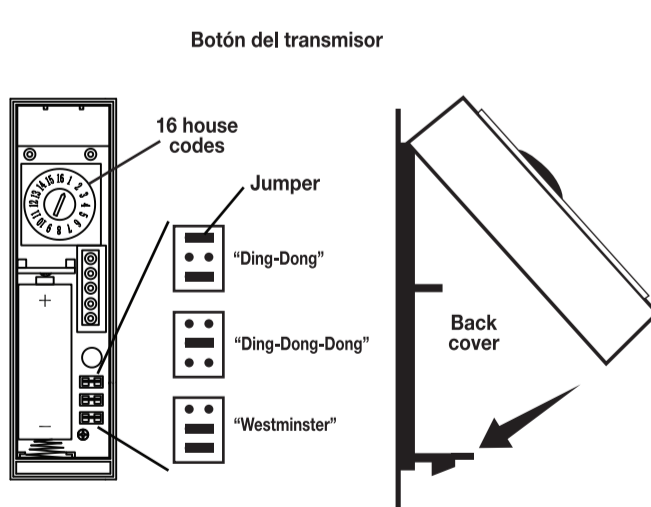

RECEIVER BATTERY INSTALLATION

1. Remove back cover by pushing lever on cover to the side and lift forward. This will release the back cover and expose the battery compartment.
2. Insert 3 "C" alkaline batteries according to the (+, -) placement guides shown.
3. Slide cover in place and push to close.

TEST

Press chime button. Chime receiver should play a tune and LED will flash.

VOLUME AND PITCH CONTROLS

 
Push button(s) on back of chime receiver to desired position(s). There are four different levels of volume and pitch for selection.

MOUNTING DOOR CHIME RECEIVER

Before mounting receiver test desired location for operation. Receiver can be mounted vertically or horizontally.

Note: Mounting the chime directly on metal, concrete or near metal studs reduces the range.

1. Mark screw locations onto wall for position.
2. Drill 7/32" holes into wall for plastic anchors. Place anchors into holes and install screws.
3. Leave screw heads extending about 1/4" from wall.
4. Slide receiver onto screws and lock into slots.

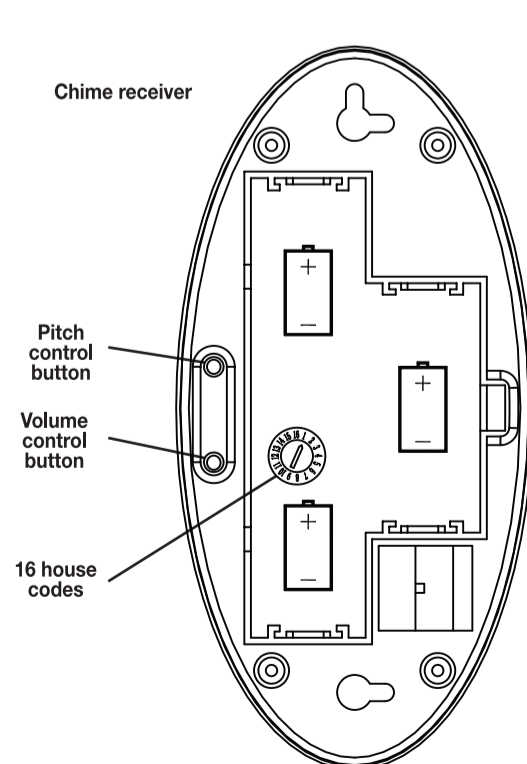

TROUBLESHOOTING TIPS:

PROBLEM: Receiver does not sound when chime button is pressed.

SUGGESTION: Verify that batteries are installed correctly and battery contacts are in the correct position. Try replacing batteries first. Check that receiver and chime button are placed within operating range.

PROBLEM: Receiver sometimes plays without anyone pressing chime button.

SUGGESTION: If another wireless chime system is on the same frequency nearby, it could accidentally trigger your system. If this happens, change privacy code.

PRIVACY CODES AND HOW TO CHANGE THEM

It is NOT necessary to change privacy code unless interference occurs. If you need to change code:

1. Remove back cover from chime receiver.
2. Use a flat head screwdriver to turn the house code dial to a new setting.
3. Replace cover.
4. Remove back cover from chime button.
5. Turn house code dial to the same setting that was selected on the receiver.
6. Replace chime button cover.

Note: It does not matter which setting is selected, but be sure that the same setting on the receiver matches that of the chime button. If the setting on the receiver does not match the setting on the chime button, the system will not work.

Suggestion: Begin by trying one setting on the receiver and the same on the chime button. Test to see if the problem is eliminated. If the system is still not working properly, try another setting. Don't forget that every time a new setting is selected on the receiver, the corresponding setting must be set on the chime button.

LIMITED WARRANTY

The product you have purchased is guaranteed against defects in workmanship and materials for the period stated on the package. All implied warranties of merchantability and fitness for a particular purpose are disclaimed to the extent allowed by law. Any implied warranties that cannot be disclaimed are limited in duration to a term of one year from the date of purchase. Some states do not allow limitations on how long an implied warranty lasts, so this time limitation may not apply to you.

TROUBLESHOOTING TIPS:

PROBLEM: Receiver does not sound when chime button is pressed.

SUGGESTION: Verify that batteries are installed correctly and battery contacts are in the correct position. Try replacing batteries first. Check that receiver and chime button are placed within operating range.

PROBLEM: Receiver sometimes plays without anyone pressing chime button.

SUGGESTION: If another wireless chime system is on the same frequency nearby, it could accidentally trigger your system. If this happens, change privacy code.

PRIVACY CODES AND HOW TO CHANGE THEM

It is NOT necessary to change privacy code unless interference occurs. If you need to change code:

1. Remove back cover from chime receiver.
2. Use a flat head screwdriver to turn the house code dial to a new setting.
3. Replace cover.
4. Remove back cover from chime button.
5. Turn house code dial to the same setting that was selected on the receiver.
6. Replace chime button cover.

Note: It does not matter which setting is selected, but be sure that the same setting on the receiver matches that of the chime button. If the setting on the receiver does not match the setting on the chime button, the system will not work.

Suggestion: Begin by trying one setting on the receiver and the same on the chime button. Test to see if the problem is eliminated. If the system is still not working properly, try another setting. Don't forget that every time a new setting is selected on the receiver, the corresponding setting must be set on the chime button.

GARANTIE LIMITÉE

Le produit que vous avez acheté porte une garantie contre les vices de matière et de fabrication pour la période stipulée sur l'emballage. Toutes les garanties implicites de bonne vente et d'aptitude à produire une tâche particulière sont exclues dans la mesure permise par la loi. Toute garantie implicite qui ne peut être exclue sera limitée à une période d'un an à compter de la date d'achat. Certaines provinces ne permettent pas la limite de durée d'une garantie implicite; cette limite peut donc ne pas s'appliquer dans votre cas.

TROUBLESHOOTING TIPS:

PROBLEM: Receiver does not sound when chime button is pressed.

SUGGESTION: Verify that batteries are installed correctly and battery contacts are in the correct position. Try replacing batteries first. Check that receiver and chime button are placed within operating range.

PROBLEM: Receiver sometimes plays without anyone pressing chime button.

SUGGESTION: If another wireless chime system is on the same frequency nearby, it could accidentally trigger your system. If this happens, change privacy code.

PRIVACY CODES AND HOW TO CHANGE THEM

It is NOT necessary to change privacy code unless interference occurs. If you need to change code:

1. Remove back cover from chime receiver.
2. Use a flat head screwdriver to turn the house code dial to a new setting.
3. Replace cover.
4. Remove back cover from chime button.
5. Turn house code dial to the same setting that was selected on the receiver.
6. Replace chime button cover.

Note: It does not matter which setting is selected, but be sure that the same setting on the receiver matches that of the chime button. If the setting on the receiver does not match the setting on the chime button, the system will not work.

Suggestion: Begin by trying one setting on the receiver and the same on the chime button. Test to see if the problem is eliminated. If the system is still not working properly, try another setting. Don't forget that every time a new setting is selected on the receiver, the corresponding setting must be set on the chime button.

GARANTÍA LIMITADA

El producto que ha adquirido está garantizado contra defectos de mano de obra y materiales durante el período establecido en el empaque. Se desconocen todas las garantías implícitas de comerciabilidad y adecuación para un fin en particular hasta el límite permitido por la ley. Cualesquiera garantías implícitas que no puedan desconocerse están limitadas en su duración al término de un año contado a partir de la fecha de compra. Algunos estados no permiten limitaciones en cuanto a la duración de una garantía implícita, de modo que esta limitación de tiempo puede que no aplique en su caso.

If the product fails due to a manufacturing defect during normal use, return the product and dated sales receipt to the store where purchased for replacement OR send the product and the dated sales receipt to:

**Thomas & Betts/Carlton
Attn: Customer Service
32425 Aurora Road, Suite A
Solon, OH 44139 USA**

Not Covered - Batteries, light bulbs, and other expendable items are not covered by this warranty. Repair service, adjustment and calibration due to misuse, abuse or negligence are not covered by this warranty. Unauthorized service or modification of the product or of any furnished components will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, set-up time, loss of use, postage, unauthorized service, or damage to the warranted product.

All requests for replacement must include a **dated sales receipt** (copies accepted). THE OBLIGATIONS OF THOMAS & BETTS/CARLON UNDER THIS WARRANTY ARE LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT ONLY. THOMAS & BETTS CORPORATION WILL NOT BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR FOR DIRECT DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT. THIS DISCLAIMER OF LIABILITY SHALL CONTINUE TO BE ENFORCEABLE IN THE EVENT THAT ANY REMEDY HEREIN SHALL FAIL OF ITS ESSENTIAL PURPOSE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Si le produit présente un vice de fabrication en cours d'usage normal, retournez-le accompagné du bon de caisse daté au magasin où il a été acheté afin de le faire remplacer OU envoyez le produit accompagné du bon de caisse daté à :

**Thomas & Betts/Carlton
a/s du : Service à la clientèle
32425 Aurora Road, Suite A
Solon, OH 44139 USA**

Ce qui n'est pas couvert - Piles, ampoules et autres articles consommables ne sont pas couverts par la garantie. La réparation, l'ajustement et le calibrage requis suite à une mauvaise utilisation, un usage abusif ou une négligence ne sont pas couverts par la garantie. Le service ou la modification non autorisée du produit ou de tout composant fourni rendra la garantie nulle et sans effet. Cette garantie n'inclut pas le remboursement des coûts pour inconfort, installation, temps de préparation, perte d'utilisation, frais de poste, service non autorisé ou dommage au produit garanti.

Toutes les demandes de remplacement doivent être accompagnées d'un **bon de caisse daté** (copies acceptables). AU TITRE DE CETTE GARANTIE, LES OBLIGATIONS DE THOMAS & BETTS/CARLON SONT LIMITÉES AU PRODUIT SEUL. LA SOCIÉTÉ THOMAS & BETTS NE PEUT ÊTRE TENUE RESPONSABLE DE QUELQUE DOMMAGE INDIRECT, SPÉCIAL OU FORTUIT QUE CE SOIT OU DE DOMMAGES DIRECTS AU-DELÀ DU PRIX D'ACHAT DU PRODUIT. CE DÉNI DE RESPONSABILITÉ RESTERA EN VIGUEUR ADVENANT QU'UN REMÈDE AU TITRE DE LA PRÉSENTE S'AVÈRE NON CONFORME. Certaines provinces ne permettent pas l'exclusion ou la limite des dommages indirects ou fortuits; il se peut donc que ces limites ou exclusions ne s'appliquent pas dans votre cas. Cet appareil est conforme à la partie 15 des règlements de la FCC. Son utilisation se fait sous réserve de deux conditions : (1) cet appareil ne doit pas causer d'interférence nocive et (2) cet appareil doit accepter toute interférence reçue, y compris une interférence qui peut entraîner un fonctionnement indésirable.

Les changements ou les modifications non expressément approuvées par la partie responsable de la conformité peut annuler l'autorité de l'utilisateur d'utiliser l'équipement.

Si el producto presenta fallas debido a un defecto de fabricación durante el uso normal, devuelva el producto y el recibo de ventas fechado a la tienda donde lo compró para cambiarlo O envíe el producto y el recibo de ventas fechado a:

**Thomas & Betts/Carlton
Attn: Customer Service
32425 Aurora Road, Suite A
Solon, OH 44139 USA**

No amparados - Baterías, bombillas y otros artículos fungibles no están amparados por esta garantía. El servicio de reparación, ajuste y calibración debido al uso inadecuado, abuso o negligencia no están amparados por esta garantía. El servicio no autorizado o la modificación del producto o de cualesquiera componentes suministrados anulará totalmente esta garantía. Esta garantía no incluye el reembolso por inconvenientes, instalación, tiempo de preparación, pérdida del uso, franqueo, servicio no autorizado o daños al producto garantizado.

Todas las solicitudes de reemplazo deberán incluir un **recibo de ventas fechado** (se aceptan copias). LAS OBLIGACIONES DE THOMAS & BETTS/CARLON BAJO ESTA GARANTÍA ESTÁN LIMITADAS A LA REPARACIÓN O REEMPLAZO DEL PRODUCTO ÚNICAMENTE. THOMAS & BETTS CORPORATION NO SERÁ RESPONSABLE POR CUALESQUIERA DAÑOS ACCIDENTALES, ESPECIALES O RESULTANTES, NI POR DAÑOS DIRECTOS QUE EXCEDAN EL PRECIO DE COMPRA DEL PRODUCTO. ESTA EXENCIÓN DE RESPONSABILIDAD CONTINUARÁ EN VIGOR EN CASO DE QUE CUALQUIER RECURSO CONTENIDO EN EL PRESENTE DOCUMENTO NO CUMPLA CON SU FINALIDAD ESENCIAL. Algunos estados no permiten la exclusión o limitación de daños accidentales o resultantes, de modo que las limitaciones o exclusiones anteriores puede que no apliquen en su caso.

Este dispositivo cumple con la Parte 15 de las Normas de la FCC. La operación está sujeta a las siguientes dos condiciones: (1) Este dispositivo no puede provocar interferencia nociva, y (2) este dispositivo debe aceptar interferencia recibida, incluyendo interferencia que pueda provocar funcionamiento no deseado.

Los cambios o modificaciones no aprobados expresamente por la parte responsable del cumplimiento puede anular la autoridad del usuario para operar este equipo.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. If you have questions or need further assistance, please call Thomas & Betts at: 1-800-346-2646 Mon. - Fri., 9 a.m. - 4 p.m. EST.

Thomas&Betts

©2012 Thomas & Betts Corporation
Memphis, TN 38125
All Rights Reserved.
www.tnb.com

Made in China
RTA01942 A

NOTE : Cet appareil a été testé et trouvé conforme aux limites pour un appareil numérique de classe B faisant l'objet de la partie 15 des règlements de la FCC. Ces limites se veulent d'offrir une protection raisonnable contre l'interférence nocive en installation résidentielle. Cet appareil génère, utilise et peut irradier une énergie de fréquence radio et, s'il n'est pas installé et utilisé conformément à ces directives, peut causer une interférence nocive aux communications radio. Toutefois, on ne garantit aucunement qu'il n'y aura pas d'interférence dans une installation particulière. Si cet appareil cause une interférence nocive à la réception radio ou télé, ce qui peut être établi en éteignant et rallumant l'appareil, on encourage l'utilisateur de tenter de remédier à la situation en prenant une ou plusieurs des mesures suivantes :

- réorientez ou déplacez l'antenne réceptrice;
- augmentez la distance entre l'appareil et le poste récepteur;
- connectez l'appareil dans une prise de courant ou un circuit différent de celui où le poste récepteur est connecté;
- recherchez l'aide ou le conseil du revendeur ou d'un réparateur d'appareils radio ou de télévision.

Cette garantie vous accorde des droits particuliers et peut vous accorder d'autres droits qui varient d'une province à l'autre. Si vous avez des questions ou besoin d'aide, veuillez téléphoner à Thomas & Betts : 1 800 346 2646, du lundi au vendredi, de 9 h à 16 h, HNE.

Thomas&Betts

©2012 Thomas & Betts Corporation
Memphis, TN 38125
Tous droits réservés.
www.tnb.com

Fabriqué en Chine
RTA01942 A

NOTA: Este equipo ha sido probado y se concluyó que cumple con los límites de la clase B de dispositivos digitales, conforme a la Parte 15 de las normas de la FCC. Estos límites están diseñados para brindar protección razonable contra interferencias nocivas en una instalación residencial. Este equipo genera, usa e irradia energía de frecuencias de radio y, si no se instala o utiliza de acuerdo con las instrucciones, puede provocar interferencia nociva en las comunicaciones de radio. Sin embargo, no hay garantía de que la interferencia no se produzca en una instalación en particular. Si este equipo provoca interferencia nociva a la recepción de radio o televisión, lo que se puede determinar encendiendo y apagando el equipo, se recomienda al usuario intentar corregir la interferencia mediante una o más de las siguientes medidas:

- Reoriente o cambie la ubicación de la antena receptora;
- aumente la separación entre el equipo y el receptor;
- conecte el equipo a un tomacorriente en un circuito diferente que el que utiliza el receptor; o
- consulte con el distribuidor o con un técnico experimentado en TV y radio.

Esta garantía le otorga derechos legales específicos, pero usted también podría gozar de otros derechos que varían de un estado a otro. Si desea formular preguntas o necesita asistencia, sírvase llamar a: Thomas & Betts al: 1-800-346-2646 de lunes a viernes, de 09:00. a 16:00 hs (hora del Este).

Thomas&Betts

©2012 Thomas & Betts Corporation
Memphis, TN 38125
Todos los derechos reservados.
www.tnb.com

Hecho en China
RTA01942 A