

Duty cycle of EUT:

Transmitter on: 85 ms

Transmitter off: 41 ms

Note: The Transmitter shut off automatically after 3 seconds when you press one of the push buttons.