

Operating instructions for WFS-DI Immobilizer

The electronic immobilizer protects the car against theft using an electronic engine locking device, thus the engine cannot be cranked.

- **Activation of immobilizer:** Turn engine off => Turn key in position OFF => Remove key from ignition lock => The immobilizer gets activated.
- **Deactivation of immobilizer:** Put key in ignition lock => Turn ignition on => The immobilizer gets deactivated automatically => Now the engine can be cranked.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for ANY RADIO OR TV Interference caused by unauthorized modifications to this equipment.

Such modifications could void the users authority to operate the equipment.

DELPHI AUTOMOTIVE SYSTEMS DEUTSCHLAND GMBH
BODY & SECURITY ELECTRONICS

Material & Production Center
Wühlpubl 4
D-51766 Engelskirchen

Tel.: +49-2261-971-0
Fax: +49-2262-6033

Customer & Engineering Center
Albert-Einstein-Str. 5
D-51674 Wühl

Tel.: +49-2261-971-0
Fax.: +49-2261-72691

Company location: Wuppertal Reussdorf

Registriergericht AG Wuppertal HRB 2254