



## Operating Instructions

243632

### Get ready to become a real DJ, live in the mix!

So easy to use, simply turn on the power and start mixing away. Play a favorite tape or use one of the jackbeat tracks to create a unique tune. Sing into the microphone while mixing it up with music riffs and scratches. DJ Mixer works great with other One Man Jam products, see our website ([www.mgae.com](http://www.mgae.com)) to view other products. Adult assistance recommended.

 
#### Features:

- Two turntables for scratching, mixing and tempo control
- Choose between Hip Hop and Rock musical styles
- 12 sound effect keypads for backbeats and musical riffs
- Portable with detachable speakers
- Cassette deck with play, forward and eject
- Adjustable built-in microphone
- Adjustable light

## BATTERY INSTALLATION

### BATTERY GUIDELINES

1. Unscrew and lift off the battery cover.
  - For better performance, use alkaline batteries.
  - Don't use old and new batteries together or mix different battery types.
  - Do not use rechargeable batteries.
  - Insert batteries with the correct polarity
  - Exhausted batteries are to be removed from the unit.
  - When not in use, for a long time, remove batteries to prevent possible leakage.
2. Insert 4 C batteries (not included) with the positive (+) and negative (-) ends facing in the proper direction as indicated in the battery compartment.
  - Do not dispose of batteries in fire, batteries may explode or leak.
  - The supply terminals are not to be short circuited.
  - Non-rechargeable batteries are not to be recharged.
3. Replace the cover.
  - Do not dispose of batteries in fire, batteries may explode or leak.
  - The supply terminals are not to be short circuited.
  - Non-rechargeable batteries are not to be recharged.

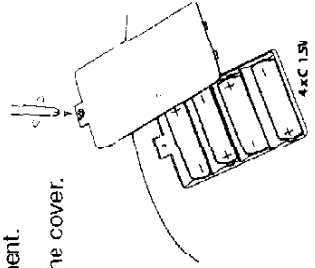

#### LIMITED 90 DAY WARRANTY

MGA Entertainment warrants to the original consumer purchaser this product that the product will be free from defects in material or workmanship for a period of 90 days from the date of original purchase. This warranty does not cover damages resulting from misuse, improper or abnormal usage, negligence, leaking batteries, improper service or other causes not arising from defects in material or workmanship.

During this 90 day warranty period, the product will be either repaired or replaced (at MGA's option) at no charge to the purchaser, when returned to either the retailer with it's original sales receipt (containing date of purchase) or to MGA.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned to MGA must be shipped prepaid and insured for loss or damage to:

MGA Entertainment  
Repair Department  
16730 Schoenborn Street  
North Hills, CA 91343-6122

Any returned product should be carefully packed in packing material sufficient to avoid damage during shipment. Please include a written description of the defect, a copy of the original sales receipt (containing date of purchase) and your printed name, address and telephone number.

Some states do not allow limitations on how long an implied warranty last or the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights and you may also have other rights which vary from state to state. This warranty is only valid within the United States and Canada.

#### Caring for Your DJ Mixer

Your OMI DJ Mixer is made of high quality materials and is designed to give loads of musical fun. To keep it in good condition, please remember the following:

- Do not get wet. Avoid using in areas of high humidity for prolonged periods of time.
- Avoid using in sandy or dusty areas.
- Do not try to separate controls from casing or take them apart.
- Always remember to switch unit off after use to avoid possible battery leakage.
- Adult supervision is necessary when cleaning the unit.
- If the unit sound level decreases or malfunctions, replace the batteries.

#### CAUTION:

- Batteries should be replaced by adult.
- Not suitable for children under 3 years.
- Contains small parts
- This transmitter set has been fully adjusted prior to shipment from the factory. Be sure not to touch the internal components other than replacing the battery.
- This unit is subjected to electronic interference. If you experience problems with this unit, stay away from it or turn off cordless phones, baby monitors, intercoms or any other "Broadcast" devices.

#### OPERATING PERFORMANCE MAY BE AFFECTED BY SURROUNDING STRUCTURES AND EQUIPMENT.

THE USER SHALL NOT CHANGE OR MODIFY THE EQUIPMENT, OTHERWISE IT COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Check us out at  
[www.mgae.com](http://www.mgae.com)

 
Please keep this manual to reference important information.

MGA Entertainment  
All Rights Reserved.  
16730 Schoenborn St.  
North Hills, CA 91343  
800-222-4685  
(CA) 818-894-2525

Printed in China

## GETTING STARTED

1. After you install the batteries, simply plug the speaker wires into the jacks on the back of the unit. Speaker wire is stored inside speaker box underneath (see illustration).
2. Open the DJ Mixer and lay it on a table or other flat surface.
3. If you wish, detach the speakers by gently lifting up on them. They will slide off of the mixer (see illustration).

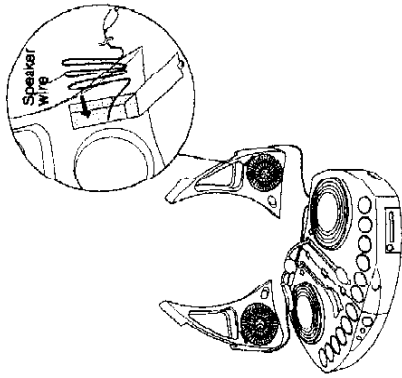


## TO PLAY

1. Turn the **VOLUME** dial clockwise to turn the unit ON and adjust the volume.
2. Select the desired music style (Rock N' Roll or Hip Hop) by pressing a **MUSICAL STYLE** button. Rock N' Roll is the left button, Hip Hop is the right button.
3. Press a **BACKBEAT** button to start the background music or insert your cassette tape.
4. Now you are ready to mix it up.
5. When you have finished, turn OFF the **VOLUME LIGHT** and **MICROPHONE** and reattach the speakers. Fold your DJ Mixer for your next musical adventure.

### Perform AM 1610 feature on your AM DJ Mixer

1. Turn the "AM ON/OFF" button to ON position.
  2. Switch on your radio and tune it to **AM 1610** channel. (Radio is not included.)
  3. Do not bunch up the antenna or put it over a metal object. Suspending the antenna in the air with a string can be helpful. If the antenna does not set up properly, the "ON AIR" light will glow dimly or may not glow at all. Move the antenna around until for best reception and brightness is obtained.
  4. If desired, clip the ground wire to a large piece of metal object.
- Warning: Never connect the antenna or ground wire to an electrical appliance or anything connected to the house wiring.
 
## DJ MIXER

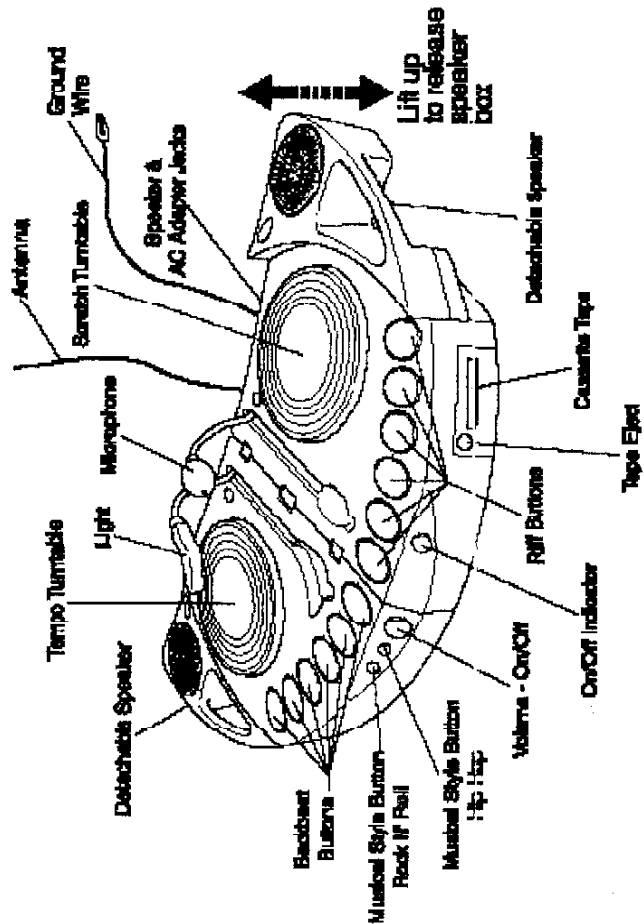

## MIXING IT UP

Have fun entertaining your friends with all these musical options.

Scratches	Rotate the <b>SCRATCH</b> turntable to add scratches.
Tempo	Adjust the tempo by rotating the <b>TEMPO</b> turntable.
Drum Beats	Add an extra drum beat by pressing the center of the <b>TEMPO</b> turntable.
Backbeats	Change by pressing any of the six <b>BACKBEAT</b> buttons.
Riffs	Press any of the six <b>RIFF</b> buttons to add it to your mixing.
Microphone	Switch the <b>MICROPHONE</b> to ON and add some vocals to your mixing. The microphone is adjustable.
Light	Switch the <b>LIGHT</b> to ON and shed some light on your work. The light is adjustable.
Musical Style	Switch between Rock N' Roll and Hip Hop, simply press a <b>MUSICAL STYLE</b> button; left for Rock N' Roll and right for Hip Hop.
Volume	Adjust the volume by rotating the <b>VOLUME</b> dial. This dial also turns the mixer on and off.
Cassette Tape	Insert a cassette with the tape facing to the right to mix over your favorite song. The tape will automatically begin playing. It will rewind when it reaches the end of the tape. To eject, press the <b>EJECT</b> button to the left of the cassette tape.