

247357

Say What?

Operating Instructions

INSTALLATION OF BATTERIES

Receiver

- Unscrew the battery cover.
- Insert 4 AAA (1.5V) alkaline batteries with the positive (+) and negative (-) ends facing in the proper direction as indicated.
- Replace the cover.

Transmitter

- Unscrew the battery cover.
- Insert 3 button cell (AG13 / LR44 1.5V) batteries with the positive (+) and negative (-) ends facing in the proper direction as indicated.
- Replace the cover.

SHOW TX and RX and BATTERY COMPARTMENT for both units.

SAFETY BATTERY USAGE

- Do not use rechargeable batteries;
- Non-rechargeable batteries are not to be recharged;
- Different types of batteries or new and used batteries are not to be mixed;
- Only batteries of same or equivalent type as recommended are to be used;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are not to be short-circuited;
- The supply terminals are not to be short-circuited.
- Do not dispose of batteries in fire; batteries may explode or leak.
- Batteries should be replaced by an adult.

CAUTION:

- Not suitable for children under 3 years.
- May contain small parts.
- Do not dispose of batteries in fire; batteries may explode or leak.

CARING FOR YOUR DEVICE

- Your device has been fully adjusted prior to shipment from the factory. Be sure not to touch the internal components other than replacing batteries.
- After use, always turn the power to the 'OFF' position.

MGA Entertainment (HK) Ltd.

JOB #: 350H1

FCCID : LU9247357

EXHIBIT : 3A