

- Keep your set in a dry and clean place.
- In most cases, unit malfunctions occur because of weak batteries.

BUTTON DESCRIPTION

RX

1. ON/OFF
2. RESET
3. RECORD
4. PLAY 1
5. PLAY 2
6. MICROPHONE

TX

1. PLAY 1
2. PLAY 2

ILLUSTRATION TO SHOW THE WHOLE UNIT/ BUTTONS OF THE RECEIVER AND TRANSMITTER

QUICK START

Receiver

Record up to 2 crazy sounds or messages.

- Press ON/OFF to turn on the Receiver (a “beep” will be heard and the LED light will turn on).
- Press and hold RECORD (a “beep” will be heard) to record the 1st 5-second message.
- Press and hold RECORD (a “beep” sound will be heard) again to record the 2nd 5-second message.
- Press PLAY 1 to play back the 1st recorded message (the LED light will turn off).
- Press PLAY 2 to play back the 2nd recorded message (the LED light will turn off).
- Press RESET (3 “beeps” will be heard) to erase all previous recorded messages. Note: You can, also, erase previous messages by simply repeating the above steps and recording new messages.
- Press ON/OFF to turn off the Receiver (2 beeps will be heard and the LED will turn off).

MGA Entertainment (HK) Ltd.
JOB #: 350H1
FCCID : LU9247357
EXHIBIT : 3B