

(HK—Can we add an illustration regarding the hanger and suction cups on the receiver and necklace hoop on the transmitter?)

Suction Cups and a flexible Hanging Loop are provided on the receiver enabling you to place and hide the receiver anywhere! (see ILLUSTRATION)

To Use the Hanging Loop-Just pull back on the "loop" and sculpt in the desired shape for hanging anywhere; simply, pull back and return to base of unit when not in use.

To Use the Suction Cups- Place the receiver against a hard, slick surface (like a mirror, refrigerator, door, etc.) so that the 3 suction cups (on the battery compartment door) are in contact with the surface, and apply pressure to secure the receiver anywhere.

Transmitter

Hide the receiver out of view and fool family and friends by playing back the sounds and/or messages via the sneaky remote transmitter.

- Press PLAY 1 to play the 1st recorded message.
- Press PLAY 2 to play the 2nd recorded message.

A Necklace Hoop on the top of the receiver (see ILLUSTRATION) has been provided enabling you to secretly wear the remote transmitter around your neck for use anywhere! (Necklace not included)

HELPFUL HINT

When the receiver fails to respond to the commands of the transmitter, it may be due to interference caused by other radio signals. Try moving to a different location, outside the range of the interference, to resume play. If the problem persists, it is time to change the batteries.

Noted: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT, SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

MGA Entertainment (HK) Ltd.
JOB #: 350H1
FCCID : LU9247357
EXHIBIT : 3C